

Renewal Parts Catalog

313NP Network Protector



ELECTRONIC TECHNOLOGY INCORPORATED
511 LYONS AVENUE, IRVINGTON, NJ 07111
PHONE 973-371-5160 FAX 973-371-1929
E-MAIL sales@eti-nj.com
www.eti-nj.com

RICHARDS MFG. CO. SALES INC.
517 LYONS AVENUE, IRVINGTON, NJ 07111
PHONE 973-371-1771 FAX 973-371-4304
E-MAIL sales@richards-mfg.net
www.richards-mfg.com




Renewal Parts Catalog

313NP Network Protector

CAT 7383-003
January 1, 2010



 No	ETI Part No.	Description	Cross Ref No.
1	313-5001-00	Backboard, 800-1875Amps	1572032
2	313-5003-00	Backboard, 2500-3500Amps	1514625
3	313-5018-00	Phase Barrier Assembly, 800-1875Amps	1280056G01/02
4	313-5011-00	Phase Barrier Assembly, 2500-3000Amps	1630063
5	313-5008-00	Phase Barrier Assembly, 3500Amps	06B9973H63
6	313-5007-00	Cross Bar Barrier Plate Assembly, 800-1875Amps	
7	313-5031-10	Cross Bar Barrier Plate Assembly, 2500-3000Amps	
8	313-5018-06	Barrier Separator, 800-1875Amps	
	313-5018-17	Barrier Separator, 2000-2250Amps	
9	313-5011-04	Barrier Separator, 2000-3500Amps	
10	313-5022-00	Rear Barrier Plate, 800-1875Amps	
11	313-5011-10	Rear Barrier Plate, 2500-3000Amps	05B92302K14
12	313-5008-06	Rear Barrier Plate, 3500Amps	06B9973H03

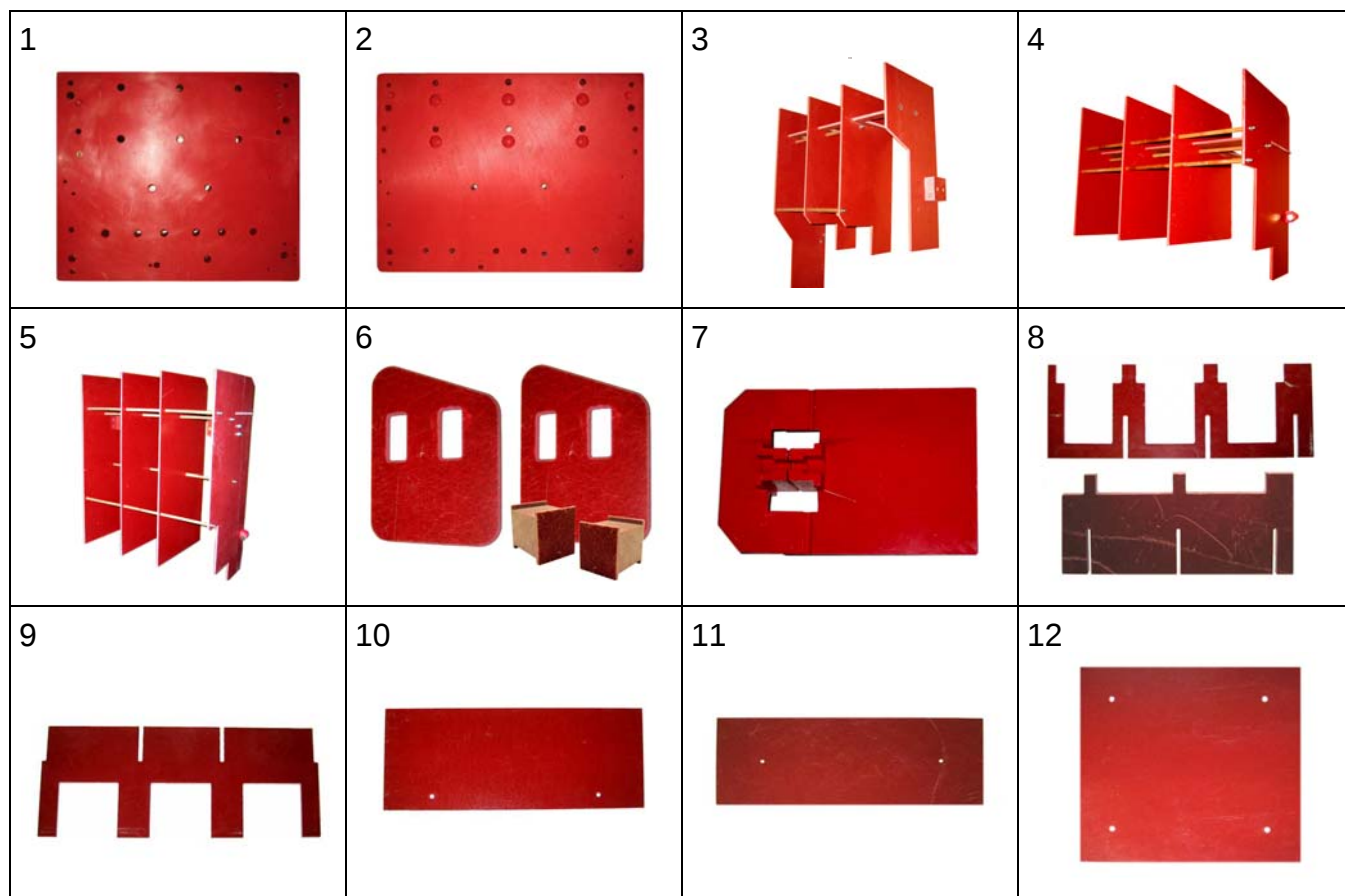



Renewal Parts Catalog

313NP Network Protector

CAT 7383-003
January 1, 2010



No	ETI Part No.	Description	Cross Ref No.
1	313-3040-00	Terminal Block Assembly (5 Point)	805430
2	313-3039-00	Terminal Block Assembly (8 Point)	805431
3	313-0021-10	Bracket Assembly Right Side, 800-1875Amps	
	313-0021-20	Bracket Assembly Left Side, 800-1875Amps	
4	313-0016-10	Bracket Assembly Right Side, 2500-3500Amps	
	313-0016-20	Bracket Assembly Left Side, 2500-3500Amps	
5	313-0016-27	Bracket Assembly Mounting Wheel Kit	
6	313-0021-50	Stop Pin and Nut Assembly, 800-1875Amps	998070
7	313-0016-50	Stop Pin and Nut Assembly, 2500-3500Amps	1630076
8	313-0061-00	Air Bumper Assembly	122D06060
9	313-0021-01	Ground Block	501A046H0
	313-0021-02	Bolt, Reduced Body Diameter (2 3/4")	
10	313-0022-00	Fuse Swivel Nuts	1087024
11	313-3052-01	Insulated Cross Bar, 800-1875Amps	204B02660
12	313-3050-01	Insulated Cross Bar, 2500-3500Amps	203B43660


1 	2 	3 	4
5 	6 	7 	8
9 	10 	11 	12



Renewal Parts Catalog

313NP Network Protector

 CAT 7383-003
January 1, 2010

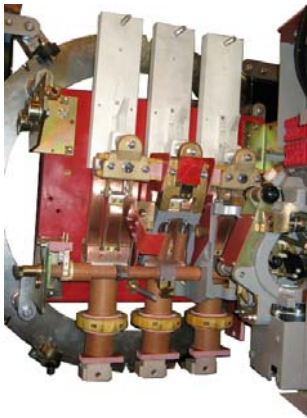

No	ETI Part No.	Description	Cross Ref No.
1	313-0026-10	Stationary Bus, Center, 800-1875Amps	310C352G01
2	313-0026-20	Stationary Bus, Left and Right, 800-1875Amps	310C352G02
3	313-0026-04	Stationary Arcing Contact Assembly, 800-1875Amps	1529542
4	313-0026-05	3" Threaded Pin	
5	313-0027-30	Movable Bus - Center, 800-1875Amps	310C353G02
6	313-0027-20	Movable Bus - Left and Right, 800-1875Amps	310C353G01
7	313-0027-13	Movable Arcing Contact Shunt, 800-1875Amps	1404544
8	313-0027-11	Inner Clamp, Cross Bar, 800-1875Amps	
9	313-0027-12	Outer Clamp, Cross Bar, 800-1875Amps	
10	313-0027-16	Outer Clamp, Cross Bar, 800-1875Amps	1292080
11	313-0027-14	Movable Arcing Contact, 800-1875Amps	1572031
12	313-3028-00	Spring Kit, 800-1875Amps	

1 	2 	3 	4 
5 	6 	7 	8 
9 	10 	11 	12 



Renewal Parts Catalog

313NP Network Protector

CAT 7383-003
January 1, 2010



No.	ETI Part No.	Description	Cross Ref No.
1	313-0030-01	Stationary Bus Bar, 2500-3000Amps	310C358G02
2	313-0030-02	Stationary Bus Bar, 3500Amps	310C358G01
3	313-0030-09	Bus Stud Block	
4	313-0030-20	Middle Contact Assembly with Arcing Contact	
5	313-0030-06	Stationary Arcing Contact, 2500-3500Amps	
6	313-0030-07	Arcing Contact Shunt, 2500A-3500Amps	
7	313-0029-08	Upper Blade Support, 2000A-3500Amps	
8	313-0029-19	Blade Support Base, 2500A-3500Amps	
9	313-0029-02	Inner Left Contact Blade, 2500-3500Amps	
10	313-0029-03	Inner Right Contact Blade, 2500-3500Amps	
11	313-0029-04	Outer Left Contact Blade, 2500-3500Amps	
12	313-0029-05	Outer Right Contact Blade, 2500-3500Amps	

1 	2 	3 	4 
5 	6 	7 	8 
9 	10 	11 	12 



Renewal Parts Catalog

313NP Network Protector

CAT 7383-003
January 1, 2010



No	ETI Part No.	Description	Cross Ref No.
1	313-0029-00	Moving Bus Bar Assembly, 2500-3500Amps	436D166G01
2	313-3030-00	Movable Arcing Contact Assembly, 2000-3500Amps	1514623
3	313-0029-16	Slotted Belleville Disk Spring (Small ID)	
4	313-0029-17	Slotted Belleville Disk Spring (Large ID)	
5	313-0029-15	Belleville Disk Spring	
6		Contact Blade Hardware	
7	313-3029-00	Spring Kit, 2250-3500Amps	
8	313-5005-00	Arc Chute Assembly	17B9967G01
9	313-0028-00	Permit Access Flag Assembly	501B792G01
10	313-0029-10	Center Clamp, 2500-3500Amps	1400997

1		2		3		4	
5		6		7		8	
9		10					




Renewal Parts Catalog

313NP Network Protector

CAT 7383-003
January 1, 2010



No	ETI Part No.	Description	Cross Ref No.
1	313-0053-10	Molded Current Transformer, 2500:5	
2	313-0054-10	Molded Current Transformer, 3000:5	592C557G01
3	313-0056-00	Current Transformer, 1200/1600:5	2713C37G01
4	313-0058-10	Molded Current Transformer 1200:5	1019562
5	313-0059-10	Molded Current Transformer 1600:5	592C554G01
6	313-0062-10	Molded Current Transformer 1600/1200/800:5	745C148G01
7	313-0067-10	Molded Current Transformer 2500/3000:5	
8	313-5032-01	Current Transformer Spacer, 800-1875Amps	334916
	313-5006-00	Current Transformer Spacer, 2500-3500Amps	498A555H01
9	313-3002-00	Current Transformer Retainer Block, 800-1875Amps	1037971
	313-3003-00	Current Transformer Retainer Block, 2500-3500Amps	1630050
10	313-0057-00	Control Transformer (Auto Type)	3338A91401
11	313-0051-10	Molded Control Transformer, 2 Winding, 277Volt	7526A13G01
12	313-0052-10	Molded Potential Transformer, 277Volt	7526A14G01

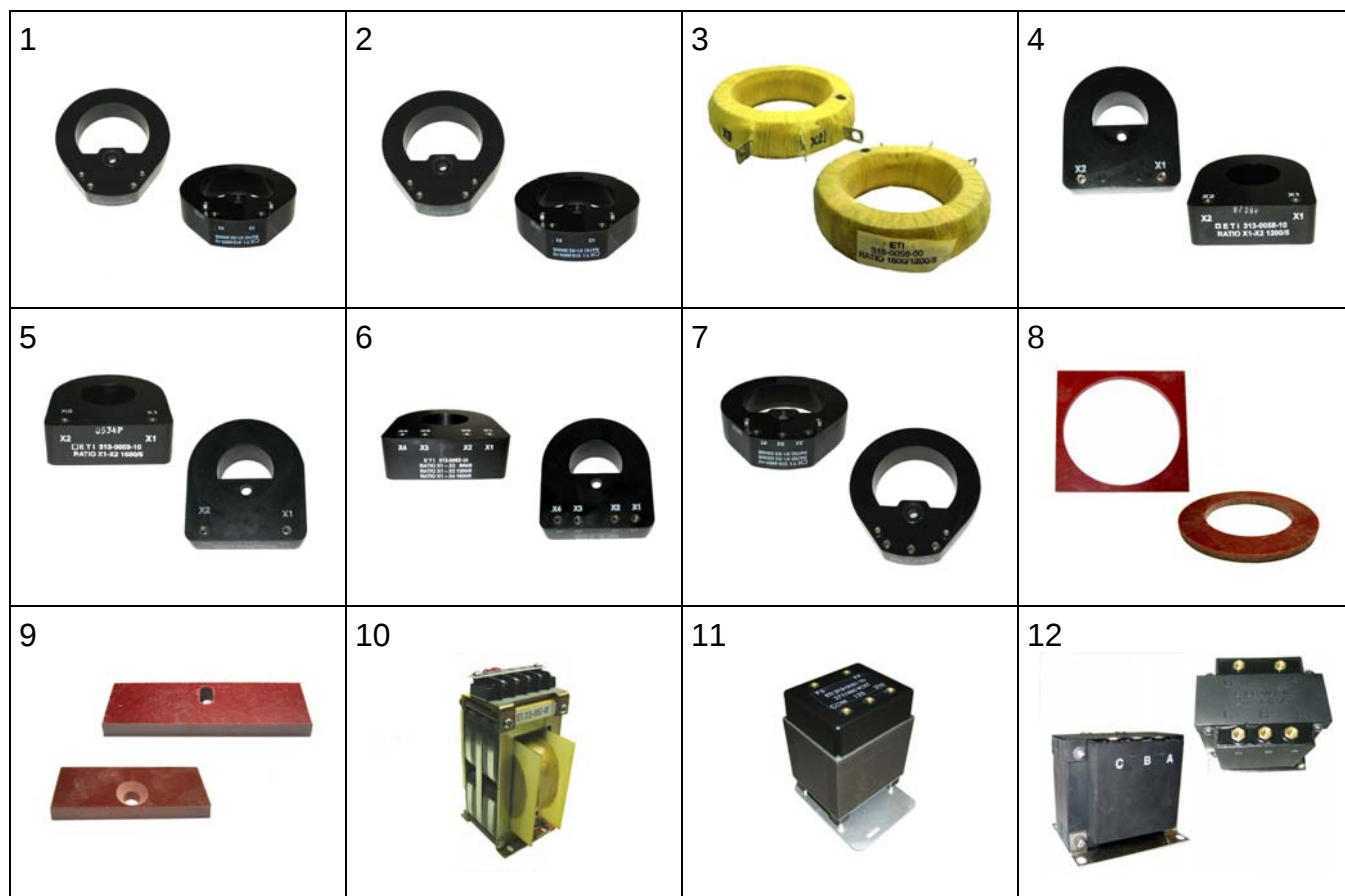 



Renewal Parts Catalog

313NP Network Protector

CAT 7383-003
January 1, 2010



No	ETI Part No.	Description	Cross Ref No.
1	313-0003-10	Front Door Assembly	
2	313-0014-50	Unwired Front Panel	438D74860
3	313-0015-00	Semaphore Assembly	782A747H01
4	313-3017-00	Operation Counter	592C040H03
	313-3013-00	Operation Counter Spring	503B73H01
5	313-0009-50	Auxiliary Switch, 8Pole, 125/216Volt	310C626G01
6	313-0009-60	Auxiliary Switch, 12Pole, 277/460Volt	310C626G02
7	313-0007-00	Motor Relay Assembly	503B286G03
8	313-0020-03	Relay Terminal Block, 9 Point	310C356G03
9	313-0020-04	Relay Terminal Block, 6 Point	310C356G01
10	313-0102-00	3 Ohm Double Resistor, Adjustable and Fixed	664A956G01
11	313-0103-00	3 Ohm Single Resistor, Fixed	664A956G02
12	313-0103-50	3 Ohm Single Resistor, Adjustable	

1 	2 	3 	4 
5 	6 	7 	8 
9 	10 	11 	12 




Renewal Parts Catalog

313NP Network Protector

CAT 7383-003
January 1, 2010



No	ETI Part	Description	Cross Ref No.
1	313-5010-00	Resistors Mounting Panels Only	3471A47H01/02
2	313-0101-00	Individual Resistor, 1900/1200 Ohm	499A067H04
3	313-0050-00	Phantom Load Assembly	301C437G02
4	313-3038-10	BN Jumper Plate Assembly (New Style)	
5	313-0023-00	Relay Swivel Nut	5765A44G01
6	313-0025-00	Terminal Block with Cover	
7	313-1008-00	2Wire Motor	592C071G02
8	313-1007-00	3Wire Motor, (Beau Plug)	
9	313-1007-50	3Wire Motor, (Polarized Circular Amp Connector)	592C071G03
10	313-1007-70	3Wire Motor, (Brown-Orange Amp Connector)	
11	313-1007-80	3Wire Motor, (Individual Connector) Leads	592C071G01

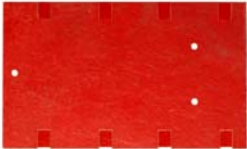 1 	2 	3 	4 
5 	6 	7 	8 
9 	10 	11 	




Renewal Parts Catalog

313NP Network Protector

CAT 7383-003
January 1, 2010




No.	ETI Part No.	Description	Cross Ref No.
1	313-0010-00	Operating Mechanism Assembly	546F561G01
2	313-0010-69	Gear Box Cover	
	313-0010-31	Gear Box Gasket	
3	313-0010-33	Worm Gear	1247398
4	313-0010-50	Worm Shaft Assembly	33C0682G02
5	313-0010-77	Toggle Assembly	436D164G02
6	313-0010-78	Main Latch Assembly	310C354G01
7	313-0010-79	Bell Crank and Link Assembly	501A011G01
8	313-3012-00	Toggle Reset Spring	998414
9	313-0001-40	Shunt Trip Assembly with Molded Coil	1114739
10	313-0001-19	Shunt Trip Molded Coil	918738
11	313-0006-00	Motor Cut Off Switch	310C629G01
12	313-0010-07	Operating Mechanism Stop Bumper	555660
	313-0010-73	Woodruff Key	

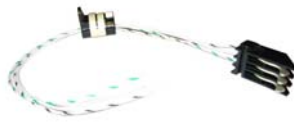 1 	2 	3 	4 
5 	6 	7 	8 
9 	10 	11 	12 

CAT 7383-003
January 1, 2010



No	ETI Part No.	Description	Cross Ref No.
1	313-0008-00	Movable Disconnect, 2 Point	12B6002G01
2	313-0008-10	Movable Disconnect, 2 Point, HV	
3	313-0008-20	Movable Disconnect, 4 Point	
4	313-0008-30	Movable Disconnect, 3 Point	
5	313-0008-35	Movable Disconnect, 3 Point	
6	313-0008-40	Movable Disconnect, 5 Point	
7	313-0008-60	Movable Disconnect, 4 Point, HV, Left Side	
8	313-0008-70	Movable Disconnect, 4 Point, HV, Right Side	
9	313-0008-80	Movable Disconnect, 3 Point, HV, Left Side	
10	313-5034-30	Stationary Disconnect, 3 Point	
11	313-5034-40	Stationary Disconnect, 4 Point	
12	313-5034-50	Stationary Disconnect, 5 Point	

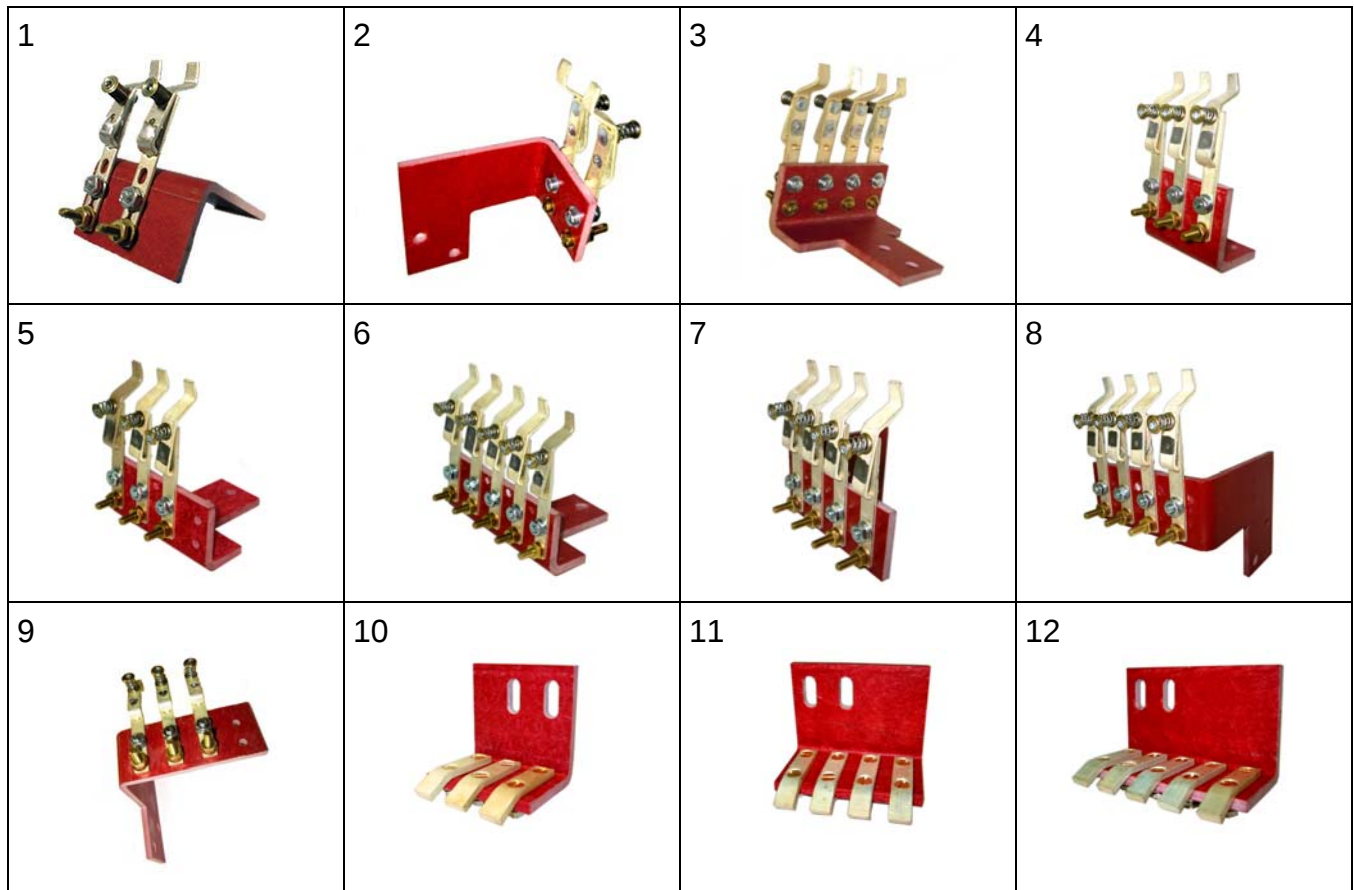 



Renewal Parts Catalog

313NP Network Protector

CAT 7383-003
January 1, 2010



No.	ETI Part No.	Description	Cross Ref No.
1	215-0001-00	Network Protector Work Stand, Small	
2	215-0001-06	Work Stand Adapter, 800-1875Amps	
3	215-0001-07	Work Stand Adapter, Upper L/R Side, 800-1875Amps	
4	215-0001-03	Work Stand Adapter, 2500-3500Amps	
5	215-0001-22	Work Stand Adapter, Spacer	
6		Work Stand Adapter Hardware	

1		2		3		4	
5		6					