



Medium & Light  
TRUCK TIRE  
**DATA  
BOOK**

FEBRUARY 2011



Precisely The Right Tire.





**Medium and Light Truck Tire Data Book**  
**Table of Contents**

Medium Truck Tire Size and Availability Charts ..... 2

Recommended Medium Truck Tire Application ..... 4

Recommended Usage of Premium Rib Patterns..... 4

Medium Truck Tires..... 7

Medium Truck Tire – Discontinued Products ..... 41

Commercial Light Truck Tires..... 45

Light Truck Tire Size and Availability Charts ..... 46

Commercial Light Truck Tire – Discontinued Products ..... 54

General Technical Information ..... 57

Load and Inflation Tables ..... 91

Technical Bulletins ..... 105

Truck and Bus Tire Comparison Guide..... 127

# Medium Truck Tire Size and Availability Chart

Load Range and Tread Depths in 32nds Indicate Availability

PATTERN	R287A	R227F	R280	R260F	R250F	R250 ED	M720	M726 EL	M726	GREATEC® M825	M725	M711	M729F	M895	M724F	R197	R195F
SMARTWAY <sup>SM</sup> VERIFIED & CARB-COMPLIANT	✓		✓				✓									✓	✓
PAGE	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
REPLACES																	
GOODYEAR	G399, G395	None	G399, G395	G169, G661, G662	G169, G149, G661, G662	G169, G149, G661, G662	G362, G372, G305	G362, G372	G622, G164	None	G182, G338, G622	G182, G338, G622, G124	G622, G647	G622, G647	G622, G647, G633	G316	G316
MICHELIN	XZA3	XZA, XZE2+	XZA3, XZA-1+	XZE2	XZE, XZE2+, XZE2, XZE*	XZE, XZE2+, XZE2, XZE*	XDA3, XDA ENERGY, XDA5	XDA3, XDA5, XDN2	XD2	X One XDA ENERGY, X One XDN2	XDN2, XDE M/S, XD4	XDE M/S, XDN2, XD4	XDE2+, XDS2	XZE, XDS2, XDE2+	XZE, XDS2, XDE2+	XT-1, XTA ENERGY	XT-1, XTA ENERGY
SIZE																	
11.00R24																	
12.00R24																	
9R17.5																	
8R19.5															F-20		
9R22.5					F-17			F-24									
10R22.5					F/G-18			G-26									
11R22.5	G-16		G/H-18	G/H-22	G-19	H-19	G-26	G-32			G/H-30	G/H-26					G-11
12R22.5					H-20							H-28					
11R24.5	G-16		G/H-18	G/H-22	G-19	H-19	G-26	G/H-32			G-30	G-26					G-11
12R24.5																	
215/75R17.5					G-16								F-22				
245/70R17.5																	
225/70R19.5					F/G-14								F/G-19	F-17	F-20		
245/70R19.5					F/G/H-19								H-19	G-17	G-21		
265/70R19.5					G-16								G-19				
285/70R19.5		H-17											H-20				
305/70R19.5		J-18															
445/65R19.5																	
245/75R22.5					G-18												
255/70R22.5						H-18			H-26								H-11
265/75R22.5					G-18			G-26									
275/70R22.5						J-19											
295/75R22.5	G/H-16		G/H-18	G-22	G-19		G-26	G-32			G-30					G-11	G-11
295/80R22.5					H-19												
315/80R22.5																	
385/65R22.5																	
425/65R22.5																	
445/50R22.5										L-29							
445/65R22.5																	
285/75R24.5	G-16		G/H-18	G-22	G-19		G-26	G-32			G-30						G-11



## Medium Truck Tire Size and Availability Chart

Load Range and Tread Depths in 32nds Indicate Availability

PATTERN	GREATEC® R125	R196	R184	R294	R187F	R180	M860	M850	M843	M840	M857/WB	L320	L317	M775	M844F	L315
<b>SMARTWAY™-VERIFIED &amp; CARB-COMPLIANT</b>																
<b>PAGE</b>	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
<b>REPLACES</b>																
<b>GOODYEAR</b>	NONE	G316, G661	G114	G291	G647	G114	G287, G289	G287, G288	G287, G288	G288	G286	G177, G282	G177	G177, G282	G178, G286, G296	G178, G286, G296
<b>MICHELIN</b>	X One XTA, X One XTE	XTE	XTA, XTE2, XTA2 ENERGY	XZA1, XZA2 ENERGY	XZA	None	XZUS, XZY3	XZY3	XZY3, XZUS	XZY, XTY2	None	XDY3, XDY-2, XDY-EX, XDL	XDL	XDY-EX, XDY3, XDY-2, XFE	XZY3, XZL, XZUS	XZY3, XZL
<b>SIZE</b>																
11.00R24											H-20					
12.00R24										J-23		J-31	J-39†			
9R17.5						G-14										
8R19.5					F-16											
9R22.5																
10R22.5																
11R22.5		G-16						H-24	G/H-26			G/H-31		H-33		
12R22.5									H-26			H-31		H-34		
11R24.5		G-16						H-24	G/H-26			G/H-31		H-33		
12R24.5									H-27							
215/75R17.5			H-15													
245/70R17.5			J-16													
225/70R19.5																
245/70R19.5																
265/70R19.5																
285/70R19.5																
305/70R19.5																
445/65R19.5											J-19					
245/75R22.5																
255/70R22.5																
265/75R22.5																
275/70R22.5										J-22						
295/75R22.5		G-16														
295/80R22.5																
315/80R22.5				J-19			L-24		L-26							
385/65R22.5															J-23	
425/65R22.5															L-23	
445/50R22.5	L-14															
445/65R22.5															L-24	L-30
285/75R24.5		G-16														


† Not for highway use.

## Recommended Medium Truck Tire Application


Wear	Typical Application	Steer	Drive	Trailer
Slower   Faster	Long Haul	R287A, R280	M720, M726 EL, M726, M725, M729F, M825	R197, R195F, R196, R125
	Regional Haul	R287A, R280, R260F, R250F, R250 ED	M720, M726 EL, M726, M725, M711, M729F, M825	R197, R195F, R196, R125
	Local/Pickup & Delivery Service	R260F, R250F, R250 ED, R187F, M895	M726 EL, M726, M725, M711, M729F, M895	R196, R250F, R250 ED, R195F, R125
	On/Off-Highway	R250 ED, M843, M844F, M840, M850, M857, M860	M775, M843, M844F, M860, M840, M850, M857, L317, L320, L315	M843, M844F, M840, M850
	Special Service	M860, R294, R187F, R180, R250F, R250 ED	M860, R294, R187F, R180, R250F, R250 ED	R294, R184, R180, R250F, R250 ED, R196

Note: Steer and trailer tires may be used in any wheel position unless otherwise specified.

## Recommended Usage of Premium Rib Patterns

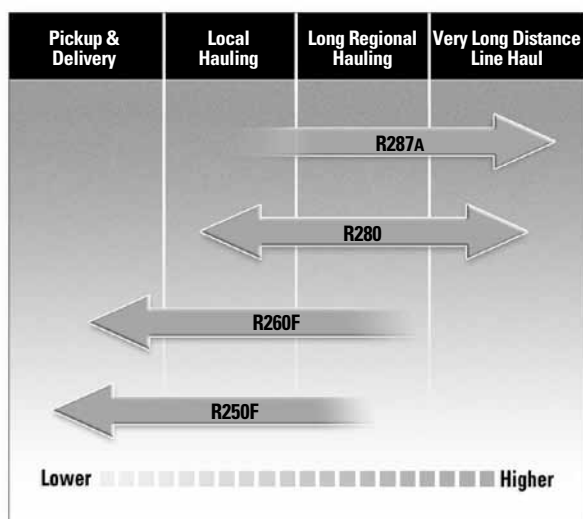

STEER TIRE REMOVAL MILES

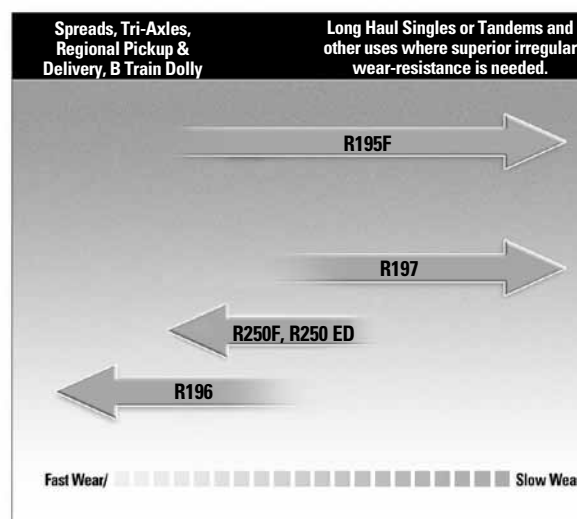

RATE OF WEAR

[illegible]

This image shows a single page of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



## Medium Truck Tires

### Table of Contents

R287A All-Position Radial .....	8
R227F All-Position Radial.....	9
R280 All-Position Radial.....	10
R260F All-Position Radial.....	11
R250F All-Position Radial.....	12
R250 ED All-Position Radial.....	13
M720 Drive Radial .....	14
M726 EL Drive Radial.....	15
M726 Drive Radial .....	16
Greatec® M825 Wide Base Drive Radial .....	17
M725 Drive Radial .....	18
M711 Drive Radial .....	19
M729F Drive Radial .....	20
M895 Metro All-Position Radial .....	21
M724F Metro All-Position Radial .....	22
R197 All-Position Radial.....	23
R195F All-Position Radial.....	24
Greatec® R125 Wide Base Trailer Radial.....	25
R196 All-Position High-Scrub Radial .....	26
R184 Trailer Radial.....	27
R294 All-Position Radial.....	28
R187F All-Position Radial.....	29
R180 All-Position Radial.....	30
M860 On/Off-Highway All-Position Radial.....	31
M850 On/Off-Highway All-Position Radial.....	32
M843 On/Off-Highway All-Position Radial.....	33
M840 On/Off-Highway All-Position Radial.....	34
M857 On/Off-Highway All-Position Radial / M857 WB .....	35
L320 On/Off-Highway Drive Radial.....	36
L317 On/Off-Highway Drive Radial.....	37
M775 On/Off-Highway Drive Radial .....	38
M844F On/Off-Highway Wide Base All-Position Radial .....	39
L315 On/Off-Highway Wide Base Drive Radial .....	40
Medium Truck Tire – Discontinued Products .....	41





R227F  
All-Position Radial

- Unidirectional pattern and high-performance tread compound for long wear and reliable wet traction.
- Sidewall protectors for extra protection from curb damage.
- Defense Groove™ and Equalizer Rib™ features combat the initiation and spread of irregular wear.
- Stress relief sipes fight the initiation and spread of irregular wear on the main ribs by absorbing rib edge stresses within the footprint.

Recommended Application















An all-position radial tire designed for steering applications in:

- Long Haul Service
- Regional Haul Service

Replaces:

Goodyear: None  
Michelin: XZA, XZE2+



TECHNICAL DATA															
															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
R227F															
285/70R19.5	H	158-135	93	8.25	35.3	10.6	16.3	11.6	588	17	2900@860	6395@125	2725@860	6005@125	75
305/70R19.5	J	158-948	120	9.00	36.3	11.9	16.7	13.0	572	18	3150@860	6945@125	2900@860	6395@125	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins

## R280 All-Position Radial

- Equalizer Rib™ and Defense Groove™ designs combat initiation and spread of irregular wear on both main ribs and shoulders.
- Stress relief siping along main grooves fights river or rib erosion wear.
- Stone rejector platforms improve retreadability by preventing the retention of stones that can damage the casing.

## Recommended Application

An all-position radial tire designed for steering applications in:














- Long Haul Service
- Regional Haul Service

**Replaces:**

Goodyear: G399, G395  
Michelin: XZA3, XZA-1+



## TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
R280															
11R22.5	G	183-819	118	8.25	41.2	10.8	19.2	11.9	504	18	2800@720	6175@105	2650@720	5840@105	75
11R22.5	H	185-281	118	8.25	41.2	10.8	19.2	11.9	504	18	3000@830	6610@120	2725@830	6005@120	75
11R24.5	G	183-802	127	8.25	43.2	10.8	20.2	11.9	481	18	3000@720	6610@105	2725@720	6005@105	75
11R24.5	H	185-298	126	8.25	43.2	10.8	20.2	11.9	481	18	3250@830	7160@120	3000@830	6610@120	75
295/75R22.5	G	180-861	111	8.25	40.3	11.0	18.8	12.1	516	18	2800@760	6175@110	2575@760	5675@110	75
295/75R22.5	H	185-621	112	8.25	40.3	11.0	18.8	12.1	516	18	3250@830	7160@120	3000@830	6610@120	75
285/75R24.5	G	180-844	118	8.25	41.5	10.8	19.5	11.9	501	18	2800@760	6175@110	2575@760	5675@110	75
285/75R24.5	H	224-762	118	8.25	41.5	10.8	19.5	11.9	501	18	3075@830	6780@120	2800@830	6175@120	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## Medium Truck

- Five ribs with four wide, straight grooves for precise handling and excellent traction.
- Tough tread cap compound and solid shoulder ribs to resist maneuvering scrub.
- Protector ribs on both sidewalls to fight damage from curbing, cuts and abrasions.

## Light Truck















- Pickup & Delivery Service
- Regional Haul Service

## General Technical

Goodyear: G169, G149, G661, G662, G647, G670, G159  
Michelin: XZE, XZE2, XZE2+, XZE\*, XRV



## Load/Inflation

																
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)	
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI		
R250F																
9R22.5	F	292-885	86	6.75	38.3	8.9	18.1	9.7	542	17	2060@720	4540@105	1950@720	4300@105	75	
10R22.5	F	292-680	103	7.50	40.0	9.8	18.7	10.7	519	18	2360@690	5205@100	2240@690	4940@100	75	
10R22.5	G	292-729	104	7.50	40.0	9.8	18.7	10.7	519	18	2575@790	5675@115	2430@790	5355@115	75	
11R22.5	G	290-661	117	8.25	41.3	10.8	19.3	11.8	503	19	2800@720	6175@105	2650@720	5840@105	75	
12R22.5	H	292-850	136	9.00	42.7	11.6	19.8	12.6	487	20	3350@830	7390@120	3075@830	6780@120	75	
11R24.5	G	290-696	126	8.25	43.3	10.8	20.3	11.8	480	19	3000@720	6610@105	2725@720	6005@105	75	
215/75R17.5	G	199-867	62	6.00	30.5	8.5	14.3	9.3	681	16	1700@690	3750@100	1600@690	3525@100	75	
225/70R19.5	F	153-028	63	6.00	32.2	8.5	15.0	9.4	645	14	1650@660	3640@95	1550@660	3415@95	75	
225/70R19.5	G	226-955	63	6.00	32.2	8.5	15.0	9.4	645	14	1800@760	3970@110	1700@760	3750@110	75	
245/70R19.5	F	299-898	79	6.75	33.4	9.4	15.5	10.3	622	19	1850@660	4080@95	1800@660	3970@95	75	
245/70R19.5	G	227-261	79	6.75	33.4	9.4	15.5	10.3	622	19	2060@660	4540@110	2000@660	4410@110	75	
245/70R19.5	H	227-295	79	6.75	33.4	9.4	15.5	10.3	622	19	2180@760	4940@120	2120@760	4675@120	75	
265/70R19.5	G	297-518	85	7.50	34.3	10.0	15.9	11.0	606	16	2430@760	5355@110	2300@760	5070@110	75	
245/75R22.5	G	292-869	93	6.75	37.4	9.6	17.6	10.5	555	18	2120@760	4675@110	1950@760	4300@110	75	
265/75R22.5	G	292-877	99	7.50	38.4	10.2	18.0	11.1	541	18	2360@760	5205@110	2180@760	4805@110	75	
295/75R22.5	G	289-086	115	8.25	40.2	11.2	18.8	12.2	517	19	2800@760	6175@110	2575@760	5675@110	75	
295/80R22.5	H	292-834	131	9.00	41.6	11.7	19.4	12.7	499	19	3550@860	7830@125	3150@860	6940@125	75	
285/75R24.5	G	290-726	122	8.25	41.4	10.6	19.4	11.6	502	19	2800@760	6175@110	2575@760	5675@110	75	

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## R250 ED

### All-Position Radial

- Extra-duty compound resists cuts and chips for enhanced performance in severe on-highway, moderate on/off-highway and mixed service applications.
- Five ribs with four wide, straight grooves for precise handling and excellent traction.
- Sidewall protector ribs fight damage from curbing, cuts and impacts.

#### Recommended Application

An all-position radial tire specifically designed for steering applications in:

- High-Scrub Pickup & Delivery Service
- Regional Haul Service
- Mixed and Moderate On/Off-Highway Service

#### Replaces:

Goodyear: G149, G169, G661, G662, G670

Michelin: XZE, XZE2, XZE2+, XZE\*



#### TECHNICAL DATA

Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
<b>R250 ED</b>															
11R22.5	H	206-973	117	8.25	41.4	10.9	19.3	12.0	501	19	3000@830	6610@120	2725@830	6005@120	75
11R24.5	H	206-990	125	8.25	43.5	10.9	20.3	11.9	478	19	3250@830	7160@120	3000@830	6610@120	75
255/70R22.5	H	216-568	95	8.25	36.7	10.3	17.2	11.4	567	18	2500@830	5510@120	2300@830	5070@120	75
275/70R22.5	J	216-585	110	8.25	38.0	10.7	17.6	11.8	547	19	3175@830	7000@120	2900@830	6395@120	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## M720

### Drive Radial

- Low rolling resistance compounds and construction for superb fuel economy.
- Innovative low rolling resistance casing helps save fuel throughout the life of the casing.
- Continuous contact shoulders uniformly distribute weight and torque for even wear.

#### Recommended Application

A low rolling resistance drive radial designed for tandem axle drive applications in:

- Long Haul Service
- Regional Haul Service

#### Replaces:

Goodyear: G362, G372, G305

Michelin: XDA3, XDA ENERGY, XDA5

Approved for SmartWay<sup>SM</sup> and  
meets California's CARB requirements



#### TECHNICAL DATA

Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
<b>M720</b>															
11R22.5	G	199-748	125	8.25	41.8	11.3	19.5	12.5	497	26	2800@720	6175@105	2650@720	5840@105	75
11R24.5	G	199-765	136	8.25	43.8	11.2	20.4	12.3	475	26	3000@720	6610@105	2725@720	6005@105	75
295/75R22.5	G	292-923	118	8.25	40.6	11.3	18.9	12.4	512	26	2800@760	6175@110	2575@760	5675@110	75
285/75R24.5	G	292-931	125	8.25	41.9	11.2	19.6	12.3	496	26	2800@760	6175@110	2575@760	5675@110	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## M726 EL Drive Radial

- Up to 32/32" tread depth provides maximum traction and maximum removal mileage.
- Rugged tread compound resists tread squirm and heel-toe wear for longer tread life.
- Solid shoulder ribs distribute weight and torque evenly to fight irregular wear.
- Stone rejector platforms help prevent retention of damaging stones.

### Recommended Application

A mega-deep drive radial tire designed for drive applications in:

- Long Haul Service
- Regional Haul Service
- Pickup & Delivery Service

### Replaces:

Goodyear: G362, G372

Michelin: XDA5, XDA3, XDN2



### TECHNICAL DATA

Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
<b>M726 EL</b>															
9R22.5	F	199-884	89	6.75	38.8	8.9	18.2	9.8	535	24	2060@720	4540@105	1950@720	4300@105	75
10R22.5	G	199-918	108	7.50	40.5	9.8	18.9	10.8	513	26	2575@790	5680@115	2430@790	5355@115	75
11R22.5	G	186-114	135	8.25	42.2	11.2	19.6	12.3	492	32	2800@720	6175@105	2650@720	5840@105	75
11R24.5	G	186-131	138	8.25	44.2	11.2	20.6	12.3	470	32	3000@720	6610@105	2725@720	6005@105	75
11R24.5	H	186-777	143	8.25	44.2	11.2	20.6	12.3	470	32	3250@830	7160@120	3000@830	6610@120	75
265/75R22.5	G	199-935	105	7.50	38.4	10.0	18.2	11.0	533	26	2360@760	5205@110	2180@760	4805@110	75
295/75R22.5	G	186-165	126	8.25	40.9	11.3	19.1	12.5	507	32	2800@760	6175@110	2575@760	5675@110	75
285/75R24.5	G	186-148	138	8.25	42.2	11.3	19.8	12.4	492	32	2800@760	6175@110	2575@760	5675@110	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## M726 Drive Radial

- Extra-deep tread provides aggressive traction and maximum removal mileage.
- Solid shoulder ribs distribute weight and torque evenly to fight irregular wear.
- Center groove platforms help reject damaging stones to enhance casing durability.

### Recommended Application

A radial tire designed for drive applications in:















- Long Haul Service
- Regional Haul Service
- Pickup & Delivery Service

### Replaces:

Goodyear: G622, G164  
Michelin: XD2



### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
<b>M726</b>															
255/70R22.5	H	297-585	102	8.25	37.3	10.3	17.4	11.2	557	26	2500@830	5510@120	2300@830	5070@120	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## Medium Truck

- Extra-deep (30/32") open shoulder tread design for maximum traction in all weather conditions and longer tread life.
- Revolutionary Dome Block™ lug contour design to fight irregular wear.
- Stone rejectors protect casing by helping to prevent belt-damaging stones from lodging in grooves.
- Combines long-wearing cap tread with cool-running base compound for great retreadability.

## Light Truck














- Long Haul Service
- Regional Haul Service
- Pickup & Delivery Service

## General Technical

Goodyear: G182, G338, G622  
Michelin: XDN2, XDE M/S, XD4



## Load/Inflation

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
M725															
11R22.5	G	152-935	130	8.25	42.1	10.7	19.6	11.7	493	30	2800@720	6175@105	2650@720	5840@105	75
11R22.5	H	209-608	130	8.25	42.1	10.7	19.6	11.7	493	30	3000@830	6610@120	2725@830	6005@120	75
11R24.5	G	152-943	142	8.25	44.1	10.7	20.6	11.7	471	30	3000@720	6610@105	2725@720	6005@105	75
295/75R22.5	G	150-940	126	8.25	40.9	11.3	19.1	12.4	508	30	2800@760	6175@110	2575@760	5675@110	75
285/75R24.5	G	150-991	134	8.25	42.1	11.2	19.7	12.2	493	30	2800@760	6175@110	2575@760	5675@110	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## M729F Drive Radial

- Deep original tread depth for long tire life.
- Aggressive pattern improves traction capabilities in all weather conditions.
- Casing construction and cap/base compounding improve durability and retreadability.
- Sidewall protector ribs resist cuts and abrasions from curbing and impacts.

### Recommended Application

A drive radial tire designed for high traction and high scrub applications in:














- Long Haul Service
- Regional Haul Service
- Pickup & Delivery Service

### Replaces:

Goodyear: G622, G647  
Michelin: XDE2+, XDS2



### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
M729F															
215/75R17.5	F	160-427	60	6.00	30.7	8.5	14.4	9.3	668	22	1700@690	3750@100	1600@690	3525@100	75
225/70R19.5	F	299-839	67	6.00	32.5	8.5	15.3	9.4	639	19	1650@660	3640@95	1550@660	3415@95	75
225/70R19.5	G	227-023	67	6.00	32.5	8.5	15.1	9.4	639	19	1800@660	3970@110	1700@660	3750@110	75
245/70R19.5	H	227-040	75	7.50	33.4	9.5	15.5	10.5	622	19	2240@760	4940@120	2120@760	4675@120	75
265/70R19.5	G	152-498	88	7.50	34.4	9.9	15.9	10.8	604	19	2500@760	5510@110	2360@760	5205@110	75
285/70R19.5	H	158-914	98	8.25	35.4	10.6	16.3	11.6	587	20	2900@860	6395@125	2725@860	6005@125	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## M895

### Metro All-Position Radial

- Suitable for both steer and drive axle positions on delivery vehicles, vans and moving trucks.
- Superior handling with reduced noise and wander, even on highways with rain grooves.
- Stabilizing continuous shoulder design combats irregular wear for long original tread life.
- Block-rib pattern for outstanding traction in rain, mud and snow.
- Groove bottom platforms to fight retention of casing-damaging stones.

#### Recommended Application

An all-position radial tire designed for steering and drive applications in:

- Pickup & Delivery Service














#### Replaces:

Goodyear: G647, G622

Michelin: XZE, XDS2, XDE2+



#### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
M895															
225/70R19.5	F	226-989	67	6.00	32.4	8.5	15.1	9.4	642	17	1650@660	3640@95	1550@660	3415@95	75
245/70R19.5	G	227-006	74	6.75	33.3	9.1	15.4	10.0	624	17	2060@760	4540@110	1950@760	4300@110	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## R197

### All-Position Radial

- Optimized tread pattern, casing and compound for reduced rolling resistance and superior fuel-efficiency.
- Sidewall protector ribs resist curb damage and abrasion.
- Defense Groove™ features promote even shoulder rib pressure to combat shoulder edge wear.
- Maximum tread width allows for longer tread life and full-size drive caps.

#### Recommended Application

A radial tire suitable for all-position use but designed for single and tandem axle trailer and dolly applications in:














- Long Haul Service
- Regional Haul Service

#### Replaces:

Goodyear: G316

Michelin: XT-1, XTA Energy



TECHNICAL DATA															
															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
R197															
295/75R22.5	G	208-265	104	8.25	39.7	11.3	18.5	12.5	524	11	2800@760	6175@110	2575@760	5675@110	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## R195F

### All-Position Radial

- Sidewall protector ribs resist curb damage and abrasion.
- Equalizer Rib™ and Defense Groove™ designs combat the initiation and spread of irregular wear.
- Maximum tread width allows for full-size drive caps.

#### Recommended Application

A radial tire suitable for all-position use but designed for single and tandem axle trailer and dolly applications in:

- Long Haul Service
- Regional Haul Service

#### Replaces:

Goodyear: G316

Michelin: XT-1, XTA Energy

Approved for SmartWay<sup>SM</sup> and  
meets California's CARB requirements



#### TECHNICAL DATA

Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
<b>R195F</b>															
11R22.5	G	187-338	109	8.25	40.9	11.1	19.1	12.2	507	11	2800@720	6175@105	2650@720	5840@105	75
11R24.5	G	187-355	117	8.25	42.9	11.1	20.1	12.2	485	11	3000@720	6610@105	2725@720	6005@105	75
255/70R22.5	H	193-424	90	8.25	36.3	10.3	16.9	11.3	572	11	2500@830	5510@120	2300@830	5070@120	75
295/75R22.5	G	187-321	102	8.25	39.7	11.3	18.5	12.5	522	11	2800@760	6175@110	2575@760	5675@110	75
285/75R24.5	G	187-372	108	8.25	40.9	11.4	19.2	12.5	508	11	2800@760	6175@110	2575@760	5675@110	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## Greatec® R125 Wide Base Radial

- Greatec® R125 offers an optimized belt package for improved irregular wear resistance and longer wear life.
- Sidewall protectors for resistance to curb damage.
- One tire replaces two for higher payloads and better fuel economy.
- Directly replaces 295/75R22.5 dual assemblies.
- Patented Equalizer Rib™ and Defense Groove™ designs combat initiation and spread of irregular wear.
- Waved Belt™ design for enhanced casing durability.
- Stone rejector platforms help prevent retention of damaging stones.

### Recommended Application

A wide base radial tire designed for trailer axle and dolly applications in:

- Long Haul Service
- Regional Haul Service














### Replaces:

Goodyear: None

Michelin: X One XTA, X One XTE



### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
GREATEC® R125															
445/50R22.5	L	233-534	164	14.00	39.5	17.5	18.6	18.5	529	14	4625@830	10,200@120	-	-	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum single load.
- For load and inflation tables see pages 92 through 97.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## Medium Truck

- Deep tread depth for high-scrub trailer service.
- Wide, solid shoulder ribs resist tearing and fight turning side forces.
- Computer-designed belt package protects against side forces encountered on spread and multi-axle trailers.
- Tough tread compounds fight scrub wear, yet run cool for long mileage.

## Light Truck














- Long Haul Service
- Regional Haul Service
- Pickup & Delivery Service

## General Technical

Goodyear: G316, G661  
Michelin: XTE



## Load/Inflation

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
R196															
11R22.5	G	290-920	111	8.25	41.3	10.8	19.3	11.9	503	16	2800@720	6175@105	2650@720	5840@105	75
11R24.5	G	290-939	120	8.25	43.3	10.7	20.3	11.8	480	16	3000@720	6610@105	2725@720	6005@105	75
295/75R22.5	G	296-325	111	8.25	40.0	10.8	18.7	11.9	519	16	2800@760	6175@110	2575@760	5675@110	75
285/75R24.5	G	296-333	116	8.25	41.5	10.7	19.5	11.8	501	16	2800@760	6175@110	2575@760	5675@110	75

## Technical Bulletins

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

# R184

## Trailer Radial

- Five-rib pattern designed exclusively for low-platform trailers.
- Multiple cross-rib sipes break up pocketed water for a firm grip on wet roads.
- Continuous shoulders help combat shoulder rib damage from maneuvering scrub.














### Recommended Application

A trailer use-only radial tire designed for special high-load trailer service.

### Replaces:

- Goodyear: G114
- Michelin: XTA, XTE2, XTA2 Energy



TECHNICAL DATA															
															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
R184 Trailer use only															
215/75R17.5	H	264-695	66	6.00	30.6	8.5	14.2	9.4	679	15	2180@860	4805@125	2060@860	4540@125	65
245/70R17.5	J	158-183	77	7.50	31.4	9.8	14.4	10.8	662	16	2725@860	6005@125	2575@860	5675@125	65

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## R294

### All-Position Radial

- Five-rib pattern for even load distribution in any axle position.
- Rib sipes cut through water and road film for excellent control on wet surfaces.
- Four wide grooves to channel water out of footprint for wet traction.

#### Recommended Application

An all-position radial tire designed for special service applications in:

- Regional Haul Service
- Pickup & Delivery Service














#### Replaces:

Goodyear: G291

Michelin: XZA1, XZA2 Energy



#### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
R294															
315/80R22.5 †	J	286-265	142	9.00	42.5	12.3	19.9	13.5	489	19	3750@830	8270@120	3450@830	7610@120	75














† 315/80R22.5 requires the use of a 9.00-inch rim to carry loads over 8,000 lbs.

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.





															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
R187F															
8R19.5	F	267-775	63	6.00	33.6	8.0	15.8	8.8	618	16	1600@760	3525@110	1500@760	3305@110	75

## R180

### All-Position Radial

- Five-rib tread pattern for even load distribution in any axle position.
- Multiple cross-rib sipes cut through water and road film for excellent control on wet surfaces.
- Four wide grooves to channel water out of footprint for superb traction.

#### Recommended Application

An all-position radial tire designed for general use in:

- Pickup & Delivery Service














#### Replaces:

Goodyear: G114

Michelin: None



#### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
R180															
9R17.5	G	272-914	64	6.75	33.1	9.1	15.4	10.0	628	14	1850@830	4080@120	1750@830	3860@120	75

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

M860  
On/Off-Highway  
All-Position Radial

- Wider tread width for enhanced handling and deep 24/32" tread depth for long original mileage.
- Sidewall protector ribs enhance casing durability by fighting curbing and abrasion damage.
- Stone rejectors in center groove combat stone retention damage.
- 65 mph speed rating allows higher sustained speed for on-highway driving.














Recommended Application

An all-position radial tire designed for steering positions in special service applications.

Replaces:

- Goodyear: G287, G289
- Michelin: XZUS, XZY3



TECHNICAL DATA															
															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
M860															
315/80R22.5 †	L	186-301	163	9.00	42.8	12.6	19.9	13.9	485	24	4535@900	10,000@130	4125@900	9090@130	65

† Requires the use of a 9.00-inch rim to carry loads over 8,000 lbs.

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins



## M850

### On/Off-Highway All-Position Radial

- An aggressive deep and wide tread design provides excellent traction, long mileage and long wear.
- Special tread compounds provide resistance to cuts, chips and irregular wear.
- Casing construction and cap/base compounding improve durability and retreadability.
- Stone rejectors in each major groove protect belts from potential damage.

#### Recommended Application














An all-position radial tire designed for steer, drive and trailer positions in on/off-highway service.

#### Replaces:

Goodyear: G287, G288  
Michelin: XZY3



#### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
M850															
11R22.5	H	186-267	130	8.25	42.0	11.0	19.5	12.0	495	24	3000@830	6610@120	2725@830	6005@120	65
11R24.5	H	186-284	152	8.25	44.0	10.9	20.5	12.0	472	24	3250@830	7160@120	3000@830	6610@120	65

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## M840 On/Off-Highway All-Position Radial

- Deep tread for reliable control and long tread life.
- Combination rib/lug pattern provides a solid grip in any wheel position.
- Tough tread compounds resist cuts, chips, tearing and irregular wear.
- Split-belt construction for flexibility in enveloping road hazards.

### Recommended Application














An all-position radial tire designed for steer, drive and trailer positions in on/off-highway service.

### Replaces:

Goodyear: G288  
Michelin: XZY, XTY2



### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
M840															
12.00R24	J	152-994	186	8.50	48.1	12.1	22.2	13.2	432	23	4250@830	9370@120	3875@830	8540@120	65
275/70R22.5	J	202-451	121	8.25	38.4	10.8	17.8	11.8	541	22	3150@830	6940@120	2900@830	6395@120	65

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

# M857

## On/Off-Highway

## All-Position Radial

## M857 WB Wide Base

- Designed for use on dump trucks, logging rigs and refuse vehicles.
- Tough tread compounds provide resistance to cuts, tearing, chips and irregular wear.
- Thick undertread layer for penetration resistance and retreadability.

### Recommended Application

An all-position radial tire designed for steer positions in on/off-highway service.














### Replaces:

Goodyear: G286

Michelin: None



### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
M857															
11.00R24	H	289-779	158	8.00	46.7	11.5	21.7	12.7	445	20	3750@830	8270@120	3450@830	7610@120	65
M857 WB															
445/65R19.5	J	290-432	186	13.00	42.6	17.8	19.6	19.6	491	19	4750@760	10,500@110	-	-	65

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum single or dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

# L320

## On/Off-Highway Drive Axle Radial

- Aggressive lug tread for powerful grip on or off the road.
- Deep original tread for long life and outstanding traction.
- Special tread compounds for resistance to cuts, chips, tearing and irregular wear.
- 65 mph speed rating allows operation at higher sustained speed in on-highway service.

## Recommended Application

A radial tire designed for drive positions in on/off-highway service.














**Replaces:**

Goodyear: G177, G282

Michelin: XDY3, XDY-2, XDY-EX, XDL



## TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
L320															
12.00R24	J	193-373	202	8.50	48.6	12.2	22.5	13.4	427	31	4250@830	9370@120	3875@830	8540@120	65
11R22.5	G	208-350	143	8.25	42.4	10.8	19.8	11.9	490	31	2800@720	6175@105	2650@720	5840@105	65
11R22.5	H	186-318	143	8.25	42.4	10.8	19.8	11.9	490	31	3000@830	6610@120	2725@830	6005@120	65
12R22.5	H	211-019	163	9.00	43.6	11.5	20.3	12.7	476	31	3350@830	7390@120	3075@830	6780@120	65
11R24.5	G	208-333	156	8.25	44.4	10.8	20.7	11.9	467	31	3000@720	6610@105	2725@720	6005@105	65
11R24.5	H	186-335	156	8.25	44.4	10.8	20.7	11.9	467	31	3250@830	7160@120	3000@830	6610@120	65

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## L317 Off-Highway Drive Axle Radial

- Aggressive lug tread for powerful grip.
- Deep original tread for long life and outstanding traction.
- Split-belt construction for resistance to road hazards.
- Special tread compounds for resistance to cuts, chips, tearing and irregular wear.

### Recommended Application














A radial tire designed for drive positions.

### Replaces:

Goodyear: G177  
Michelin: XDL



### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
L317															
12.00R24 NHS †	J	262-986	202	8.50	49.4	12.6	22.9	13.9	421	39	4250@830	9370@120	3875@830	8540@120	50

† NHS: Not for highway service.

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



## M775 On/Off-Highway Drive Axle Radial

- Extra-deep tread for long original tread life.
- Aggressive tread design for maximum traction on or off the road.
- Special compounds for resistance to cuts, chips, tearing and irregular wear.
- Split-belt construction for flexibility in enveloping road hazards.

### Recommended Application

A radial tire designed for drive positions in severe service, such as logging and oil field usage.














### Replaces:

Goodyear: G177, G282

Michelin: XDY-EX, XDY3, XDY-2



### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
M775															
11R22.5	H	202-604	141	8.25	42.6	10.8	19.8	11.9	487	33	3000@830	6610@120	2725@830	6005@120	65
12R22.5	H	202-621	155	9.00	43.7	11.6	20.3	12.7	476	34	3350@830	7390@120	3075@830	6780@120	65
11R24.5	H	157-767	157	8.25	44.6	10.8	20.8	11.9	465	33	3250@830	7160@120	3000@830	6610@120	65

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 92 through 97.
- For minimum dual spacing and approved rim widths see page 73.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

# M844F

## On/Off-Highway

## All-Position

## Wide Base Radial

- Deep tread for aggressive traction and long original mileage.
- Protector ribs on both sidewalls fight cuts, snags and abrasions.
- Self-cleaning tread for high traction and stone rejector platforms in every groove for durability.
- Special tread compounds for resistance to cuts, chips, tearing and irregular wear.
- Wide base design for higher payload and outstanding flotation.

### Recommended Application

A wide base radial designed for steer, drive and trailer positions in on/off-highway service.















### Replaces:

Goodyear: G178, G286, G296

Michelin: XZY3, XZL, XZUS, XFE



### TECHNICAL DATA

															
Tire Size	Load Range	Article Number	Weight (Lbs)	Meas. Rim	Overall Diam.	Overall Width	Static Loaded Radius	Overall Width (Loaded)	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)		Max. Speed (MPH)
											Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI	
<b>M844F</b>															
385/65R22.5	J	287-938	167	11.75	42.8	15.5	19.9	16.6	489	23	4250@830	9370@120	-	-	65
425/65R22.5	L	291-684	189	12.25	44.8	16.2	20.7	17.3	467	23	5150@830	11,400@120	-	-	65
445/65R22.5	L	287-954	209	13.00	45.9	17.4	21.2	18.5	456	24	5600@830	12,300@120	-	-	65

- All dimensions taken with tire on measuring rim.
- Loaded dimensions and RPM measured at maximum single load.
- For load and inflation tables see pages 92 through 97.
- For ply ratings see table on page 71.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.



# Medium Truck Tire — Discontinued Products

TECHNICAL DATA										
Pattern	Size	LR	Replace With	Meas. Rim	Overall Diam.	Overall Width	SLR	Loaded Width	RPM	Tread Depth
L312	445/65R22.5	L	L315	13.00	45.7	17.7	21.1	19.5	458	20
L317	10.00R20	H	-	7.50	42.3	10.8	19.6	11.9	491	31
L317	11.00R20	H	-	8.00	43.5	11.4	20.1	12.5	478	31
L317	11.00R22	H	-	8.00	45.6	11.4	21.1	12.5	456	31
L317	11R22.5	H	L320	8.25	42.4	10.7	19.8	11.8	490	31
L317	11R24.5	H	L320	8.25	44.4	10.6	20.8	11.7	468	31
L317	12R22.5	H	-	9.00	43.6	11.4	20.3	12.6	476	31
L355	12.00R24	J	L320	8.50	48.3	12.3	22.3	13.5	430	26
M774	11R22.5	H	M775	8.25	42.9	11.2	19.9	12.2	484	33
M774	12R22.5	H	M775	9.00	43.8	11.6	20.3	12.2	474	34
M774	11R24.5	H	M775	8.25	44.9	11.2	20.9	12.3	463	33
M711	10.00R20	G	-	7.50	41.9	10.7	19.5	11.8	496	26
M711	285/75R24.5	G	M725	8.25	41.9	10.6	19.6	11.7	496	26
M711	295/75R22.5	G	M725	8.25	40.6	11.1	18.9	12.2	512	26
M711WB	385/65R22.5	J	-	11.75	42.7	14.7	19.8	16.2	490	22
M711WB	425/65R22.5	J	-	12.25	44.6	16.3	20.6	17.9	469	22
M716	215/75R17.5	F	M729	6.00	30.5	8.6	14.3	9.3	681	19
M716	245/75R22.5	G	R250	7.50	37.6	9.8	17.8	10.8	552	22
M716	265/70R19.5	G	M729	7.50	34.4	10.0	15.9	11.0	604	20
M716	265/75R22.5	G	M726	7.50	38.6	10.1	18.2	11.1	538	21
M716	285/70R19.5	G	M729	7.50	35.4	10.3	16.3	11.4	587	21
M726	11.00R22	H	-	8.00	45.0	11.4	20.8	12.5	462	23
M726	11R22.5	G	M726 EL	8.25	42.1	10.6	19.7	11.7	493	30
M726	11R24.5	G	M726 EL	8.25	44.1	10.6	20.7	11.7	471	30
M726	11R24.5	H	M726 EL	8.25	44.1	10.6	20.7	11.7	471	30
M726	285/75R24.5	G	M726 EL	8.25	42.1	10.9	19.7	12.0	493	30
M726	295/75R22.5	G	M726 EL	8.25	40.9	11.1	19.1	12.2	508	30
M726	305/75R24.5	H	-	9.00	43.2	11.9	20.2	13.0	481	28
M726F	10R22.5	F	M726 EL	7.50	40.5	9.8	18.9	10.7	513	26
M726F	10R22.5	G	M726 EL	7.50	40.5	9.8	18.9	10.7	513	26
M726F	265/75R22.5	G	M726 EL	7.50	38.4	10.0	18.0	10.9	541	26
M726F	9R22.5	F	M726 EL	6.75	38.8	8.9	18.2	9.7	535	24
M840	11R22.5	H	M843	8.25	42.2	11.2	19.6	12.3	492	21
M840	10.00R20	H	M843	7.50	42.3	11.0	19.5	12.1	491	22
M840	11.00R20	H	M843	8.00	43.7	11.5	20.1	12.7	475	23
M840	11.00R22	H	M843	8.00	45.2	11.4	20.9	12.5	460	23
M840	11R22.5	G/H	M843	7.50	42.2	11.2	19.6	12.3	492	21
M840	11R24.5	H	M843	8.25	43.9	10.8	20.5	11.8	473	22
M840	12.00R20	J	M843	8.50	45.0	12.3	20.6	13.5	462	23
R180	10R17.5	H	-	7.50	33.7	10.0	15.7	11.0	616	16
R184	235/75R17.5	J	R184-245/75R	6.75	31.6	9.4	14.6	10.4	657	16
R187	225/70R19.5	F	R250	6.00	32.40	8.70	15.20	9.6	641	16
R187F	10.00R15	J	-	7.50	36.00	10.50	16.60	11.6	577	16
R187F	225/70R19.5	F	R250	6.00	32.40	8.70	15.20	9.6	641	16
R187F	245/70R19.5	F	R250	7.50	33.30	9.80	15.70	10.8	624	17
R187F	245/70R19.5	G	R250	7.50	33.30	9.80	15.70	10.8	624	17
R187F	8.25R15	J	-	6.50	33.10	9.10	15.30	10.0	628	14
R187F	10.00R15	J	-	7.50	36.0	10.5	16.5	11.6	577	16

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins

# Medium Truck Tire — Discontinued Products

TECHNICAL DATA										
Pattern	Size	LR	Replace With	Meas. Rim	Overall Diam.	Overall Width	SLR	Loaded Width	RPM	Tread Depth
R194	10.00R20	G	-	7.50	40.9	10.7	19.1	11.8	508	12
R194	11R22.5	G	R195F	8.25	41.0	10.7	19.2	11.8	507	12
R194	11R24.5	G	R195F	8.25	43.0	10.6	20.2	11.7	483	12
R194	285/75R24.5	G	R195F	8.25	41.0	10.6	19.4	11.7	507	12
R194F	255/70R22.5	H	R195F	8.25	36.3	10.3	17.0	11.4	572	12
R194	295/75R22.5	G	R195F	8.25	39.8	11.2	18.7	12.3	522	12
R194FE	285/75R24.5	G	R195F	8.25	41.0	10.6	19.4	11.7	507	12
R194FE	295/75R22.5	G	R195F	8.25	39.8	11.2	18.7	12.3	522	12
R194FE	295/75R22.5	G	R195F	8.25	39.8	11.2	18.7	12.3	522	12
R194WB	385/65R22.5	J	-	11.75	42.7	15.2	19.8	16.7	490	16
R194WB	425/65R22.5	J	-	12.25	44.7	16.3	20.7	17.9	468	16
R227	11R22.5	G	R287	8.25	41.3	11.2	19.2	12.2	503	18
R227	11R24.5	G	R287	8.25	43.3	11.2	20.2	12.3	480	18
R227	285/75R24.5	G	R287	8.25	41.3	11.2	19.4	12.3	507	18
R227	295/75R22.5	H	R287/R280	8.25	40.1	11.3	18.7	12.5	518	18
R227FE	295/75R22.5	G	R287	8.25	40.1	11.3	18.7	12.5	518	18
R250	10.00R20	H	-	7.50	41.5	10.6	19.1	11.6	501	19
R250	11.00R20	H	-	8.00	42.5	11.5	19.6	12.5	489	19
R250	11.00R22	H	-	8.00	44.6	11.4	20.6	12.5	466	19
R250	12.00R20	J	-	8.50	44.7	12.1	20.5	13.2	465	20
R250	9.00R20	G	-	7.00	40.0	9.9	18.5	10.8	519	18
R250F	11R22.5	H	R250 ED	8.25	41.3	10.8	19.3	11.8	503	19
R250F	11R24.5	H	R250 ED	8.25	43.3	10.8	20.3	11.8	480	19
R250F	255/70R22.5	H	R250ED	8.25	36.7	10.3	17.1	11.3	567	18
R250F	275/70R22.5	J	R250ED	7.50	38.0	10.5	17.6	11.6	547	19
R270	285/75R24.5	G	-	8.25	41.8	10.7	19.6	11.8	497	22
R270	295/75R22.5	G	-	8.25	40.4	11.0	18.9	12.1	514	22
R294	215/75R17.5	F	R250F	6.00	30.5	8.5	14.3	9.4	681	15
R294	255/70R22.5	H	R250F	8.25	36.7	10.3	17.1	11.3	567	18
R294	275/70R22.5	H	R250F	8.25	38.0	10.4	17.7	11.5	547	19
R294	305/75R24.5	J	-	9.00	42.6	11.9	20.0	13.0	488	19
R296	11R22.5	H	M843	8.25	41.8	10.6	19.6	11.7	497	22
R296	11R24.5	H	M843	8.25	43.7	10.7	20.5	11.8	475	22
R296	315/80R22.5	L	M860	9.00	42.8	12.2	19.8	13.3	485	23
R287	11R22.5	G	R287A	8.25	41.2	11.2	19.2	12.3	504	16
R287	11R24.5	G	R287A	8.25	43.2	11.2	20.2	12.3	481	16
R287	295/75R22.5	G	R287A	8.25	40.2	11.0	18.8	12.1	517	16
R287	285/75R24.5	G	R287A	8.25	41.4	10.8	19.4	11.9	502	16
Greatec Drive	445/50R22.5	L	M825	14.00	40.2	17.4	19.0	18.5	520	26
Greatec Trailer	445/50R22.5	L	R125	14.00	39.5	17.5	18.6	18.5	523	14

## Medium Truck

## Light Truck

## General Technical

## Load/Inflation

## Technical Bulletins



NOTES

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins

Area for handwritten notes, organized by category: Medium Truck, Light Truck, General Technical, Load/Inflation, and Technical Bulletins.



**Commercial Light Truck Tires**  
**Table of Contents**

Light Truck Tire Size and Availability Chart . . . . . 46

Duravis® R500 HD . . . . . 47

Duravis® M700 HD/Duravis® M700 . . . . . 48

Duravis® M773 II/M779 (All-Season) . . . . . 49

R265 V-Steel Rib . . . . . 50

Blizzak® W965 All-Position Winter Radial . . . . . 51

Duravis® R250 All-Steel Radial . . . . . 52

Duravis® M895 All-Steel Radial . . . . . 53

Commercial Light Truck Tire – Discontinued Products . . . . . 54

Medium Truck
Light Truck
General Technical
Load/Inflation
Technical Bulletins

# Light Truck Tire Size and Availability Chart

<b>Light Truck Tire Availability Chart</b> Load Range and Tread Depths in 32nds Indicate Availability								
	COMBINATION POLYESTER & STEEL						ALL-STEEL CASING	
PATTERN	DURAVIS® R500 HD	DURAVIS® M700 HD / M700	DURAVIS® M773 II	M779	R265 V-STEEL RIB	BLIZZAK® W965	DURAVIS® R250	DURAVIS® M895
PAGE	47	48	49	49	50	51	52	53
REPLACES								
GOODYEAR	Wrangler SR-A	Wrangler Silent Armor	Wrangler Silent Armor	Wrangler Silent Armor	Wrangler SR-A, G949 RSA	None	G949 RSA	G947 RSS
MICHELIN	LTX M/S 2	LTX A/T 2	LTX A/T 2	LTX A/T 2	LTX M/S 2, LTX M/S, XPS Rib	None	XPS Rib	None
LT225/75R16	E-14	E-14				E-17	E-13	E-14
LT245/75R16	E-17	E-16	E-17		E-14	E-18	E-14	E-15
LT265/75R16	E-15	E-17	E-17			E-18		
LT215/85R16	E-14	E-14		E-15		E-17	E-13	E-14
LT235/85R16	E-17	E-14				E-18	E-14	E-15
LT245/70R17	E-14					E-18		
LT265/70R17	E-15	E-17 / E-18				E-18		
LT225/75R17							E-13	
LT245/75R17							E-14	
LT235/80R17	E-14	E-16						

## Duravis® R500 HD All-Position Radial

- Delivers long mileage with high durability.
- 3-D sipes improve dry traction while enhancing snow, ice and wet traction.
- Dual sidewall protector ribs resist curbing, cuts, and abrasions.
- Stone rejectors protect against stone drilling to enhance casing durability.

### Replaces:

Goodyear: Wrangler SR-A

Michelin: LTX M/S 2, LTX M/S



### TECHNICAL DATA

SW Style	Tire Size	Load Range	Service Description	Article Number	Wt. (lbs.)	Measuring Rim	Overall Diam.	Overall Width	Tread Width	Static Loaded Radius	Min. Dual Spac.	Revs Per Mile	Tread Depth (32")	Max. Tire Load			
														Max. Tire Load (Single)		Max. Tire Load (Dual)	
														Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI
<b>DURAVIS® R500 HD</b>																	
BL	LT225/75R16	E	115/112R	192-659	41	(6.0) 6.0-7.0	29.2	9.0	6.7	14.0	10.2	709	14	1215@550	2680@80	1120@550	2470@80
BL	LT245/75R16	E	120/116Q	191-860	47	(7.0) 6.0-7.0	30.6	9.8	6.9	14.2	11.3	671	17	1380@550	3042@80	1260@550	2778@80
BL	LT265/75R16	E	123/120R	191-877	53	(7.5) 7.0-8.0	31.6	10.8	7.7	14.0	12.2	659	15	1550@550	3415@80	1400@550	3085@80
BL	LT215/85R16	E	115/112R	191-826	41	(6.0) 5.5-7.0	30.3	8.7	6.4	14.1	9.9	687	14	1215@550	2680@80	1120@550	2470@80
BL	LT235/85R16	E	120/116Q	191-843	47	(6.5) 6.0-7.0	32.0	9.5	6.3	14.8	10.8	651	17	1380@550	3042@80	1260@550	2778@80
BL	LT245/70R17	E	119/116R	191-894	47	(7.0) 6.5-8.0	30.5	10.0	7.4	13.7	11.3	683	14	1360@550	3000@80	1250@550	2755@80
BL	LT265/70R17	E	121/118R	191-911	53	(8.0) 7.0-8.5	31.6	11.1	8.1	14.1	12.4	659	15	1450@550	3195@80	1320@550	2910@80
BL	LT235/80R17	E	120/117R	191-928	47	(6.5) 6.0-7.0	31.7	9.5	6.6	14.1	10.8	657	14	1400@550	3085@80	1285@550	2835@80

- All dimensions taken with tire on measuring rim (in parenthesis above).
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 98 through 102.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## Duravis® M700 HD/ Duravis® M700

Duravis® M700 HD    Duravis® M700

- Closed shoulder slots contribute to long tread life.
- Stone rejectors help protect against damaging stone drilling.
- Dual sidewall projectors resist cuts and abrasions.
- Stepped tread block edges increase snow traction.

### Replaces:

Goodyear: Wrangler Silent Armor  
Michelin: LTX A/T 2



### TECHNICAL DATA

SW Style	Tire Size	Load Range	Service Description	Article Number	Wt. (lbs.)	Measuring Rim	Overall Diam.	Overall Width	Tread Width	Static Loaded Radius	Min. Dual Spac.	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)	
														Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI
<b>DURAVIS® M700 HD</b>																	
BL	LT225/75R16	E	115/112R	213-518	42	(6.0) 6.0-7.0	29.3	9.0	6.8	13.7	10.2	711	14	1215@550	2680@80	1120@550	2470@80
BL	LT245/75R16	E	120/116R	206-310	48	(7.0) 6.5-8.0	30.5	10.0	7.3	14.2	11.3	683	16	1380@550	3042@80	1260@550	2778@80
BL	LT265/75R16	E	123/120R	206-293	54	(7.5) 7.0-8.0	31.7	10.8	7.9	14.7	12.2	657	17	1550@550	3415@80	1400@550	3085@80
BL	LT215/85R16	E	115/112R	214-606	42	(5.5) 6.5-7.0	30.4	8.7	6.4	14.1	9.9	685	14	1215@550	2680@80	1120@550	2470@80
BL	LT235/85R16	E	120/116R	214-589	48	(6.5) 5.5-7.0	31.7	9.5	7.0	14.0	10.8	657	14	1380@550	3042@80	1260@550	2778@80
BL	LT265/70R17	E	121/118R	206-276	54	(8.0) 7.0-8.5	31.7	11.1	7.9	14.7	12.4	657	17	1450@550	3195@80	1320@550	2910@80
BL	LT235/80R17	E	120/117R	206-242	50	(6.5) 6.0-7.5	31.9	9.4	9.4	14.8	10.8	653	16	1400@550	3085@80	1285@550	2835@80
<b>DURAVIS® M700 OEM</b>																	
BL	LT265/70R17	E	121/118Q	190-840	48	(7.0) 6.5-8.0	31.7	10.7	10.4	14.7	12.4	657	18	1450@550	3195@80	1320@550	2910@80

- All dimensions taken with tire on measuring rim (in parenthesis above).
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 98 through 102.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## Duravis® M773 II/ M779 (All-Season)/ All-Position Radials

- All-season on-highway design for traction in rain, snow and icy conditions.
- Recommended for delivery vehicles, vans and moving trucks.
- Combination steel belts and polyester body plies for durability and long life.
- SWP II: Enhanced construction for heavier-duty applications.

### Replaces:

Goodyear: Wrangler Silent Armor  
Michelin: LTX A/T 2



### TECHNICAL DATA

SW Style	Tire Size	Load Range	Service Description	Article Number	Wt. (lbs.)	Measuring Rim	Overall Diam.	Overall Width	Tread Width	Static Loaded Radius	Min. Dual Spac.	Revs Per Mile	Tread Depth (32")	Max. Tire Load			
														Max. Tire Load (Single)		Max. Tire Load (Dual)	
														Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI
<b>DURAVIS® M773 II</b>																	
BL	LT245/75R16	E	120/116R	208-231	41	(7.0) 6.5-7.5	30.5	9.8	7.3	14.2	11.3	683	17	1380@550	3042@80	1260@550	2778@80
BL	LT265/75R16	E	123/120Q	185-230	48	(7.5) 7.0-8.0	31.2	10.4	8.2	14.5	12.2	668	17	1550@550	3415@80	1400@550	3085@80
<b>M779 (All Season)</b> Not Pictured																	
BL	LT215/85R16	E	115/112P	293-695	45	(6.0) 5.0-6.0	30.5	8.5	6.4	14.2	9.9	673	15	1215@550	2680@80	1120@550	2470@80

- All dimensions taken with tire on measuring rim (in parenthesis above).
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 98 through 102.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.


















R265 V-Steel Rib

- Radial rib light truck tire for use on-highway when heavy loads are present.
- Steel belts ensure stability and durability at highway speeds.

Replaces:

Goodyear: Wrangler SR-A, G949 RSA  
Michelin: LTX M/S 2, LTX M/S, XPS Rib



TECHNICAL DATA																	
																	
SW Style	Tire Size	Load Range	Service Description	Article Number	Wt. (lbs.)	Measuring Rim	Overall Diam.	Overall Width	Tread Width	Static Loaded Radius	Min. Dual Spac.	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)		Max. Tire Load (Dual)	
														Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI
R265 V-Steel Rib																	
BL	LT245/75R16	E	120/116S	154-075	41	(6.5) 6.0-7.0	30.5	9.8	7.3	14.4	11.3	682	14	1380@550	3042@80	1260@550	2778@80

- All dimensions taken with tire on measuring rim (in parenthesis above).
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 98 through 102.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## Blizzard® W965 All-Position Winter Radial

- Winter grip for light truck commercial applications.
- Tube multi-cell compound improves control on ice by cutting through thin layers of water.
- Zig-Zag siping for improved ice performance.

### Replaces:

Goodyear: None  
Michelin: None



Meets the severe snow service requirements of the Rubber Manufacturers Association (RMA) and the Rubber Association of Canada (RAC).



### TECHNICAL DATA

SW Style	Tire Size	Load Range	Service Description	Article Number	Wt. (lbs.)	Measuring Rim	Overall Diam.	Overall Width	Tread Width	Static Loaded Radius	Min. Dual Spac.	Revs Per Mile	Tread Depth (32")	Max. Tire Load			
														Max. Tire Load (Single)		Max. Tire Load (Dual)	
														Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI
<b>Blizzard® W965 All-Season Winter</b>																	
BL	LT225/75R16	E	115/112Q	150-797	43	(6.0) 6.0-7.0	29.4	8.7	6.9	10.2	13.7	709	17	1215@550	2680@80	1120@550	2470@80
BL	LT245/75R16	E	120/116Q	150-800	49	(7.0) 6.5-7.5	30.6	9.6	7.6	14.2	11.3	681	18	1380@550	3042@80	1260@550	2778@80
BL	LT265/75R16	E	123/120Q	156-477	54	(7.5) 7.0-8.0	31.9	10.5	7.6	14.8	12.2	653	18	1550@550	3415@80	1400@550	3085@80
BL	LT215/85R16	E	115/112Q	150-770	48	(6.0) 5.5-7.0	30.6	8.6	6.6	14.2	9.9	681	17	1215@550	2680@80	1120@550	2470@80
BL	LT235/85R16	E	120/116Q	150-789	53	(6.5) 6.0-7.0	31.8	9.3	7.2	14.7	10.8	655	18	1380@550	3042@80	1260@550	2778@80
BL	LT245/70R17	E	119/116Q	200-479	52	(7.0) 6.5-8.0	30.8	9.8	7.6	14.4	11.3	676	18	1360@550	3000@80	1250@550	2755@80
BL	LT265/70R17	E	121/118Q	207-585	52	(8.0) 7.0-8.5	31.9	10.7	8.1	14.8	12.4	653	18	1450@550	3195@80	1320@550	2910@80

- All dimensions taken with tire on measuring rim (in parenthesis above).
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 98 through 102.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## Duravis® R250

### All-Position Radial

- All-steel light truck radial for on-highway use when heavy loads are required.
- An on-highway radial tire for service in commercial applications.
- Sidewall protector ribs resist curbing, cuts, and abrasions.
- Designed for pickup and delivery, regional and long haul service.

#### Replaces:

Goodyear: G949 RSA  
Michelin: XPS Rib



#### TECHNICAL DATA

SW Style	Tire Size	Load Range	Service Description	Article Number	Wt. (lbs.)	Measuring Rim	Overall Diam.	Overall Width	Tread Width	Static Loaded Radius	Min. Dual Spac.	Revs Per Mile	Tread Depth (32")	Max. Tire Load (Single)				Max. Tire Load (Dual)			
														Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI				
<b>DURAVIS® R250 With sidewall protectors</b>																					
BL	LT225/75R16	E	115/112Q	206-361	50	(6.0) 6.0-7.0	29.4	9.0	6.9	13.7	10.2	709	13	1215@550	2680@80	1120@550	2470@80				
BL	LT245/75R16	E	120/116L	210-815	57	(7.0) 6.5-7.5	30.7	10.0	7.3	14.2	11.3	677	14	1380@550	3042@80	1260@550	2778@80				
BL	LT215/85R16	E	115/112Q	206-327	54	(6.0) 5.5-7.0	30.5	8.5	6.7	14.2	9.9	683	13	1215@550	2680@80	1120@550	2470@80				
BL	LT235/85R16	E	120/116Q	206-378	60	(6.5) 6.0-7.5	31.8	9.3	7.1	14.7	10.8	655	14	1380@550	3042@80	1260@550	2778@80				
BL	LT225/75R17	E	116/113Q	223-555	81	(6.0) 6.5-7.5	30.3	8.8	6.9	14.2	10.2	687	13	1250@550	2755@80	1150@550	2535@80				
BL	LT245/75R17	E	121/118Q	213-501	81	(7.0) 6.5-7.5	31.5	9.8	7.3	14.7	11.3	661	14	1450@550	3195@80	1320@2550	2910@80				

- All dimensions taken with tire on measuring rim (in parenthesis above).
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 98 through 102.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

## Duravis® M895

### All-Position Radial

- All-steel belts and body ply for durability and retreadability.
- Closed shoulder design for long tread life.
- Dual sidewall protectors resist cuts, curbing and abrasion.
- Stone rejector platforms protect against stone drilling to enhance casing durability.

#### Replaces:

Goodyear: G947 RSS

Michelin: None



#### TECHNICAL DATA

SW Style	Tire Size	Load Range	Service Description	Article Number	Wt. (lbs.)	Measuring Rim	Overall Diam.	Overall Width	Tread Width	Static Loaded Radius	Min. Dual Spac.	Revs Per Mile	Tread Depth (32")	Max. Tire Load			
														Max. Tire Load (Single)		Max. Tire Load (Dual)	
														Kg/kPa	Lbs/PSI	Kg/kPa	Lbs/PSI
<b>DURAVIS® M895</b>																	
BL	LT225/75R16	E	115/112Q	206-463	41	(6.0) 6.0-7.0	29.4	8.8	7.2	13.6	10.2	711	14	1215@550	2680@80	1120@550	2470@80
BL	LT245/75R16	E	120/116Q	206-446	47	(7.0) 6.0-7.5	30.8	9.8	7.8	14.1	11.3	684	15	1380@550	3042@80	1260@550	2778@80
BL	LT215/85R16	E	115/112Q	206-395	41	(6.0) 5.5-7.0	30.5	8.5	6.9	14.1	9.9	685	14	1215@550	2680@80	1120@550	2470@80
BL	LT235/85R16	E	120/116Q	206-412	47	(7.0) 6.5-7.5	30.5	9.3	7.5	14.7	10.8	656	15	1380@550	3042@80	1260@550	2778@80

- All dimensions taken with tire on measuring rim (in parenthesis above).
- Loaded dimensions and RPM measured at maximum dual load.
- For load and inflation tables see pages 98 through 102.

Bridgestone tires and tubes are subject to an ongoing development program. Bridgestone Americas Tire Operations, LLC retains the right to amend specifications at any time without notice or obligations. Please refer to rim manufacturer's load and inflation limits. Never exceed rim manufacturer's limits without the consent of the component manufacturer.

# Commercial Light Truck Tire — Discontinued Products

TECHNICAL DATA									
Pattern	Size	LR	Approved Rims	Overall Diameter	Overall Width	SLR	RPM	Min. Dual Spacing	Tread Depth
Dueler 661	LT235/75R15	C	(6.0) 6.0-7.0	29.0	9.0	13.3	728	10.8	14
Dueler 661	LT195/75R16	D	(5.5) 5.0-6.0	26.2	7.6	12.3	796	8.9	14
Dueler 661	LT225/75R16	C	(6.0) 6.0-7.0	29.4	8.7	13.9	709	10.2	14
Dueler 661	LT225/75R16	D	(6.0) 6.0-7.0	29.4	8.7	13.9	709	10.2	14
Dueler 661	LT245/75R16	E	(7.0) 6.5-7.0	30.6	9.6	14.4	682	11.3	16
Dueler 661	LT215/85R16	D	(6.0) 5.0-6.0	30.6	8.2	14.5	687	9.9	15
Dueler 661	LT215/85R16	E	(6.0) 5.0-6.0	30.6	8.2	14.5	687	9.9	15
Dueler 661	LT235/85R16	D	(6.5) 6.0-7.0	31.8	9.1	14.8	660	10.8	16
Dueler 661	LT235/85R16	E	(6.5) 6.0-7.0	31.8	9.1	14.8	660	10.8	16
Dueler 661	8.75R16.5LT	D	(6.75) 6.0-6.75	29.4	8.9	13.9	709	9.9	15
Dueler 661	8.75R16.5LT	E	(6.75) 6.0-6.75	29.4	8.9	13.9	709	9.9	15
Dueler 661	9.50R16.5LT	D	(6.75) 6.75-825	30.6	9.5	14.4	682	10.7	15
Dueler 661	9.50R16.5LT	E	(6.75) 6.75-825	30.6	9.5	14.4	682	10.7	15
R273 SWP	LT235/85R16	E	(6.5) 6.0-7.0	31.7	9.3	14.7	641	10.8	14
R273 SWP	LT235/85R16	D	(6.5) 6.0-7.0	31.7	9.3	14.7	641	10.8	14
R273 SWP	LT215/85R16	E	(6.0) 5.0-6.0	30.4	8.5	14.1	677	10.8	14
R273 SWP	LT225/75R16	E	(6.0) 6.0-7.0	29.3	8.8	13.6	708	10.2	14
R273 SWP	LT245/75R16	E	(7.0) 6.5-7.0	30.5	9.8	14.1	675	11.3	14
R273 SWP	8.75R16.5LT	D	(6.75) 6.0-6.75	29.5	8.8	13.8	703	9.9	14
R273 SWP	8.75R16.5LT	E	(6.75) 6.0-6.75	29.5	8.8	13.8	703	9.9	14
R273 SWP	9.50R16.5LT	D	(6.75) 6.75-825	30.6	9.5	14.2	672	10.7	14
R273 SWP	9.50R16.5LT	E	(6.75) 6.75-825	30.6	9.5	14.2	672	10.7	14
R273 SWP	7.50R16LT	D	(6.0) 5.5-6.5	31.8	8.7	14.7	638	10	14
R273 SWP	LT215/85R16	D/E	(6.0) 5.0-6.0	30.4	8.5	14.1	677	9.9	14
R273 SWP	8R17.5	E	(6.0) 5.25-6.75	30.8	8.2	13.9	674	9.2	12
R273 SWP	LT235/75R15	D	(6.5) 6.0-7.0	28.9	9.3	13.4	720	10.8	14
R273 SWP II	LT215/85R16	E	(6.5) 6.0-7.0	30.4	8.7	14.1	685	9.9	14
R273 SWP II	LT225/75R16	E	(6.0) 6.0-7.0	29.3	8.8	13.7	711	10.2	14
R273 SWP II	LT235/85R16	E	(6.5) 6.0-7.0	31.7	9.5	14.8	651	10.8	14
R273 SWP II	LT245/75R16	E	(7.0) 6.5-7.0	30.6	9.8	14.2	681	11.3	14

# Commercial Light Truck — Discontinued Products Continued

TECHNICAL DATA									
Pattern	Size	LR	Approved Rims	Overall Diameter	Overall Width	SLR	RPM	Min. Dual Spacing	Tread Depth
DURAVIS R500 HD	LT275/65R18	E	(8.0) 7.5-9.0	32.1	11.0	15.0	649	12.8	14
DURAVIS M700 HD	LT275/65R18	E	(8.0) 7.5-9.0	32.1	11.0	15.0	649	12.8	16
M773 SWP	LT235/75R15	C	(6.5) 6.0-7.0	29.0	9.3	13.4	716	10.8	16
M773 SWP	LT235/85R16	E	(6.5) 6.0-7.0	31.8	9.3	14.7	651	10.8	17
M773 SWP	LT245/75R16	E	(7.0) 6.5-7.0	30.6	9.8	14.2	711	11.3	17
M773 SWP	LT215/85R16	E	(6.0) 5.0-6.0	30.5	8.5	14.2	673	9.9	16
M773 SWP	LT225/75R16	D/E	(6.0) 6.0-7.0	29.4	8.8	13.7	704	10.2	16
M773 SWP	LT235/85R16	D	(6.5) 6.0-7.0	31.8	9.3	14.7	637	10.8	17
M773 SWP	7.50R16LT	D	(6.0) 5.5-6.5	31.9	8.7	14.8	633	10.0	16
M773 SWP	8.75R16.5LT	D/E	(6.75) 6.0-6.75	29.6	8.8	13.8	699	9.9	14
M773 SWP	8.75R16.5LT	E	(6.75) 6.0-6.75	29.6	8.8	13.8	699	9.9	14
M773 SWP	9.50R16.5LT	D	(6.75) 6.75-8.25	30.7	9.5	14.3	668	10.7	17
M773 SWP	9.50R16.5LT	E	(6.75) 6.75-8.25	30.7	9.5	14.3	668	10.7	17
M773 SWP	8R17.5	E	(6.0) 5.25-6.75	31.0	8.2	13.8	670	9.9	14
M773 SWP II	LT245/75R16	E	(7.0) 6.0-7.0	30.6	9.8	14.2	671	11.3	17
M773 SWP II	LT215/85R16	E	(6.0) 5.0-6.0	30.4	8.7	14.1	685	9.9	17
M773 SWP II	LT225/75R16	E	(6.0) 6.0-7.0	29.3	8.8	13.7	711	10.2	17
M773 SWP II	LT235/85R16	E	(6.0) 6.0-7.0	32.0	9.5	14.8	651	10.8	17
DURAVIS M773 II	LT245/75R16	E	(7.0) 6.5-7.5	30.5	9.8	14.2	683	11.3	17
DURAVIS R250	LT265/75R16	E	(7.5) 7.0-8.0	31.9	10.7	14.8	651	12.2	15
R220	7.50R16LT	G	(6.0) 5.5-6.5	31.7	8.1	14.9	659	10.0	12
R230	7.50R16LT	D	(6.0) 5.5-6.5	31.7	8.4	14.9	659	10.0	14
R230	7.50R16LT	F	(6.0) 5.5-6.5	31.7	8.4	14.9	659	10.0	14
R230	7.00R15LT	D	(5.5) 5.0-6.5	29.6	7.8	13.9	706	9.0	13
R260	8.00R-16.5LT	D	(6.75) 6.0	28.0	8.1	13.1	743	9.0	12
R260	8.75R16.5LT	D	(6.75) 6.0-6.75	28.0	8.1	13.1	743	9.0	12
R260	8.75R16.5LT	E	(6.75) 6.0-6.75	29.3	8.9	13.8	712	9.9	13
R260	9.50R16.5LT	D	(6.75) 6.75-8.25	30.4	9.5	14.3	686	10.7	13
R260	9.50R16.5LT	E	(6.75) 6.75-8.25	30.4	9.5	14.3	686	10.7	13
R265	LT235/85R16	D	(6.5) 6.0-7.0	31.7	9.3	14.9	659	10.8	14
R265	LT245/75R16	E	(7.0) 6.5-7.0	30.5	9.8	14.4	682	11.3	15
R265	LT245/75R16	E	(7.0) 6.5-7.0	30.5	9.8	14.4	682	11.3	15
R265	8R17.5	E	(6.0) 5.25-6.75	30.8	8.0	14.5	674	9.2	12
R265 V-STEEL	8R17.5	E	(6.0) 5.25-6.75	30.8	8.0	14.5	674	9.2	12
R265 V-STEEL	LT215/85R16	D	(6.0) 5.0-6.0	30.5	8.5	14.3	674	9.9	13
R265 V-STEEL	LT235/85R16	E	(6.5) 6.0-7.0	31.7	9.3	14.9	659	10.8	14
R265 V-STEEL	LT225/75R16	D	(6.0) 6.0-7.0	29.3	8.8	13.9	709	10.2	14
R265 V-STEEL	LT225/75R16	E	(6.0) 6.0-7.0	29.3	8.8	13.9	709	10.2	14
R250	LT245/75R16	E	(7.0) 6.5-7.0	30.7	10	14.2	677	11.3	14
R250	LT265/75R16	E	(7.5) 7.0-8.0	31.9	10.7	14.8	651	12.2	15
VSXA	8R17.5	E	(6.0) 5.25-6.75	31.0	7.8	14.6	673	9.2	18
VSXA	7.50R16	G		31.9	8.4	15.0	654	10.0	18
VSXC	7.50R16	D	(6.0) 5.5-6.5	31.9	8.4	15	654	10	18
VSXC	7.50R16	E	(6.0) 5.5-6.5	31.9	8.4	15	654	10	18
VSXC	LT235/85R16	E	(6.5) 6.0-7.0	32	9.3	14.9	657	10.8	18
R187	LT225/75R16	E	(6.0) 6.0-7.0	29.3	8.8	13.8	711	10.2	14
R187	LT235/85R16	E	(6.5) 6.0-7.0	31.7	9.3	14.8	660	9.9	15
R187	LT225/75R16	E	(6.0) 6.0-7.0	29.3	8.8	13.8	711	10.8	14

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins



NOTES

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins

Handwritten notes area with horizontal lines for writing.



## General Technical Information

### Table of Contents

Adjustment Treadwear Chart .....	60
Truck Tire Limited Warranty .....	61
Commercial Tire Tubes, Valves & Flaps .....	67
Radial and Bias Tire Construction .....	68
Definitions .....	69
Ply Rating/Load Range .....	71
Load Index .....	71
Speed Symbol .....	71
Inflation Pressure .....	72
Tire Mixing .....	72
Dual Matching .....	73
Medium Truck Tire Approved Rim Width & Minimum Dual Spacing .....	73
Tire Rotation .....	74
Regrooving .....	74
Branding .....	74
Wheel Alignment .....	75
Balance/Runout .....	76
Tire Mounting for Low Vibration .....	77
Storage .....	78
Tire Inspection .....	79
Noise Regulation .....	79
Irregular Wear of Radial Truck Tires .....	79
Low Profile Tires .....	79
Mounting/Demounting Procedures .....	80
Tire Vibration .....	82
Repair and Retreading .....	83
Large Truck Fuel Economy .....	83
Truck Type by Weight Class .....	88

# Adjustment Treadwear Chart

	Original Tread Depth																																
Remaining Tread Depth	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	Remaining Tread Depth						
	Percentage of Usable Tread Wear Charges to the Customer																																
2/32	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	100%	2/32						
3/32	86	88	89	90	91	92	92	93	93	94	94	94	95	95	95	95	96	96	96	96	96	96	97	97	97	97	3/32						
4/32	71	75	78	80	82	83	85	86	87	88	88	89	89	90	90	91	91	92	92	92	93	93	93	93	94	94	4/32						
5/32	57	63	67	70	73	75	77	79	80	81	82	83	84	85	86	86	87	88	88	88	89	89	90	90	90	91	5/32						
6/32	43	50	58	60	64	67	69	71	73	75	76	78	79	80	81	82	83	83	84	85	85	86	86	87	87	88	6/32						
7/32	29	38	44	50	55	58	62	64	67	69	71	72	73	75	76	77	78	79	80	81	81	82	83	83	84	84	7/32						
8/32	14	25	33	40	45	50	54	57	60	63	65	67	68	70	71	73	74	75	76	77	78	79	79	80	81	81	8/32						
9/32	0	13	22	30	36	42	46	50	53	56	59	61	63	65	67	68	70	71	72	73	74	75	76	77	77	78	9/32						
10/32		0	11	20	27	33	38	43	47	50	53	56	58	60	62	64	65	67	68	69	70	71	72	73	74	75	10/32						
11/32			0	10	18	25	31	36	40	44	47	50	53	55	57	59	61	63	64	65	67	68	69	70	71	72	11/32						
12/32				0	9	17	23	25	33	38	41	44	47	50	52	55	57	58	60	62	63	64	66	67	68	69	12/32						
13/32					0	8	15	21	29	31	35	39	42	45	48	50	52	54	56	58	59	61	62	63	65	66	13/32						
14/32						0	8	14	20	25	29	33	37	40	43	45	48	50	52	54	56	57	59	60	61	63	14/32						
15/32							0	7	13	19	24	28	32	35	38	41	43	46	48	50	52	54	55	57	58	59	15/32						
16/32								0	7	13	17	22	26	30	33	36	39	42	44	46	48	50	52	53	55	56	16/32						
17/32									0	6	12	18	21	25	29	32	35	38	40	42	44	46	48	50	52	53	17/32						
18/32										0	6	11	16	20	24	27	30	33	36	38	41	43	45	47	48	50	18/32						
19/32											0	6	11	15	19	23	26	29	32	35	37	39	41	43	45	47	19/32						
20/32												0	5	10	14	18	22	25	28	31	33	36	38	40	42	44	20/32						
21/32													0	5	10	14	17	21	24	27	30	32	34	37	39	41	21/32						
22/32														0	5	9	13	17	20	23	26	29	31	33	35	38	22/32						
23/32															0	5	9	13	16	19	22	25	28	30	32	34	23/32						
24/32																0	4	8	12	15	19	21	24	27	29	31	24/32						
25/32																	0	4	8	12	15	18	21	23	26	28	25/32						
26/32																		0	4	8	11	14	17	20	23	25	26/32						
27/32																			0	4	7	11	14	17	19	22	27/32						
28/32																				0	4	7	10	13	16	19	28/32						
29/32																					0	4	7	10	13	16	29/32						
30/32																						0	3	7	10	13	30/32						
31/32																							0	3	6	9	31/32						
32/32																								0	3	6	32/32						
33/32																									0	3	33/32						
34/32																										0	34/32						

CONVENTIONAL DESIGN

CLEATED TREAD DESIGN

GAUGE REMAINING TREAD DESIGN DEPTH IN THESE GROOVES


### HOW TO CALCULATE ADJUSTMENT PRICES

- Find the original tread depth in the price/data book.
- Using 32nds gauge, measure the remaining tread at three points in the two center grooves and average the three measurements.
- Where the averaged tread depth remaining line meets the appropriate original tread depth column, the percentage of tread worn off the tire will be found.
- Use this percentage to

### WITH A TIRE-MARKING CRAYON, MARK ON THE ADJUSTED TIRE:

- Location of the service condition (circled).
- Adjustment Claim Number
- Retailer Name
- Rub across the DOT serial number so it can be easily read.

**Make sure the customer COMPLETES and SIGNS the CUSTOMER section of the Adjustment Form!**

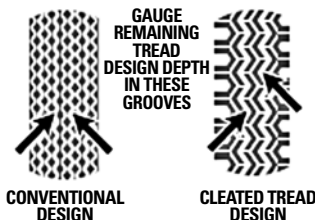

## HOW TO CALCULATE ADJUSTMENT PRICES

1. Find the original tread depth in the price/data book.
2. Using 32nds gauge, measure the remaining tread at three points in the two center grooves and average the three measurements.
3. Where the averaged tread depth remaining line meets the appropriate original tread depth column, the percentage of tread worn off the tire will be found.
4. Use this percentage to calculate the customer's replacement price.

## WITH A TIRE-MARKING CRAYON, MARK ON THE ADJUSTED TIRE:

1. Location of the service condition (circled).
2. Adjustment Claim Number
3. Retailer Name
4. Rub across the DOT serial number so it can be easily read.

**Make sure the customer COMPLETES and SIGNS the CUSTOMER section of the Adjustment Form!**

## Truck Tire Limited Warranty

### Eligibility

You are covered under the terms of this Limited Warranty if all of the following apply:

- You are the original owner, or original owner's authorized agent, of any new Bridgestone brand truck tire bearing a Department of Transportation (DOT) tire identification number indicating manufacture after January 1, 2005 (DOT serial 0105 or later).
- The tire size, load range, and speed rating are equivalent to or greater than, that specified or recommended for use by the vehicle manufacturer or Bridgestone.
- The new tire was approved for sale in the United States, listed in a U.S. price or data book, and purchased from an authorized Bridgestone brand truck tire retailer.
- For coverage under the Premium Casing Enhanced Limited Warranty, the tire and subsequent retread(s) must be inspected and retreaded by an authorized Bandag dealer only.

### What Is Warranted And For How Long

Upon examination by Bridgestone, before wearing down to 2/32 inch (1.6 mm) remaining original tread depth (i.e. worn down to the top of the built-in indicators in the original tread grooves) and within five years (seven years for certain tires, see the section entitled "Premium Casing Enhanced Limited Warranty") from the date of tire manufacture, any eligible tire that becomes unusable for any reason (see exclusions in the section entitled "What This Limited Warranty Does Not Cover") within the manufacturer's control will either be repaired or replaced with an equivalent new Bridgestone brand truck tire on the basis set forth in this Limited Warranty.

### What This Limited Warranty Does Not Cover

This Limited Warranty does not cover the following:

1. Tire damage due to:
  - A. Road hazards**, including, without limitation: Puncture, cut, impact break, stone drill, bruise, bulge, snag, etc.
  - B. Improper use or operation**, including, without limitation: Improper inflation pressure, overloading, tire/wheel spinning, curbing, use of an improper rim/wheel, tire chain damage, misuse, misapplication, negligence, tire alteration, or for racing or competition purposes.

**C. Insufficient or improper maintenance**, including, without limitation: Wheel misalignment, worn suspension components, improper tire mounting or demounting, tire/wheel assembly imbalance, improper brake adjustment, or other vehicle conditions, defects, or characteristics.

**D. Contamination or degradation** by petroleum products or other chemicals, fire or other externally generated heat, or water or other material trapped inside the tire during mounting or inflation.

2. Irregular wear, rapid wear, or wear-out; no mileage warranty is expressed or implied.
3. Weather/ozone cracking after four years from date of tire manufacture.
4. Tires subjected to severe under-inflation or run-flat conditions.
5. Tires that have been improperly repaired.
6. Tires rendered unretreadable due to excessive tread wear or improper buffing.
7. Tires improperly retreaded, including, without limitation: Improper or inadequate inspection, preparation, equipment, material, repair, etc.
8. Ride disturbance or vibration after tread wear use beyond 10% of original usable tread depth.
9. If tire damage is the result of sealant, balance, or other filler material that was not originally applied or inserted by the tire manufacturer.
10. Tires inflated with anything other than air or nitrogen.
11. Tires purchased or used outside of the United States.
12. The cost of applicable federal, state, and local taxes.
13. Failure to follow any of the safety and maintenance recommendations or warnings contained in this manual.

This Limited Warranty is in addition to and/or may be limited by any other applicable written warranty you may have received concerning special tires or situations.

### No-Charge Replacement

Bridgestone brand truck tires adjusted under this Limited Warranty will be replaced free of charge (Federal Excise Tax included) up to the first 10% of original usable tread depth or within 12 months from date of purchase (proof of purchase date required; without proof of purchase date, then within 12 months

from the date of tire manufacture), whichever occurs first. The cost of mounting and balancing and other service charges, disposal fees, or applicable taxes are payable by you.

### Pro-Rated Replacement

Bridgestone brand truck tires adjusted under this Limited Warranty that are worn beyond the first 10% of original usable tread depth, or 12 months from the date of purchase (proof of purchase date required; without proof of purchase date, then 12 months from the date of tire manufacture) has passed, the tire will, at Bridgestone's option, be repaired or replaced with an equivalent new Bridgestone brand truck tire on a pro rata basis. To determine the replacement price, the percent of used tread wear is multiplied by the current selling price for the replacement tire(s). The cost of mounting, balancing, full Federal Excise Tax, and other service charges, disposal fees, or applicable taxes are payable by you.

### Premium Casing Enhanced Limited Warranty

You are covered under the terms of the Premium Casing Enhanced Limited Warranty if all of the following criteria are met:

- You are the original owner, or original owner's authorized agent, of a Bridgestone R287, R280, M726EL, or M720 truck tire purchased from an authorized Bridgestone brand truck tire retailer in the United States.
- For coverage under the Premium Casing Enhanced Limited Warranty, the tire and subsequent retread(s) must be inspected and retreaded by an authorized Bandag dealer only.
- The tire size is 11R22.5, 11R24.5, 295/75R22.5, or 285/75R24.5--each size in either Load Range G or H.
- The tire was purchased on or after November 1, 2007.
- The tire was used only in over-the-highway service (for the entire life of the casing).
- The tire has not come out of service for any reason listed in "What This Limited Warranty Does Not Cover."
- The tire has been maintained in accordance with the maintenance and safety information contained in this manual.

If any tire eligible under the Premium Casing Enhanced Limited Warranty becomes unusable for any reason (see exclusions in the section entitled "What This Limited Warranty Does Not Cover") within the manufacturer's control within seven years from the date of manufacture and within 3 retreads of covered service, the casing credit will be as follows:

ORIGINAL TREAD	\$130.00
1st, 2nd, or 3rd RETREAD	\$100.00

### Replacement Warranty

If you receive a replacement tire under this Limited Warranty, it will be covered by the manufacturer's warranty, if any, given on that tire at that time.

### Where to Go

Tire adjustments under this Limited Warranty will only be made at an authorized Bridgestone brand truck tire retailer in the United States. Consult a phone directory (often listed in the Yellow Pages under "Tire Dealers"), the internet at [www.trucktires.com](http://www.trucktires.com), or call 1-800-815-9793 for the location nearest you.

### Consumer Rights

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### Conditions and Exclusions

To the extent permitted by law, Bridgestone Americas Tire Operations, LLC disclaims all other warranties, including but not limited to the implied warranties of merchantability and fitness for a particular purpose and any liability for incidental and consequential damages, loss of time, loss of vehicle use, or inconvenience. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This Limited Warranty applies only to consumers actually using the tire in the United States.

Obligations under this policy may not be enlarged or altered by anyone.

In accordance with Federal Law, this Limited Warranty has been designated as a "Limited Warranty." Nothing in this Limited Warranty is intended to be a representation that tire failures cannot occur. This Limited Warranty is given in the United States by Bridgestone Americas Tire Operations, LLC, 535 Marriott Dr., Nashville, TN 37214.

### Owner's Obligations

It is your obligation to maintain proper tire inflation pressures as specified by the vehicle manufacturer and to operate the vehicle within tire/vehicle load capacity and speed limitations. It is also your obligation to maintain proper wheel alignment and tire/wheel assembly balance.

To request an adjustment, you must present the tire to an authorized Bridgestone brand truck tire retailer. Your vehicle on which the tire was equipped must also be available for inspection. Complete and sign the customer section of the Bridgestone Americas Tire Operations, LLC Limited Warranty adjustment form and pay appropriate

replacement price, taxes, disposal fee, and service charges, if any. Tires accepted for warranty compensation become the property of Bridgestone Americas Tire Operations, LLC.

## Arbitration

You and Bridgestone Americas Tire Operations, LLC agree that all claims, disputes, and controversies between you and it, including any of its agents, employees, successors, or assigns, arising out of or in connection with this Limited Warranty, or any other warranties, express or implied, including a failure of warranty and the validity of this arbitration clause, but excluding claims for personal injury or property damage, shall be resolved by binding arbitration between you and it, according to the formal dispute resolution procedures of the National Arbitration Forum, under the Code of Procedure then in effect. This arbitration will be conducted as a document

hearing. If you request any procedures beyond a document hearing, you will be responsible for all fees, including filing and administrative fees, above and beyond the fees required for document hearings. The arbitration between you and Bridgestone Americas Tire Operations, LLC shall not include any other customers, be combined or consolidated in any fashion with arbitrations involving other customers, or proceed in any form of class action in which the claims of numerous customers are considered together. Any award of the arbitrator(s) may be entered as a judgment in any court of competent jurisdiction. The arbitrators will have no authority to award punitive or other damages not measured by the prevailing party's actual damages, except as may be required by statute. Information may be obtained and claims may be filed at any office of the National Arbitration Forum or at P.O. Box 50191, Minneapolis, MN 55405.

## IMPORTANT SAFETY INFORMATION

Any tire, no matter how well constructed, may fail in use as a result of punctures, impact damage, improper inflation, overloading, or other conditions resulting from use or misuse. Tire failure may create a risk of property damage, serious personal injury or death.

## SAFETY WARNING

Serious personal injury or death may result from a tire failure. Many tire failures are preceded by vibration, bumps, bulges or irregular wear. If a vibration occurs while driving your vehicle or you notice a bump, bulge or irregular wear, have your tires and vehicle evaluated by a qualified tire service professional.

**To reduce the risk of tire failure, Bridgestone Americas Tire Operations, LLC strongly recommends you read and follow all safety information contained in this manual, tire industry publications such as those published by the Rubber Manufacturer's Association (RMA), and tire mounting procedures published by the Occupational Safety and Health Administration (OSHA) of the U. S. Department of Labor. In addition, we recommend periodic inspection and maintenance, if necessary, by a qualified tire service professional.**

## TIRE INFLATION PRESSURE

Tires need proper inflation pressure to operate effectively and perform as intended. Tires carry the vehicle, passenger, and cargo loads and transmit the braking, acceleration, and turning forces. The vehicle manufacturer recommends the inflation pressures for the tires mounted on your vehicle.

## SAFETY WARNING

Driving on tires with improper inflation pressure is dangerous.

- Under-inflation causes excessive tire heat build-up and internal structural damage.
- Over-inflation makes it more likely for tires to be cut, punctured, or broken by sudden impact.

These situations can cause a tire failure, even at a later date, which could lead to serious personal injury or death. Consult the vehicle tire information placard and/or owner's manual for the recommended inflation pressures.

In addition to tire damage, improper inflation pressure may also:

- Adversely affect vehicle ride and handling.
- Reduce tire tread wear.
- Affect fuel economy.

Therefore, follow these important recommendations for tire and vehicle safety, mileage, and economy:

- Always keep the vehicle manufacturer's recommended inflation pressure in all your tires, including inside duals.
- Check their pressure at preventative maintenance intervals and during pre-trip vehicle inspections.

Your vehicle's tire information placard and/or owner's manual will tell you the recommended cold inflation pressure for all your tires. For tractor/trailers, a placard is applied to each. For questions about locating or understanding the tire information placard(s), consult your vehicle owner's manual or ask a qualified tire service professional.

### Maximum Pressure Indicated on the Tire Sidewall:

This is the maximum permissible inflation pressure for the tire only. The vehicle manufacturer's recommended tire pressures may be lower than, or the same as, the maximum pressure indicated on the tire sidewall. The vehicle manufacturer's specification



of tire pressure is limited to your particular vehicle and takes into account your vehicle's load, ride, and handling characteristics, among other criteria. Since there may be several possible vehicle applications for a given tire size, a vehicle manufacturer may choose a different inflation pressure specification for that same size tire on a different vehicle. Therefore, always refer to the inflation pressure specifications on the vehicle tire information placard and/or in your vehicle owner's manual.

**Pressure Loss:** Truck tires can lose 2 psi (14 kPa) per month under normal conditions and can lose 2 psi (14 kPa) for every 10°F (5.6°C) temperature drop. A puncture, leaking valve, or other damage could also cause inflation pressure loss. If a truck tire loses more than 4 psi (28 kPa) per month, have it checked by a qualified tire service professional.

## TIPS FOR SAFE TIRE INFLATION

### SAFETY WARNING

Inflating an unsecured tire is dangerous. If it bursts, it could be hurled into the air with explosive force resulting in serious personal injury or death. Never adjust the inflation pressure of a truck tire unless it is placed in a safety cage or is secured to the vehicle or a tire mounting machine. Never stand or lean over the tire or in front of the valve when inflating.

### SAFETY WARNING

Never re-inflate a truck tire that has been run at very low inflation pressure (i.e. 80% or less of normal operating pressure) without a complete inspection of the entire tire. Immediately have the tire demounted and inspected by a qualified tire service professional.

- The U.S. Department of Transportation requires a pre-trip vehicle inspection. Pre-trip vehicle inspections and preventative maintenance should include cold-tire inflation pressure checks. Don't forget to check the inflation pressure of inside duals.
- The only correct method for checking inflation pressure is to use an accurate tire inflation gauge. Kicking or thumping a tire will only tell you when a tire is totally flat.
- Check inflation pressure when the tires are "cold." Tires are considered "cold" when the vehicle has been parked for three hours or more, or if the vehicle has been driven less than a mile at moderate speed.
- Never release pressure from a hot tire in order to reach the recommended cold tire pressure. Normal driving causes tires to run hotter and inflation pressure to increase. If you reduce inflation pressure when your tires are hot, you may dangerously under inflate your tires.

- If it is necessary to adjust inflation pressure when your tires are "hot," set their pressure to 10 psi (69 kPa) above the recommended cold inflation pressure. Recheck the inflation pressure when the tires are cold.
- If your tires lose more than 4 psi (28 kPa) per month, the tire, tube (if applicable), valve, or rim/wheel may be damaged. Consult a qualified tire service professional for an inspection.
- A difference of 5 psi (35 kPa) or more between duals is not recommended.
- Use valve caps to keep the valves clear of debris and to help guard against inflation pressure loss.

## TIPS FOR SAFE LOADING

### SAFETY WARNING

Driving your vehicle in an overloaded condition is dangerous. Overloading causes excessive tire heat build-up and internal structural damage. This can cause a tire failure, even at a later date, which could lead to serious personal injury or death. Consult the vehicle tire information placard, certification label, and owner's manual for the recommended vehicle load limits and loading recommendations.

- Always keep the vehicle manufacturer's recommended inflation pressure in all your tires, including inside duals. Check their pressure at preventative maintenance intervals and during pre-trip vehicle inspections.
- Never exceed the maximum load rating stamped on the sidewall of your tire.
- Never exceed the gross vehicle weight rating (GVWR) or gross axle weight ratings (GAWR) of your vehicle.
- Never exceed the maximum load or inflation pressure capacity of the rim/wheel.
- Consult your vehicle owner's manual for load recommendations and special instructions (such as for carrying unusually heavy loads).

## TIRE DAMAGE AND INSPECTION

Evaluation and maintenance of your tires is important to their performance and the service they provide to you. Over time and/or through use, the condition of a tire can change from exposure to everyday road conditions, the environment, damaging events such as punctures, and other external factors.

### SAFETY WARNING

Driving on damaged tires is dangerous. A damaged tire can suddenly fail causing serious personal injury or death. Have your tires regularly inspected by a qualified tire service professional.

You should visually inspect your tires during pre-trip vehicle inspections and inflation pressure checks. In

addition, have your tires periodically evaluated by a qualified tire service professional when your vehicle is serviced such as routine maintenance intervals, oil changes, and tire rotations. In particular, note the following tips for spotting tire damage:

- After striking anything unusual in the roadway, have a qualified tire service professional demount the tire and inspect it for damage. A tire may not have visible signs of damage on the tire surface. Yet, the tire may suddenly fail without warning, a day, a week, or even months later.
- Inspect your tires for cuts, cracks, splits or bruises in the tread and sidewall areas. Bumps or bulges may indicate a separation within the tire body. Have your tire inspected by a qualified tire service professional. It may be necessary to have it removed from the rim/wheel for a complete inspection. Do not delay performing any necessary repair(s).
- Inspect your tires for adequate tread depth. When the tire is worn to the built-in indicators at 2/32 inch (1.6 mm) or less tread groove depth, or the tire cord or fabric is exposed, the tire is dangerously worn and must be replaced immediately.
- Federal regulations require steer axle tires to have 4/32 inch (3.2 mm) or greater tread depth on vehicles over 10,000 lbs (4536 kg) GVWR.

## SAFETY WARNING

Driving on an improperly repaired tire is dangerous. An improper repair can be unreliable or permit further damage to the tire. The tire may suddenly fail, causing serious personal injury or death. A complete inspection and repair of your tire in accordance with Rubber Manufacturers Association (RMA) procedures should be conducted by a qualified tire service professional.

The comprehensive procedures and recommendations for truck tire repair are beyond the scope of this manual; however, note the following:

- The tire must be demounted from the rim/wheel for a complete inspection, inside and out. Some damage to the tire may only be evident on the interior of the tire. Any tire repair done without removing the tire from the rim/wheel is improper.
- A patch must be applied to the interior of the tire and the puncture hole filled with suitable plug/stem filler. This helps ensure that the interior of the tire is adequately sealed to prevent inflation pressure loss and prevents contamination of the steel belts and other plies from the elements (such

- Inspect your tires for uneven wear. Wear on one side of the tread or flat spots in the tread may indicate a problem with the tire or vehicle. Consult a qualified tire service professional.
- Inspect your rims/wheels also. If you have a bent, chipped, or cracked rim/wheel, it must be replaced.

## TIRE MANUFACTURE DATE

The tire manufacture date is determined by examining the DOT tire identification number, also known as the DOT serial number or code, which can be found on at least one sidewall near the rim/wheel. It may be necessary to look on both sides of the tire to find the entire serial code.

**Tires Produced Since 2000:** The last four (4) digits of the serial code identify the week and year of production. For example, a tire with a serial code ending in "2406" would have been produced in the 24th week of 2006.

**Tires Produced Prior to 2000:** The last three (3) digits of the serial code identify the week and year of production. For example, a tire with a code ending in "329" would likely have been produced in the 32nd week of 1999, but possibly produced in 1989. If in doubt, consult a qualified tire service professional.

## TIRE REPAIRS

as water) in the outside world. Using only a plug/stem, or using only a patch, is not a safe or proper repair.

- The truck/bus tire puncture repair injury limit to the tread area is 3/8 inch (10 mm). Larger injuries, or damage in areas outside the tread, should be evaluated and repaired, if possible, by qualified tire service professionals at a full-service repair facility using RMA-approved procedures.
- Never substitute a tube for a proper repair or to remedy an improper repair.
- Not all punctured or damaged tires can be properly repaired; consequently, they must be replaced.
- Repair and retread, if possible, tires having a tread depth of 2/32 inch (1.6 mm) or less remaining in any tread groove.
- Tubes, like tires, should only be repaired by a qualified tire service professional.
- Any Improper repair voids the tire Limited Warranty. See "Limited Warranty" in this manual.

## REMOVING TIRE/WHEEL ASSEMBLY FROM VEHICLE

### SAFETY WARNING

Always follow the manufacturer's recommend procedure for securing and raising your vehicle prior to attempting to remove a tire.

### SAFETY WARNING

If the tire has internal damage, it may burst with explosive force, causing serious personal injury or death. Always deflate a tire and wheel assembly completely before loosening any lug nut when removing a tire from a vehicle for service or demounting. On dual wheel assemblies, both tires should be deflated and removed before any work is started.

## TIRE MOUNTING AND OTHER SERVICING

### SAFETY WARNING

Removing and replacing tires on wheels can be dangerous. Attempting to mount tires with improper tools or procedures may result in a tire explosion causing serious personal injury or death. This is only a job for a qualified tire service professional. Never perform tire service procedures without proper training, tools, and equipment.

This manual is not intended to provide proper training or service procedures for tire mounting, demounting, balancing, rotation, or repair. Please leave these tasks to qualified tire service professionals.

Only specially trained persons should mount tires. For proper mounting procedures, consult the requirements of the Occupational Safety and Health Administration (OSHA) of the U S Department of Labor and procedures published by the Rubber Manufacturers Association, 1400 K Street, NW Washington, D. C. 20005 ([www.rma.org](http://www.rma.org)).

### SAFETY WARNING

Inflating an unsecured tire is dangerous. If it bursts, it could be hurled into the air with explosive force resulting in serious personal injury or death.

- Always stand well clear of any tire mounting operation. This is especially important when the service operator inflates the tire.
- When inflating a tire after mounting on a rim/wheel, always use a safety cage and an extension hose with pressure gauge and clip-on chuck.
- Never adjust the inflation pressure of a truck tire unless it is placed in a safety cage or is secured to the vehicle or a tire mounting machine.
- Never stand or lean over the tire or in front of the valve when inflating.

### SAFETY WARNING

Never pour or spray any flammable substance into or onto a tire or rim/wheel for any purpose whatsoever. The residue left by the substance could result in a fire or explosion which may cause severe injury or death.

### SAFETY WARNING

Never put flammable substances such as gasoline or ethyl ether into a tire and light with a match/flame so that the resulting explosion seats the beads of a tubeless tire. This practice is extremely dangerous and may result in a severe explosion or undetected damage to the tire or rim/wheel which may cause a failure resulting in severe injury or death.

- Tires must match the width and diameter requirements of the wheels. For example, 22.5 inch diameter tires must only be mounted to 22.5 inch diameter rims/wheels. Radial tires must only be mounted to wheels approved for radial tires.
- Inspect the tire and rim/wheel. Rims/wheels must be free of cracks, dents, chips, and rust. Tires must be free of bead damage, cuts, punctures, foreign material, and moisture.
- For a tubeless truck tire, always install a new valve, or new valve core and cap, each time a new or re-treaded tire is installed.
- For a tube-type truck tire, always use a new, proper size tube and flap each time a new or re-treaded tire is installed.
- Use only vegetable oil-based lubricants in mounting or demounting.
- Always ensure rim components fit properly before inflating.
  - Never tap component parts with a tool/hammer/mallet while tire is inflated.
  - Never attempt to disassemble multi-piece rims while inflated.
- Never inflate a tire beyond 40 psi (275 kPa) to seat the beads. Be absolutely certain beads are fully seated before adjusting inflation pressure to the level recommended for vehicle operation.
- Use valve caps to keep the valves clear of debris and to help guard against inflation pressure loss.
- Always stand well away from the work area when tires are being spin-balanced either on or off the vehicle.

## TIRE MIXING

### SAFETY WARNING

Driving your vehicle with an improper mix of tires is dangerous. Your vehicle's handling characteristics can be seriously affected. You could have an accident resulting in serious personal injury or death. Consult your vehicle owner's manual and a qualified tire service professional for proper tire replacement.

## DUAL MATCHING

Tires paired in a dual assembly should be matched in tire construction and dimension. Improperly matched tires may result in irregular wear, rapid wear, and premature tire failure. Failure to match tires in a dual assembly may result in sudden tire destruction.

For radial tires, properly paired dimension tolerances are as follows:

- Diameter: within 1/4 inch (6.4 mm) of each other
- Circumference: within 3/4 inch (19 mm) of each other

## HIGH SPEED DRIVING

### SAFETY WARNING

Driving at high speed is dangerous and can cause a vehicle accident, including serious personal injury or death.

- Regardless of the speed and handling capabilities of your vehicle and its tires, a loss of vehicle control can result from exceeding the maximum speed allowed by law or warranted by traffic, weather, vehicle, or road conditions.
- High-speed driving should be left to trained professionals operating under controlled conditions.
- No tire, regardless of its design or speed rating, has unlimited capacity for speed, and a sudden tire failure can occur if its limits are exceeded. See "Tire Speed Restrictions," the next section in this manual.

Refer to your vehicle owner's manual for any tire pressure recommendations for high speed driving.

## TIRE SPEED RESTRICTIONS

Bridgestone brand truck tires have maximum recommended speeds. When replacing your tires, check your vehicle owner's manual and tire information placard and consult with a Bridgestone brand truck tire retailer for recommendations and information about tire speed capability.

The speed capabilities of truck tires are based on standardized laboratory tests under specific, controlled conditions. While these tests may relate to performance on the road, real-world driving is rarely identical to any test conditions. Your tire's actual speed capability may be less since it is affected by

factors such as inflation pressure, load, tire condition (including damage), wear, vehicle condition (including alignment), driving conditions, and duration at which the speed is sustained.

## TIRE SPINNING

### SAFETY WARNING

Spinning a tire to remove a vehicle stuck in mud, ice, snow, or wet grass can be dangerous. A tire spinning at a speedometer reading above 35 mph (55 km/h) can in a matter of seconds reach a speed capable of disintegrating a tire with explosive force. Under some conditions, a tire may be spinning at a speed twice that shown on the speedometer. This could cause serious personal injury or death to a bystander or passenger. Never spin a tire above a speedometer reading of 35 mph (55 km/h).

## TIRE STORAGE

Tires should be stored indoors in a cool, dry place where water cannot collect inside them. Tires should be placed away from electric generators/motors and sources of heat such as hot pipes. Storage surfaces should be clean and free of grease, gasoline, diesel fuel, or other substances which can deteriorate the rubber.

### SAFETY WARNING

Improper storage can damage your tires in ways that may not be visible and can lead to a failure resulting in serious personal injury or death.

The spare tire in your vehicle is intended to be used as a spare when needed. The spare tire carrier is not intended to be used for long term storage.

## TIRE SERVICE CUSTOMER SATISFACTION

Normal tire maintenance and Limited Warranty services are available at locations across the U.S.A. Visit us on the internet at [www.trucktires.com](http://www.trucktires.com), or call 1-800-815-9793 to find an authorized Bridgestone brand truck tire retailer nearest you.

Additional information on the care and service of truck tires is available from the following organizations:

### Rubber Manufacturers Association

1400 K Street, N.W.

Washington, DC 20005-2403

[www.rma.org](http://www.rma.org)

### Rubber Association of Canada

2000 Argentia Road, Plaza 4, Suite 250

Mississauga, Ontario L5N 1W1

[www.rubberassociation.ca](http://www.rubberassociation.ca)

## TIRE REGISTRATION

Registration of your tires is an important safety precaution since it enables the manufacturer to notify you in the event of a recall. When you

purchase replacement tires, the retailer will provide a registration card on which the tire identification numbers have been recorded; fill in your name and address on the card and mail it promptly. Some retailers may submit the registration for you. You do not need to register tires which come as original equipment on new vehicles—the vehicle and tire manufacturers handle that for you.

### Conditions and Exclusions

1. To the extent permitted by law, Bridgestone disclaims liability for any consequential damages, loss of time, loss of vehicle usage or inconvenience.
2. All implied warranties, including warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of this limited warranty.
3. No Bridgestone employee, dealer or representative has the authority to make any representation, promise or agreement, which in any way varies from the terms and conditions of this warranty.

### Legal Rights

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above such limitations or exclusions may not apply to you.



## Commercial Tire Tubes, Valves & Flaps

### Medium Tire Tubes, Valves & Flaps

TIRE SIZE	TUBE	VALVE	FLAP
11.00R24	11.00/12.00R24	TR444	24R8
12.00R24	11.00/12.00R24	TR444	24R9

### Light Truck

Tube Size	Article Number	Description
6.00/7.00R15	539-155	TR150 W
7.50R16	539-147	TR150 CW
7.50R16	539-163	TR177A Steel Valve 20mm offset
7.50R16	938-068	FLAP 20mm offset



## Radial and Bias Tire Construction

Medium Truck

Light Truck


General Technical

Load/Inflation

Technical Bulletins



Radial

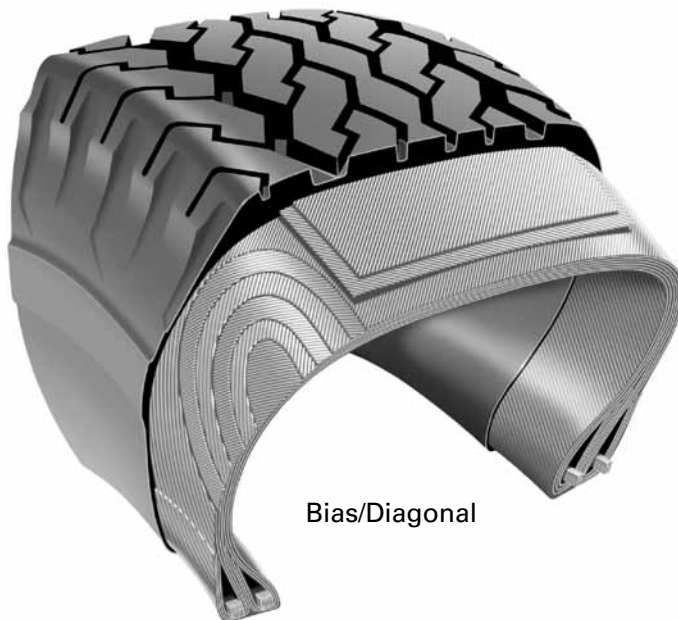

Bias/Diagonal

Radial tire body ply cords are placed straight across the tire from bead to bead. In addition, radial tires have belt plies, which run circumferentially around the tires, under the tread. They constrict the radial ply cords and stabilize the tread area.

Bias/Diagonal tires have multiple layers of plies with the cords in adjacent plies running in alternate diagonal directions from bead to bead. The tires may also have narrow plies under the tread, called breakers, with cords that lie in approximately the same direction as the body ply cords.

The type of construction can be determined by looking at the size designation molded on the tire's sidewall. Radial truck tire sizes have an "R" in the size designation while bias/diagonal truck tire sizes have a hyphen in the size description. For example a 10.00R20 tire is a radial, while a 10.00-20 tire is a non-radial.

In addition, ALL radial tires have the word "RADIAL" molded onto the sidewall. All radial truck tires also use an "R" in the size designation, e.g., 285/75R24.5.

## Definitions

### 1. Tire Size Designation

**10.00 R 20 14 (G)**

Load Range  
Ply Rating  
Tube Type Rim Diameter in Inches (5° Tapered Bead)  
Radial Construction  
Nominal Section Width in Inches (Conventional)

**11 R 22.5 14 (G)**

Load Range  
Ply Rating  
Tubeless Rim Diameter in Inches (15° Tapered Bead)  
Radial Construction  
Nominal Section Width in Inches (Conventional)

**285/75 R 24.5 14 (G)**

Load Range  
Ply Rating  
Tubeless Rim Diameter in Inches (15° Tapered Bead)  
Radial Construction  
Aspect Ratio  
Nominal Section Width in Millimeters (Metric)

**315/80 R 22.5 20 (L)**

Load Range  
Ply Rating  
Tubeless Rim Diameter in Inches (15° Tapered Bead)  
Radial Construction  
Aspect Ratio  
Nominal Section Width in Millimeters (Metric)

**445/50 R 22.5 20 (L)**

Load Range  
Ply Rating  
Tubeless Rim Diameter in Inches (15° Tapered Bead)  
Radial Construction  
Aspect Ratio  
Nominal Section Width in Millimeters (Metric)

## 2. Truck Tire Dimensions

### Aspect Ratio

$$\text{Aspect Ratio} = \frac{\text{Section Height}}{\text{Section Width}}$$

### Overall Diameter

The measurement of the distance of an unladen tire from tread surface to tread surface on opposite sides of the tire.

### Overall Width

Measurement of the cross section of an unladen tire, including ribs and protrusions. Usually the same as section width on radial tires.

### Section Width

Measurement of the cross section of an unladen tire across the casing only – not including ribs or protrusions.

### Tread Width

Distance across the tread face of an unladen tire.

### Tread Depth

Distance from tread surface to major groove base at designated measuring point.

### Section Height

Distance from the bead seat to the tread surface of an unladen tire.

### Rim Width

Distance between the rim flanges.

### Nominal Rim Diameter

Diameter of the rim from bead seat to bead seat in inches.

### Static Loaded Radius


Distance from the center of the axle to the ground of a loaded tire under maximum dual load and inflation as stamped on the sidewall of the tire.

### Loaded Width

The maximum section width of a loaded tire under maximum dual load and inflation as stamped on the sidewall of the tire.

### Minimum Dual Spacing

The minimum allowable distance between the wheel center lines in a dual arrangement.

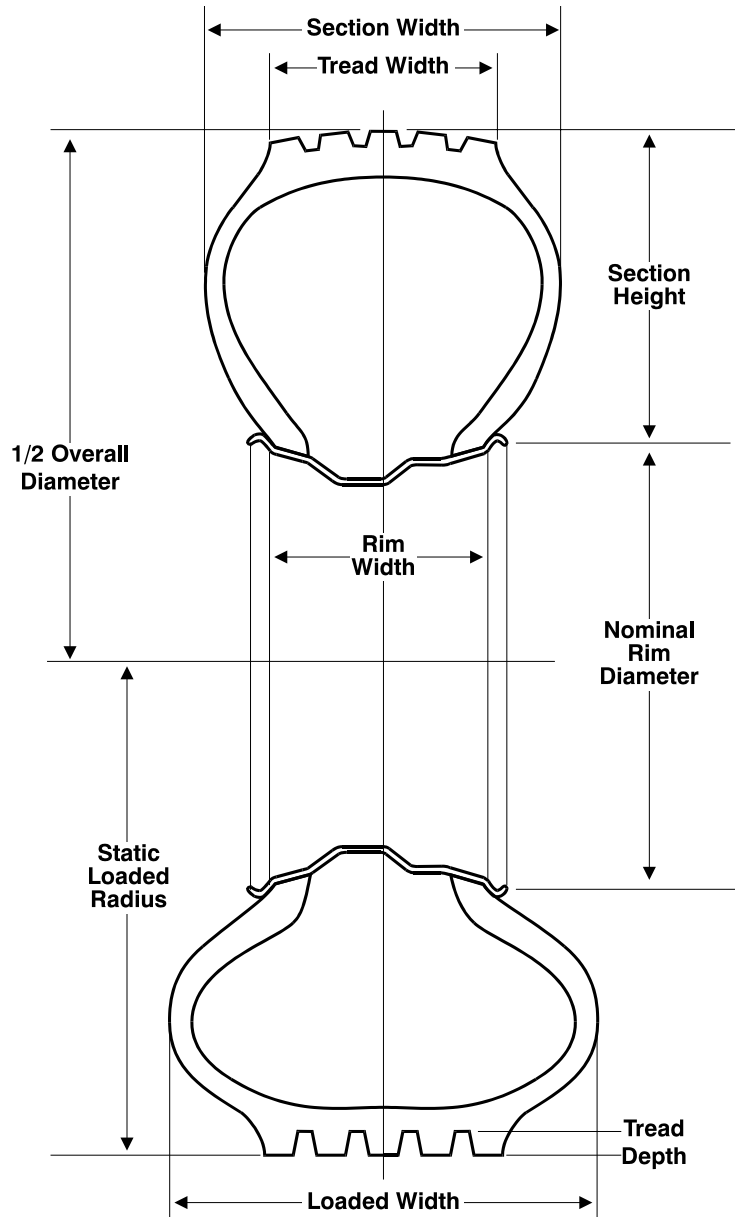

### Revolutions Per Mile (RPM)

The number of tire revolutions in one mile, measured at 55 mph maximum dual load and inflation (as stamped on the tire's sidewall).

**NOTE: Tires mounted and inflated to recommended pressure. All dimensions measured following a 24-hour inflation period.**

## Ply Rating/Load Range

While there is no industry-wide definition of ply rating, truck tires are frequently marked with ply rating and equivalent load range. These markings are used to identify the load and inflation limits of that particular tire, when used in a specific type of service. See adjacent table for conversion of tire markings. Corresponding loads may be found in appropriate load tables.

PLY RATING	LOAD RANGE
2	A
4	B
6	C
8	D
10	E
12	F
14	G
16	H
18	J
20	L

## International Load Index Numbers

LOAD INDEX	KGS	LBS	LOAD INDEX	KGS	LBS	LOAD INDEX	KGS	LBS	LOAD INDEX	KGS	LBS	LOAD INDEX	KGS	LBS	LOAD INDEX	KGS	LBS
90	600	1325	104	900	1985	118	1320	2910	132	2000	4410	146	3000	6610	160	4500	9920
91	615	1355	105	925	2040	119	1360	3000	133	2060	4540	147	3075	6780	161	4625	10200
92	630	1390	106	950	2095	120	1400	3085	134	2120	4675	148	3150	6940	162	4750	10500
93	650	1435	107	975	2150	121	1450	3195	135	2180	4805	149	3250	7160	163	4875	10700
94	670	1475	108	1000	2205	122	1500	3305	136	2240	4940	150	3350	7390	164	5000	11000
95	690	1520	109	1030	2270	123	1550	3415	137	2300	5070	151	3450	7610	165	5150	11400
96	710	1565	110	1060	2335	124	1600	3525	138	2360	5205	152	3550	7830	166	5300	11700
97	730	1610	111	1090	2405	125	1650	3640	139	2430	5355	153	3650	8050	167	5450	12000
98	750	1655	112	1120	2470	126	1700	3750	140	2500	5510	154	3750	8270	168	5600	12300
99	775	1710	113	1150	2535	127	1750	3860	141	2575	5675	155	3875	8540	169	5800	12800
100	800	1765	114	1180	2600	128	1800	3970	142	2650	5840	156	4000	8820	170	6000	13200
101	825	1820	115	1215	2680	129	1850	4080	143	2725	6005	157	4125	9090			
102	850	1875	116	1250	2755	130	1900	4190	144	2800	6175	158	4250	9370			
103	875	1930	117	1285	2835	131	1950	4300	145	2900	6395	159	4375	9650			

Selection of Load Index Numbers: Select the load index number with the equivalent load of the tire (round up to midpoint). If the tire maximum load rating is only given in customary units, convert that load to kilograms and select the closest load index equivalent (Kg) load.

## Speed Symbol

The SPEED SYMBOL indicates the speed at which the tire can carry a load corresponding to its Load Index under service conditions specified by the tire manufacturer.

Speed Symbol	Speed Category (Km/h)	MPH
F	80	50
G	90	55
J	100	62
K	110	68
L	120	75

## Inflation Pressure

For optimum tire performance, proper inflation pressures for the loads being carried must be maintained. The proper inflation pressure can be found in the load and inflation tables of this book.

Air pressure of all tires should be checked and corrected weekly with an accurate inflation pressure gauge. Since air expands when heated, tire pressures will increase due to the normal build-up of heat during operation. For this reason, tire pressures should be checked while cold. Do not bleed air from tires while hot. This will result in an under-inflated condition.

Under-inflated tires build up excessive heat due to over-deflection and may result in tire deterioration.

Operating on an improperly inflated tire will cause severe tire damage.

The inflation pressures given are the minimum pressures for the associated load. Do not exceed the maximum loads listed in this book without consulting a Bridgestone Technical Representative. Any tire known or suspected to have been run at 80% or less of normal operating inflation pressure and/or overloading could possibly have permanent structural damage (steel cord fatigue).

## Tire Mixing

Tires of different sizes or construction must never be mixed on the same axle.

Tires of different construction can be mixed in the following manner:

**A) TRUCKS WITH TWO AXLES, FOUR WHEELS:**

Radials can be mixed with bias ply tires providing the radials are mounted in pairs on the rear axle.

**B) TRUCKS WITH TWO AXLES, SIX WHEELS:**

(e.g. single axle tractors) Radials can be mixed with bias ply tires providing tires of the same construction are mounted on the same axle.

**C) TRUCKS WITH MORE THAN TWO AXLES:**

(e.g., tandem axle tractors) The front tires may be bias or radial and can be run with bias or radial on the drive axles. Trucks with multiple drive axles should have tires of the same construction mounted on all drive positions.

**D) TRAILERS:**

Bias or radial tires may be used, providing tires on the same axle are of the same construction.

Tires of different construction must not be used in dual fitments. Tubeless tires can be mixed with tube-type tires, providing they are of equivalent sizes.

**E) WIDE BASE AND DUALS:**


Wide base and duals can be mounted together as long as overall diameter is within 1/4 inch.

## Dual Matching

Tires in dual assemblies should be matched with regard to design and dimensional tolerances as noted below.

Improperly matched duals may result in irregular wear, rapid wear, vehicle mechanical problems and premature tire failure. Failure to match tires in a dual assembly may result in sudden tire destruction.

Dual Matching Limits		
Tire Construction	Diameter	Circumference
Radial	0 to 1/4 inch	0 to 3/4 inch

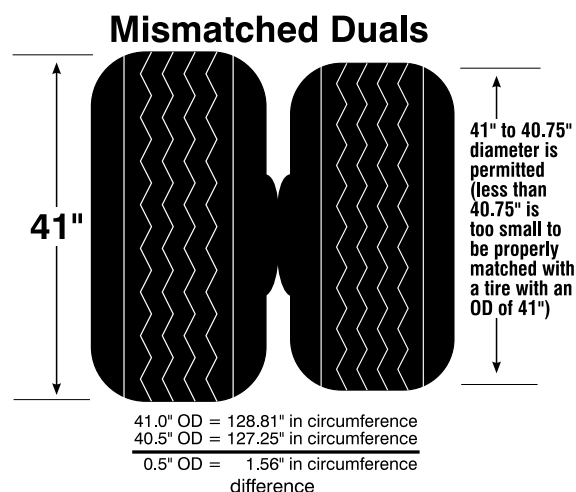

## Medium Truck Approved Rim Width & Minimum Dual Spacing

**Design Rim Width shown in boldface type.**

TIRE SIZE	APPROVED RIM WIDTH	MIN. DUAL SPACING*
TUBE TYPE		
11.00R24	8.5, 8.50VM, <b>8.0</b> , 7.5	13.2
12.00R24	9.0, <b>8.5</b> , 8.50VM, 8.0	14.1
TUBELESS		
9R17.5HC	<b>6.75HC</b>	10.3
215/75R17.5	<b>6.00HC</b> , 6.75HC	9.3
245/70R17.5	<b>6.75</b> , 7.50	10.6
8R19.5	5.25, <b>6.00</b> , 6.00RW, 6.75, 6.75RW	9.1
9R22.5	6.00, <b>6.75</b> , 7.50	10.3
10R22.5	6.75, <b>7.50</b> , 8.25	11.4
11R22.5	7.50, <b>8.25</b>	12.5
12R22.5	8.25, <b>9.00</b>	13.5
225/70R19.5	6.00, 6.00RW, <b>6.75</b> , 6.75RW	10.0
245/70R19.5	6.75, 6.75RW, <b>7.50</b> , 7.50RW	11.0
265/70R19.5	<b>7.50</b> , 7.50RW, 8.25, 8.25RW	11.6
285/70R19.5	7.50, <b>8.25</b> , 9.00	12.5
305/70R19.5	<b>9.00</b> , 8.25, 8.25RW	13.5
445/65R19.5	<b>13.00</b> , 14.00	NA
245/75R22.5	6.75, <b>7.50</b>	11.0
255/70R22.5	<b>7.50</b> , 8.25	11.3
265/75R22.5	<b>7.50</b> , 8.25	11.6
275/70R22.5	7.50, <b>8.25</b> , 9.00	12.2
295/80R22.5	8.25, <b>9.00</b>	13.2
295/75R22.5	8.25, <b>9.00</b>	13.2
315/80R22.5†	8.25, <b>9.00</b> , 9.75	13.8
385/65R22.5	<b>11.75</b> , 12.25	NA
425/65R22.5	11.75, <b>12.25</b> , 13.00	NA
445/50R22.5	<b>14.00</b>	NA
445/65R22.5	<b>13.00</b> , 12.25, 14.00	NA
11R24.5	7.50, <b>8.25</b>	12.5
12R24.5	8.25, <b>9.00</b>	13.5
285/75R24.5	<b>8.25</b>	12.5

\* Minimum Dual Spacing is listed for the design rim width. If design rim not used Minimum Dual Spacing must be adjusted per note 1 (below) for other rim widths.

† 8.25-rim may be used if tire load is limited to 8,000 lbs. single and 7,610 lbs. dual @ 120 psi. Note: The minimum dual spacing for 8.25-rim is 13.2". Do not exceed manufacturer's recommended maximum load and inflation.

Note 1: New tire section widths and overall widths will change 0.10-inches for each 0.25-inch change in rim width.

Note 2: Use alternate rims only when recommended rims cannot be used.

Note 3: Do not use different rim widths in dual applications.



## Tire Rotation


Tire rotation is a practical means of reducing tire costs when irregular or rapid wear are prevalent. Rotation patterns, such as those recommended by vehicle manufacturers, may be followed. There are no restrictions on criss-cross rotation. Tires having directional type tread patterns should be mounted in the recommended direction of rotation for optimum performance.

For many directional type designs it is permissible to change the direction of rotation after the first 3/32"–5/32" of tread wear. Contact tire manufacturer for pattern-specific recommendation. The casing, after retreading, may be run in either direction, as the casing is not directional.


## Regrooving

Regroove only those tires marked "Regroovable" on the sidewall. Tires with a remaining tread depth of less than 2/32" should not be regrooved. It is recommended that tires exhibiting severe irregular wear not be regrooved. Regrooved tires should not be placed on the front axle.

Regrooving should be restricted to the tire's original tread grooves. A minimum rubber gauge of 4/32" must be maintained between the tire's top belt and the re-grooved grooves.

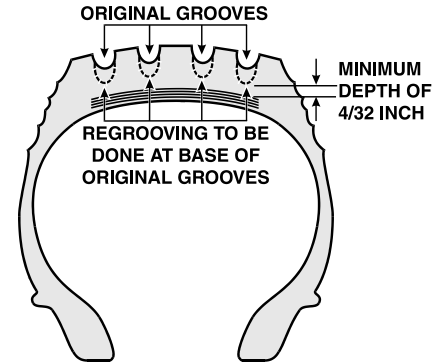

## Branding

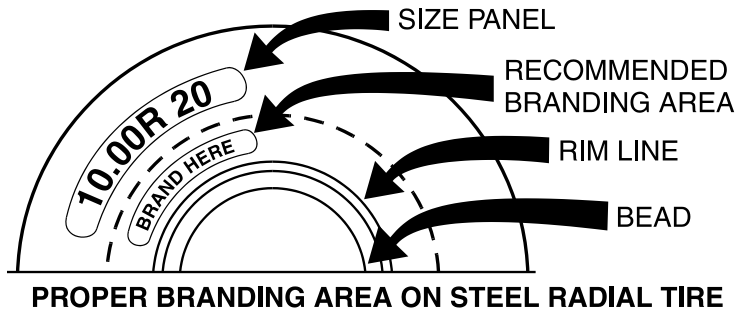

The location for branding must be chosen carefully due to the thin sidewall gauge. Many sidewalls have branding panels, or designated branding areas as noted in sketch at left. Branding in the wrong location may result in eventual tire failure. It is recommended that the brand be located between the rim line and size panel.

Branding depth should be 1/32". Do not brand deeper than 2/32".

## Wheel Alignment

Proper wheel alignment is essential for optimum tire life and vehicle handling characteristics. **Alignment settings should be checked with the truck loaded.** Alignment adjustments can be made on an unloaded truck; however, modifications in the vehicle manufacturer's alignment recommendations may be required for proper "loaded" settings.

### Front Axle Recommendations

- **Toe-in:** set as close to zero as vehicle manufacturer's recommendations allow in loaded condition. Do not set beyond zero, as a toe-out condition will develop.
- **Caster:** set to the maximum positive setting which the vehicle manufacturer's recommendations will allow.
- **Camber:** set as close to zero degrees as the vehicle manufacturer's recommendations allow in loaded condition.

### Drive Axle Recommendations




Misalignment of the drive axles may also cause rapid or irregular wear on the front axle as well as the drive axle due to constant steering correction. Drive axle alignment should be corrected before front axle settings are made.

Drive axles should be aligned in the following manner:

1. Position drive axles perpendicular to the chassis centerline.
2. For tandem drives, the drive axles should be positioned parallel to one another.

If they are not parallel, the condition is referred to as "tandem scrub." Our recommendation is the distance between the axle centers is set so the distance on the right is equal to or greater than the distance on the left by up to 1/8" (.125").

The distance on the axle centers on the right should never be shorter than the distance on the left. The wear pattern that will result from this situation is inside left front/outside right front shoulder wear.

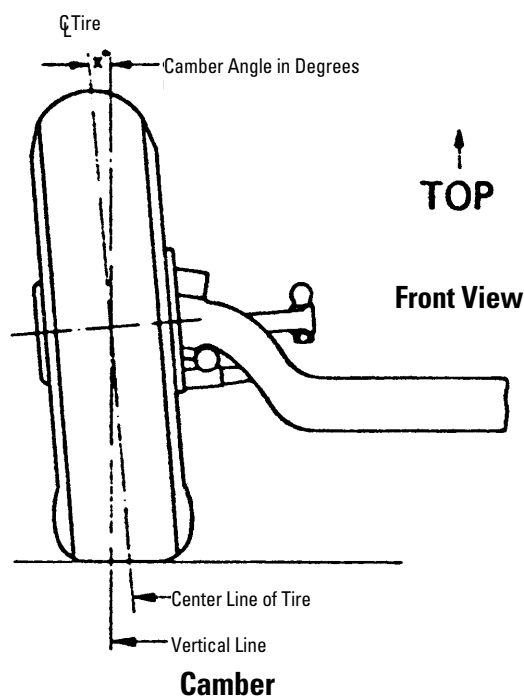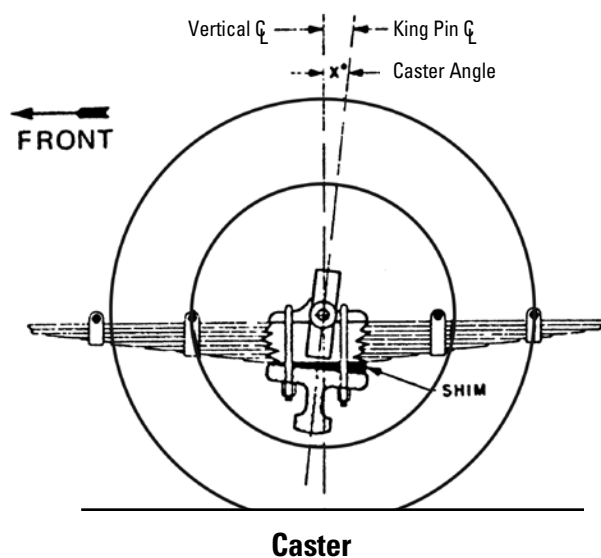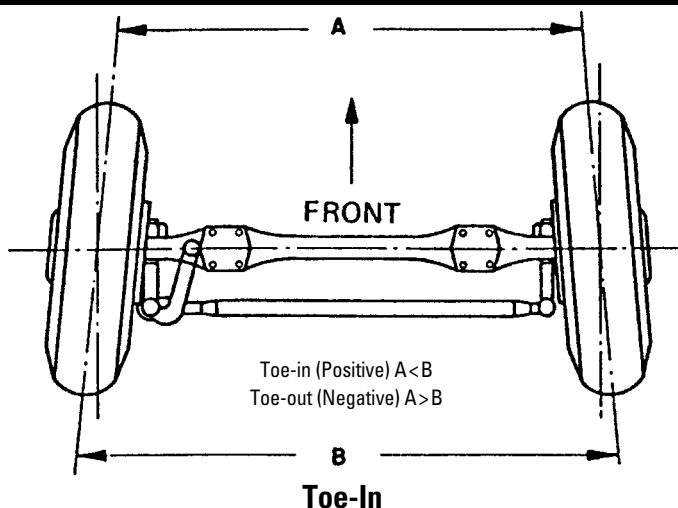

## Balance/Runout

Tire and wheel imbalance may result in irregular tire wear. Steering axle and drive axle tires should be balanced dynamically for best results. Vibration may also be the result of mismatch of the high and low spots of the tire and wheel.


To resolve vibration problems, the runout of tire and rim should be measured, then matched in the following manner:

1. With the tire mounted on the rim, number both at 12 asymmetrical points.
2. Measure runout at both shoulders of the tire (inside & outside) and record the results. (Note: accuracy in these measurements is essential.)
3. Demount the tire, measure both sides of the rim for runout, record the results, then average the inside and outside measurements.
4. Matching the lowest average point of the rim to the highest average point of the tire, remount the tire, then balance accurately.


5. It may be necessary to repeat this procedure since the tire cannot be measured accurately while on an imperfect rim.

Note: If a runout dial is not available, rotate the tire 180° relative to the rim and remount. If the vibration persists, rotate the tire another 90°, then another 180°.

6. The maximum suggested radial runout for a rotating tire/wheel assembly is 0.095 inches for both front and rear tire positions. If runout exceeds these limits, check for bent rims, cocked rims, improperly adjusted wheel bearings, improper tire bead seating, tire flat spots, improperly tightened rim clamps and rear rim spacers.

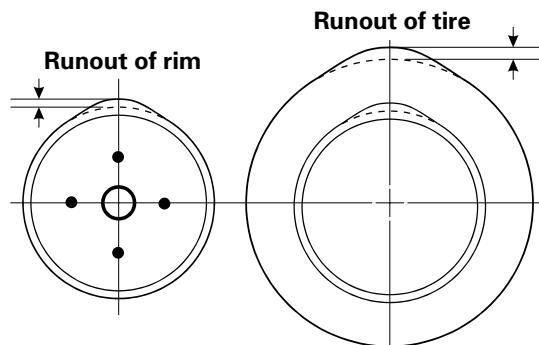

**Runout of Tire Due to Runout of Rim**

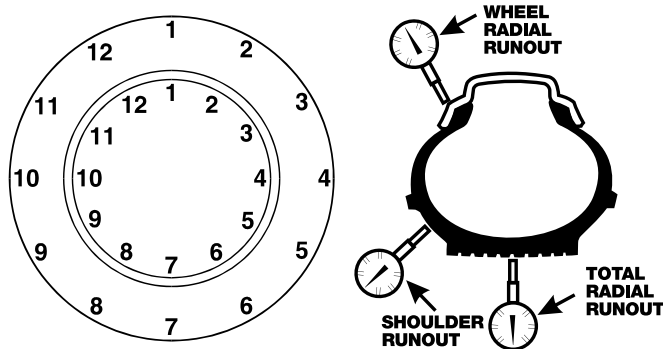


**Proper Position for Measuring Runout**

### Special procedure for improving steering tire run-out on vehicles with hub-piloted wheels

If you suspect high run-out on the steering position and have hub-piloted wheels, use the following procedure to improve the radial run-out.

1. Measure the radial run-out of the tire/wheel assemblies on the vehicle's steering position. Mark the highest and lowest points of the radial run-out on the tire with chalk or other marker.
2. Remove the tire/wheel assembly and position the hub so that the gap between any two of the hub pilot pads is at 12:00. With the hub in this position place the tire/wheel assembly on the hub so that the high point mark is at the top (12:00). Carefully tighten one nut with a hand wrench until it is snug enough to hold the wheel securely. Reposition the

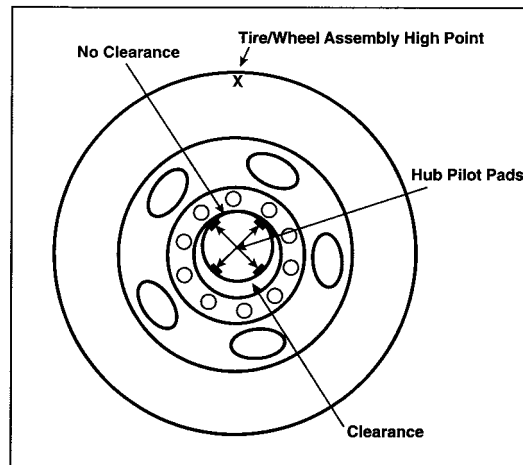

**Figure 7**

wheel on the hub pilot pads while tightening. (Don't use an air wrench to tighten the first nut. It will reposition the wheel and not let gravity keep the wheel in contact with the hub pads that are at the top). After the first nut is tightened with the hand wrench, tighten all nuts according to sequence and procedure shown in **TMC RP 222, User's Guide to Wheels and Rims**.

If you have followed this procedure correctly, you will find there is clearance between the hub pads and the wheel pilot hole at the bottom and no clearance at the top (See Figure 7.) shown on previous page.

3. Recheck the radial runout to verify that it has

been improved. By locating the high point, repositioning the wheel, putting the high point at the top and re-tightening, gravity should have put the wheel in a better position with respect to the hub. Improvements up to .020" are common and can greatly improve the ride.

(Information reprinted with permission from: **RP 214B, Tire/Wheel Balance and Runout, in TMC's Recommended Practices Manual, published by the Technology & Maintenance Council (TMC) of American Trucking Associations, 2200 Mill Road, Alexandria, VA 22314; (703) 838-1763. tmc.truckline.com**)

## Tire Mounting For Low Vibration





### Special Low Vibration Mounting For Bridgestone Radial Truck Tires

Many new Bridgestone truck tires have red marks for use with specially marked steel wheels to help optimize uniformity. All Bridgestone truck tires have yellow marks, to aid in initial balance. (White marks are factory inspection marks, and are not used in mounting or balancing.) Proper use of these marks during new tire mounting and installation can result in better ride and less vehicle vibration.

If the tire has a red mark, use only the red mark during mounting. Torque wheel nuts with red mark at "12 o'clock" position.

If the tire does not have a red mark, place yellow mark next to valve stem, regardless of wheel type.

On dual assemblies, regardless of tire marks, install tires on axles with valve stems approximately 180 degrees apart.

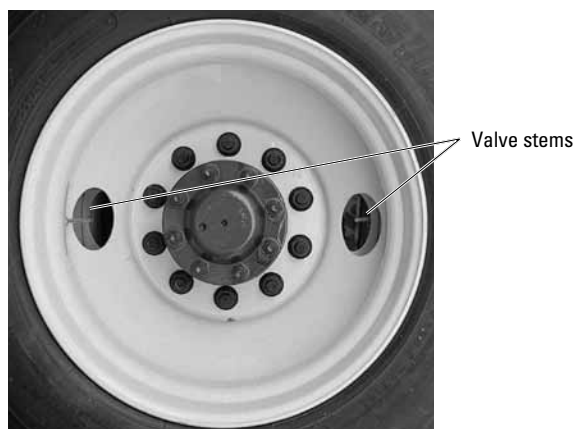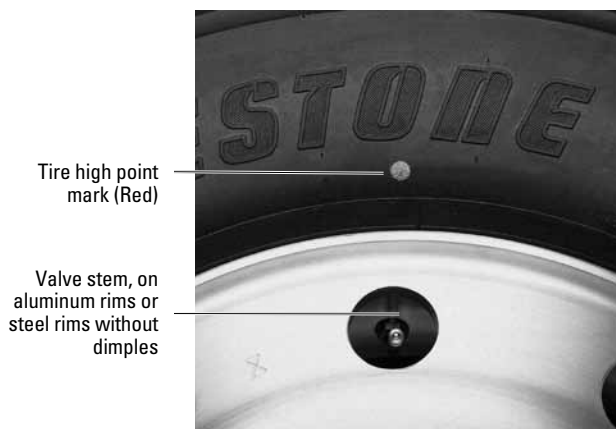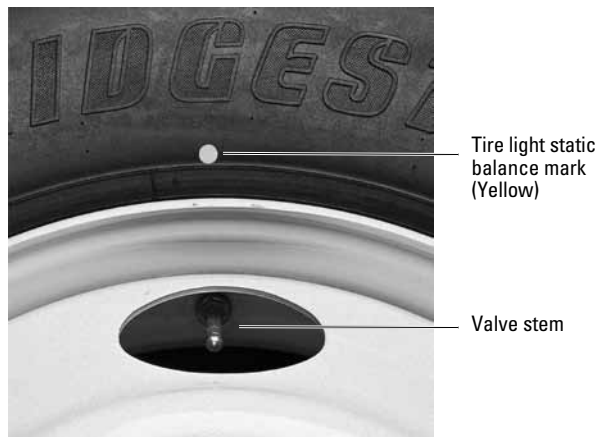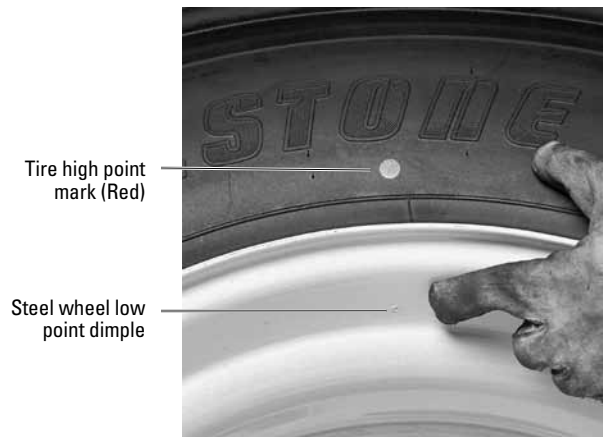

## Mounting Radial Truck Tires to Help Reduce Vibration and Irregular Wear

Consistent, correct truck tire mounting is important for proper bead-to-wheel fit, and can help reduce vehicle vibration and irregular wear for better ride and longer original tread life.

Important steps:

1. Clean and paint used wheels.
2. Lubricate both tire beads and both wheel seats.
3. Check the assembly for even centering.

**Always follow all OSHA, RMA and manufacturer's tire mounting safety precautions! (See Section on Mounting/Demounting Procedures in this data book.)**



1. Remove dirt, rust or corrosion that can interfere with proper seal or damage bead.



2. Protect bare metal with primer or anti-rust paint to prevent further corrosion. Allow to dry.



3. Lubricate the wheel bead seat using vegetable oil-based lubricant approved for both tire and wheel.




4. Lubricate tire bead. Do not use petroleum or solvent-based products. They cause rubber to deteriorate.



5. Inflate assembly to set bead and check for leaks around the wheel.



6. Measure distance from molded ring on tire to flange locations, 90 degrees apart.

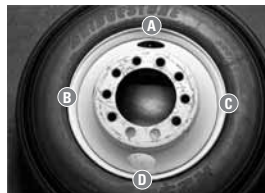

7. Distances A, B, C, and D should be within 2/32". If they are not, break down, re-lubricate and mount again.

## Storage

All tires should be stored in accordance with the following recommendations:

1. Avoid storing tires in direct sunlight.
2. Avoid storing tires near a heat source or in the path of a direct flow of forced air.
3. Keep tires away from electric motors and generators which produce ozone.
4. Do not store near petroleum products or chemicals (such as oil, grease, gasoline, solvent, etc.).
5. Limit vertical stacking to a maximum of 5 feet in height.
6. Store un-mounted tires indoors in a dry location. Steel radial tires may be severely damaged due to the presence of moisture inside the tire at mounting. Upon pressurization, this moisture can permeate the casing of the tire and cause severe deterioration of the steel cords.
7. Prior to mounting, inspect the inside surfaces of the tire and remove all foreign material and moisture.
8. Keep compressed air sources for tire inflation free of moisture.

**Failure to follow the above recommendations could result in sudden tire failure, property damage and personal injury.**



## Tire Inspection

Prior to operating a vehicle, an inspection should be made of each tire, including the spare. Examine tires for cuts, bruises, cracks, bulges and penetrations. If any damage is found, have the tire examined by a Bridgestone dealer. Repair of tire damage must be made as soon as possible in order to avoid further deterioration of the tire structure.

Federal law requires that front axle truck tires on vehicles over 10,000 lbs. gross vehicle weight must have at least 4/32" tread depth. Tread wear indicators are contained in the tread of Bridgestone truck tires and become visible when the tread depth reaches 2/32" in two adjacent major grooves. Drive and trailer tires should be replaced when the tread depth reaches 2/32" or the wear bars appear since 2/32" is the minimum permissible legal tread depth on all axles except the front.

Tires should also be inspected prior to mounting on a rim. Bridgestone steel radial tube-type truck tires are shipped with the flap in the tire. It is essential that the tire be disassembled and inspected thoroughly prior to mounting to insure the inside surfaces are completely dry and clean.

Water in casings of steel radial tires may cause tire failure. During normal operation, heat build-up inside the tire will turn water into vapor which may permeate the inner-liner and enter the steel casing cord, causing rust, deterioration, possible sudden tire failure, property damage and/or personal injury.

## Noise Regulation

All of Bridgestone's truck tires comply with the noise emissions standards of 80 dB for medium and heavy trucks. Bridgestone uses the Society of Automotive Engineering recommended test procedures SAE J366b (35 MPH) and SAE J57a (50 MPH).

## Irregular Wear – Radial Truck Tire

There are many factors that may trigger the occurrence of irregular wear. Among those, mechanical malfunctions of vehicles such as misalignment and uniformity of the tire and wheel assembly are the major factors. If, after correction of these problems is made, objectionable irregular wear is still observed, Bridgestone recommends the following steps be taken:

**Steer-axle tires:** Check thrust angle & apply higher inflation pressure within permissible range (100–115 psi).

**Drive-axle tires:** An increase of 10-15 psi makes the tire less susceptible to irregular wear. Forward movement of the fifth wheel within permissible range greatly reduces irregular wear.


## Low Profile Tires

Low profile 75-series tubeless truck radial tires may offer several advantages over standard 90-series tubeless tires, such as:

1. Increased tread life
2. Positive handling
3. Lower vehicle height
4. Lighter weight

Care must be taken when converting to lower profile tires. Differences in overall diameter, static loaded radius and maximum load carrying capacity should be considered prior to mounting lower profile tires.

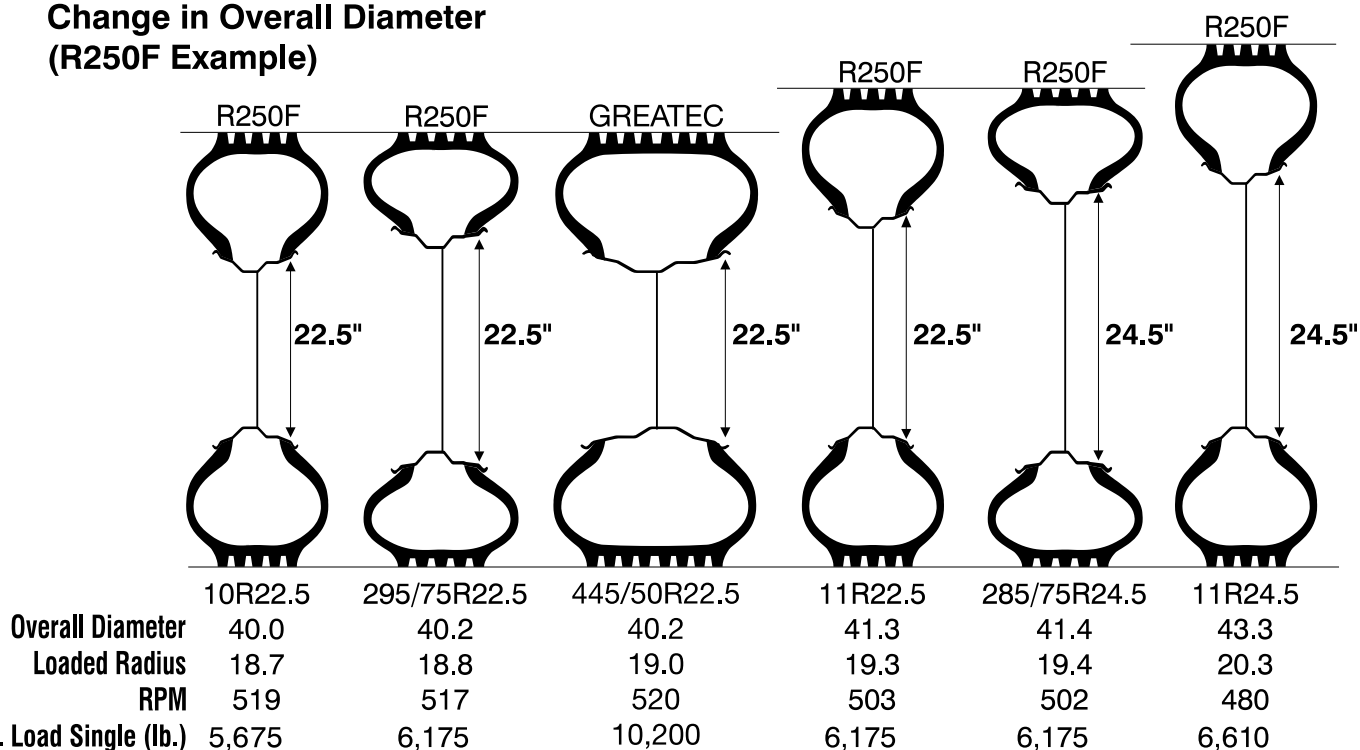

**CONVERSION TO LOW PROFILE TIRES****Change in Overall Diameter  
(R250F Example)****Mounting/Demounting Procedures**

Proper mounting procedures must be followed or sudden tire destruction, personal injury or death may result. Tire mounting must be done only by personnel trained, supervised and equipped according to Federal OSHA regulations.

**Demounting**

Completely deflate tire by removing the valve core prior to removing the tire and wheel assembly from the truck.

Remove tire and wheel assembly from the vehicle and demount the tire from the wheel in the following manner:

**Tube-type**

- Ensure that the tire is completely deflated before removing from the rim. Place the tire on the floor, side-ring side up.
- Pry the bead loose from the lock ring using the proper tools.
- Disassemble the rim parts carefully to avoid damage to the tire, tube, flap or rim parts.
- Turn the wheel over and unseat the second bead from the wheel.
- Remove the rim from the tire.

**Tubeless**

- Ensure that the tire is completely deflated before removing from the rim.
- Break the beads loose on both sides of the tire using a bead-breaking tool.
- Lubricate both beads of the tire using a vegetable oil-based lubricant only.
- Place the tire and rim on the floor with the wide side of the rim down.
- Progressively work the tire off the rim using the proper tire irons.

**Prior to Mounting**

Clean and prepare rim or wheel – inspect the rim or wheel for damage. Cracked, broken, bent, or otherwise damaged rim components and wheels must not be reworked, welded, brazed or otherwise heated. Never weld a rim with a tire mounted on it or any other time.

Proper size tube and flaps (if applicable) must be installed in the tire. New Bridgestone tubes and flaps must be used when mounting new Bridgestone tube type tires. Never use undersized, oversized, or used tubes or flaps. Ensure that rim components are properly matched and that the proper size rim is being used (size, bead taper, etc.).

New valves, cores, caps, and O-rings should be installed with new tires. Never mount a damaged tire.

## Mounting

### Tube-type

- Remove the tube and flap from the tire (if installed). Clean and dry the inside of the tire to ensure that all moisture, dirt and foreign material is removed prior to mounting.
- Install the proper size tube and flap. Always install new Bridgestone radial tubes and radial flaps in new Bridgestone radial tires. Be sure tubes marked "radial" are used in radial tires. Place the tube inside the tire and install the flap, ensuring that the flap is centered. Slightly inflate the tube enough to shape it out.
- Lubricate the beads, rim side of the flap and the tube base with a vegetable-based lubricant. Do not over-lubricate (inside of tire must stay dry).
- Mount the tire, tube and flap assembly on the rim.
- Assemble the rim parts making sure proper components are used and a proper fit is established.
- When inflating, always place the tire in an approved safety cage or equivalent restraining device and use an extension hose and clip-on chuck.
- Never stand over a tire while inflating. Do not attempt to seat rim components by tapping with a mallet when tire is inflated.

### Tubeless

- Clean and prepare rim or wheel.
- Replace valve seals and stem.
- Lubricate both beads and both rim flanges.
- Work the tire over the rim flanges using proper tubeless tire tools.
- Mount the tire over the valve side.
- Inflate tire in safety cage to seat beads.
- Do not exceed the maximum inflation pressures shown on tire sidewall/rim.

**WARNING:** When mounting truck tires, never use pressures above 40 psi to seat tire beads. If beads have not seated by the time pressure reaches 40 psi, deflate the assembly, reposition the tire on the rim, re-lubricate tire beads, rim humps, bead seat, and re-inflate.

## Cautions

Always inflate tire/rim assembly in an approved safety cage or equivalent restraining device, use remote controlled clip-on air hose, and inflate to pressure recommended by vehicle manufacturer.

Always ensure that rim components fit properly before inflating.

Never tap component parts with a mallet while the tire is inflated.

Never attempt to disassemble multi-piece rims while inflated.

Do not exceed the maximum inflation pressure on the sidewall of the tire. If beads do not seat at 40 psi, deflate, re-lubricate and re-inflate.

**WARNING: Never pour or spray any flammable substance into or onto a tire or wheel for any purpose whatsoever. The residue left by the substance could result in a fire or explosion, which could cause an accident.**

**WARNING: Never pour or spray a flammable substance such as gasoline or ethyl ether into a tire and light with a match so that the resulting explosion seats the beads of a tubeless tire. This practice is extremely dangerous and can result in a severe explosion or undetected damage to the tire or rim which can cause severe injury or death.**

**WARNING: Always replace a tire on a rim with another tire of exactly the same bead diameter as the diameter of the rim on which it will be mounted.**

## Correct Rim Selection

Bridgestone tires are designed to be used on wheels and rims that conform to the dimensions and contours shown in the Tire and Rim Association Yearbook for the year in which the tire is manufactured and that are designed as approved wheels and rims for each particular tire size and type.

Usage of other wheels and rims must be expressly approved by Bridgestone Firestone North American Tire, LLC for the particular application involved.

The load and cold inflation pressure must not exceed the rim and wheel manufacturer's recommendations even though the tire may be approved for a higher load or inflation.


Rims and wheels may be identified (stamped) with a maximum load and maximum cold inflation rating. For rims and wheels not so identified or for service conditions exceeding the rated capacities, consult the rim and wheel manufacturer to determine rim and wheel capacities for the intended service.

## Tire and Rim Matching Importance

Remember the importance of proper matching of tires and rims. In particular, special care must also be used in the mounting of any 16" diameter tire sizes, as well as the 15.5" and 17.5" sizes. The 16" size tire must be mounted only on the approved 16" rims and not the 15.5" or 16.5" rims. In addition, any 15" size tire must be mounted only on approved 15" rims, not a 15.5" rim and any 17" size tire must be mounted only on approved 17" rims, not on a 17.5" rim.

**WARNING:** There is a danger in installing a tire of one rim diameter on a rim of a different rim diameter. If attempts are made to mount and inflate a 15" diameter tire on a 15.5" rim, a 16" tire on a 16.5" rim, or a 17" tire on a 17.5" rim, serious injury or death may result.

Rims of different diameters and tapers cannot be interchanged. The following diagram illustrates the difference between rims of two different tapers and diameters:

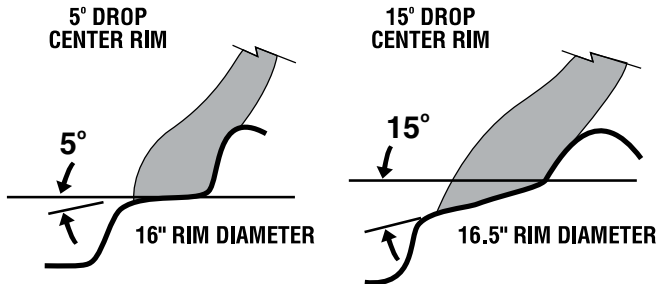

The following diagram shows how the beads of a 16" tire will not seat on a 16.5" rim. The beads should not be forced out against the rim flanges by using more air pressure, because this will break the beads and the tire will explode. Never exceed 40 psi when seating the beads on the rims.



## Use of Lubricants In Mounting and Demounting of Truck/Bus Tires

Bridgestone does not recommend the use of petroleum products as a lubricant in tire mounting or demounting operations.

Only a vegetable oil-based lubricant should be used. Do not use solvents or petroleum products as lubricants for tire mounting or demounting.

In cases where a tire submitted for adjustment consideration for bead-related damages shows evidence of having been contaminated by petroleum lubricants or other non-recommended material, the adjustment will be disallowed by Bridgestone. The use of non-recommended (products or materials may result in deterioration of rubber and eventual failure of the tire.)

Acceptable lubricants such as Murphy's, Ru-Glyde, Sliptac, etc. are recommended for (mounting and demounting passenger and truck/bus tires.)

## Tire Vibration

**SAFETY WARNING:** Serious injury or death may result from a tire failure. Many tire failures are preceded by vibration, bumps, bulges or other anomalies. If an unusual vibration occurs while driving your vehicle or you notice a bump, bulge, or an anomaly not associated with normal tire performance, have your tires and vehicle evaluated by a qualified service person.

## Repair and Retreading

Improperly repaired or retreaded truck tires may cause sudden tire destruction.

Bridgestone truck tires should only be retreaded and repaired by trained personnel.

An inspection of each tire should be done before operating the vehicle. Damaged tires should be inspected by an authorized Bridgestone tire dealer.

A puncture left unrepaired may result in further internal casing damage and eventual tire destruction.


Never use plug-only repairs on Bridgestone truck tires. An interior patch with plug or other approved material is required. Nail hole repairs should be made only after demounting and inspecting the interior of the tire.

Never use a tube as a substitute for a proper tire repair.

### Belt Removal

1. The removal of the fourth (outer) belt is permissible. This belt may be omitted when retreading.
2. The removal of the third belt is more involved. If it is essential that the third belt be removed, then it must be replaced before retreading.

3. A nail hole repair of 3/8" or less in diameter may be made in the crown area of either radial or bias tires. A section repair in a radial is required to repair any injury larger than a 3/8" nail hole.
4. Bias section repairs are made when the injury is either larger than 1-1/4" in diameter, is not perfectly round or perpendicular to the liner surface, or when the injury is larger than 3/8" in diameter and combination patch plugs are not used.

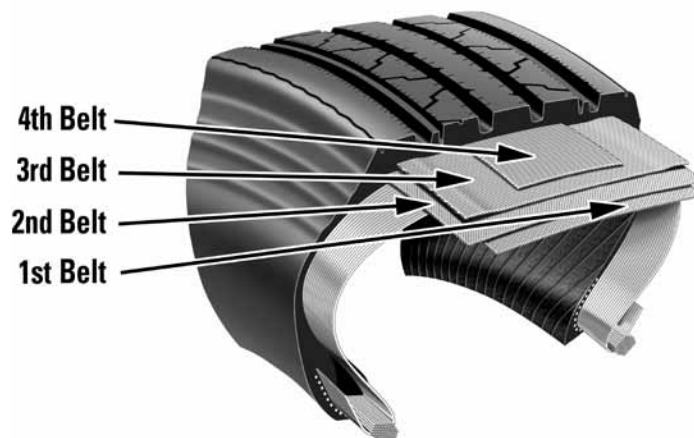


## Large Truck Fuel Economy

### A New Perspective

Anything you do to save fuel will improve your profitability – if it doesn't cost more than it saves.

Bridgestone Bandag Tire Solutions (BBTS) has been studying the relationship of tires to fuel economy for over a quarter of a century. What follows summarizes that research.

For a detailed look at truck tire fuel economy, ask your BBTS representative for a copy of **Tires & Truck Fuel Economy**, a *Real Answers* magazine "Special Edition." You may also view this publication online or order copies by visiting [BridgestoneTrucktires.com](http://BridgestoneTrucktires.com).

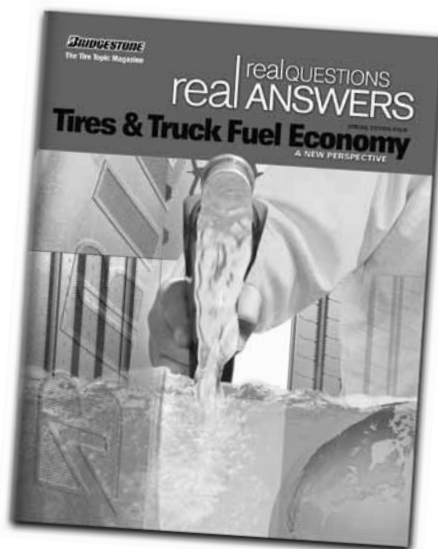


Today's trucks have an estimated engine efficiency of approximately 40 percent. Therefore, only about 40 percent of the energy converted from diesel fuel reaches the axles. Some things influence use of this 40 percent of available energy more than others. We'll take them in order, starting with some of the largest.

## What affects “real world” fuel economy?

Just as trucking is “a business of pennies,” so is truck fuel economy. Tires are just one of many components affecting fuel economy, but one of the easiest to change and test.

Remember though, because of the difficulty of controlling variables in the real world, test results can vary considerably from what you find in day-to-day operations.

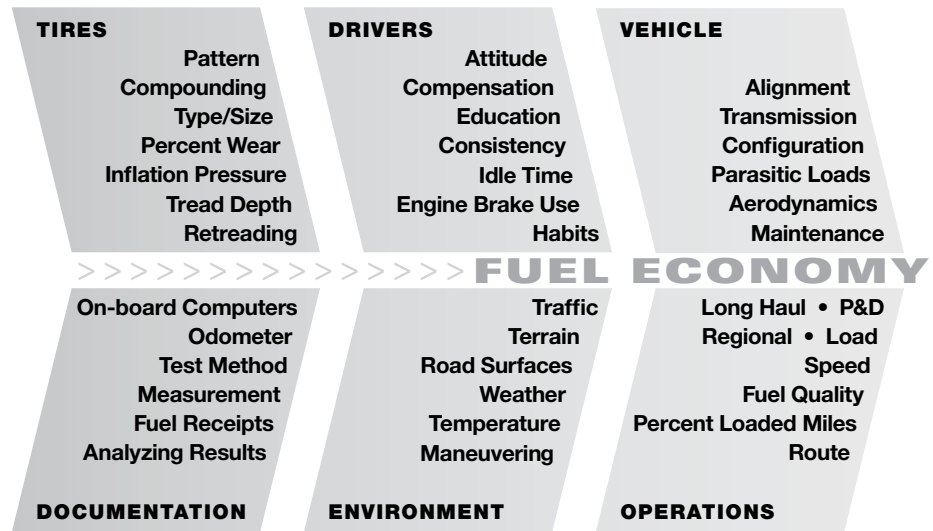

Factors Affecting Fuel Economy in the Real World

## How much benefit can we get?

A fleet with average fuel economy of 5.0 miles per gallon that achieves a given percentage of fuel savings will save more fuel than a fleet with an average fuel economy of 7.0 miles per gallon.

Fleet size and annual miles also have an effect. The more fuel you use, the more you have to gain from any improvement.

### Sample Fuel Economy Calculations

MILES PER YEAR	100,000	100,000	100,000	100,000	100,000	100,000	100,000
MILES PER GALLON	<b>5.0</b>	5.5	6.0	6.5	<b>7.0</b>	7.5	8.0
GALLONS PER YEAR	20,000	18,182	16,667	15,385	14,286	13,333	12,500
1% Fuel Savings	<b>200</b>	182	167	154	<b>143</b>	133	125
2% Fuel Savings	400	364	333	308	286	267	250
5% Fuel Savings	1,000	909	833	769	714	667	625
7% Fuel Savings	1,400	1,273	1,167	1,077	1,000	933	875
10% Fuel Savings	2,000	1,818	1,667	1,538	1,429	1,333	1,250

## How do we know how much we're saving?

First, you have to know what your fuel economy is right now. Because it changes constantly, with weather, loads, roads, equipment and drivers, that may not be as simple as it sounds.

Scientific testing controls variables, but you may not have that kind of control in the real world.

And, in-truck on-board computers may not be your best guide. According to TMC, these displays can be in error plus or minus five percent.

**According to TMC,  
on-board computer displays of fuel  
economy can be off by ±5%**

One method that's real world is to take your fuel receipts and corresponding odometer readings, then divide miles by gallons. The more data you have, the more representative your “average” is going to be.

And remember, consider the cost of any fuel economy tactic. If it costs more than it saves, it's a bad investment.



Advanced computer methods

Your BBTS representative has an innovative computer program that accurately compares the fuel economy of different tires, tires from different manufacturers, even retreads.

This program, *Tire Life Cycle Cost (TLCC)*, makes a true comparison by compensating for the fact that tire fuel economy changes constantly throughout tread life, and by accounting for differences in tire prices, casing values, installation costs and tread life.

TLCC will show you not only what the costs are, but what portion are for tread wear and what portion are for fuel consumed by the tires.




It's the most accurate "What if?"-way to select tires that will perform best. And only BBTS has TLCC. Ask your representative to show you how much you can save.

What consumes fuel?

SPEED

Every bit of energy produced or used by a truck comes from the fuel in the tank.

To move a truck, you must first run the engine to get power to the tires. With 40 percent engine efficiency, 60 percent of fuel is consumed through engine losses, the remaining 40 percent of fuel is consumed by tire rolling resistance, air resistance and all other mechanical losses. At 55 mph or below tire rolling resistance, air resistance and mechanical losses each account for about 33 percent of the 40 percent of fuel from the engine efficiency.

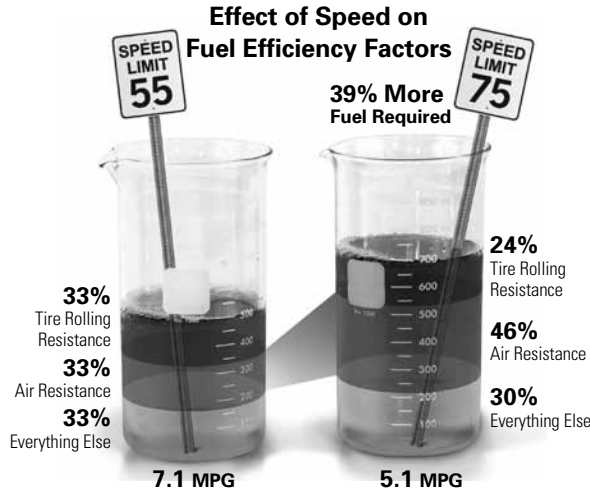


For example, increasing speed from 55 mph to 75 mph can take 39 percent more fuel, and much of that results from air resistance.

Speed affects other things too

In tests, vehicles went from 5.1 miles per gallon at 75 mph to 7.1 miles per gallon at 55 mph.

Fuel Economy at Different Speeds

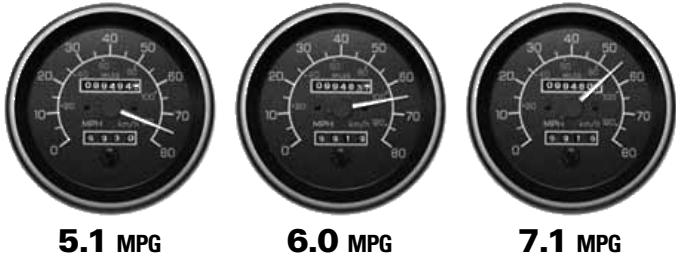

Speed also affects travel time, and therefore, the number of miles a driver can log each day. If you can meet delivery schedules without running out of hours of service, cutting speed can be an effective way to save fuel.

Fuel Economy & Travel Time at Different Speeds

SPEED	MILES PER GALLON	INCREASE IN MILES PER GALLON	PERCENT FUEL SAVED	TIME FOR 500 MILES OF TRAVEL	INCREASE IN TRAVEL TIME
75	5.1	—	—	6 hr. 40 min.	—
65	6.0	18%	15%	7 hr. 42 min.	15.5%
55	7.1	39%	28.2%	9 hr. 5 min.	36.2%

Running at higher speeds can also have effects: Tire fuel efficiency, even with fuel-efficient tires, is severely cut.

And, engine manufacturers estimate maintenance costs may be 10-15 percent higher, while tire wear can be shortened by 10 to 30 percent.

What consumes fuel?

LOAD

No one would reduce payload as a way to save fuel, but there are ways to increase payload – by decreasing non-paying load.

Wide base tires weigh significantly less than dual pairs. With some cargoes, this can allow increased payload, and more revenue.





**WIDE BASE**  
181 lb per TIRE



**LOW PROFILE**  
250 lb per PAIR

*Wide base tires can allow weight savings to be converted into revenue-producing payload and may be more fuel-efficient than ordinary dual assemblies.*


If the tires they replace were not fuel-efficient, wide base tires may also contribute to fuel economy.

### Tire Contributions to the Fuel Bill

Of the fuel used in moving the vehicle, about  $\frac{1}{4}$  to  $\frac{1}{3}$  of it is used to overcome rolling resistance. So if rolling resistance decreases by 10 percent the result is about ( $\frac{1}{4} \times 10\% =$ ) 2.5% to ( $\frac{1}{3} \times 10\% =$ ) 3% decrease in fuel consumption.

### Rolling resistance in the tire

The tread contributes about 35-50 percent of the tire's overall rolling resistance, while the casing contributes about 50 to 65 percent.

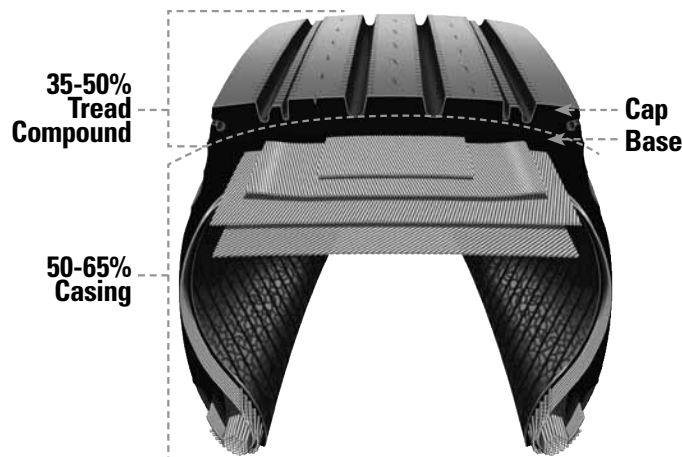

### Wear effect on rolling resistance

Since the contribution of the tread is large, as the tread wears away, rolling resistance decreases.

As they approach wear-out, many tires become very similar in rolling resistance, even if they started out quite different.

That's one reason the BBTS TLCC program uses true average rolling resistance – not new-tire rolling resistance – to calculate tire fuel consumption.



### Tread design

Tread design also affects rolling resistance. In general, rib-type designs are more fuel-efficient than block- or lug-types. And, a tire with a shallower tread tends to be more fuel-efficient.

With drive tires, designs incorporating continuous shoulder ribs are so resistant to irregular wear that designers can use very fuel-efficient tread compounds.

Computer analysis, like that of the BBTS TLCC program, can help you decide which tires deliver the best fuel efficiency.

### Fuel economy with retreads


If only the tread is modified to produce fuel economy, the fuel efficiency of the tire may end when it is retreaded, unless it's retreaded with a fuel-efficient tread.

Fortunately, there are a number of fuel-efficient retread materials available offering fuel economy comparable to that of the best new tires, but at a fraction of their cost.

In addition, many BBTS casings are specially constructed for fuel efficiency, and when retreaded – especially when capped with a fuel-efficient tread – may offer superior fuel economy.

## Inflation pressure effects

Inflation pressure effects are relatively small, but you can expect about a 2 percent improvement in fuel efficiency over a range of 20 PSI below to 20 PSI above recommended pressure.

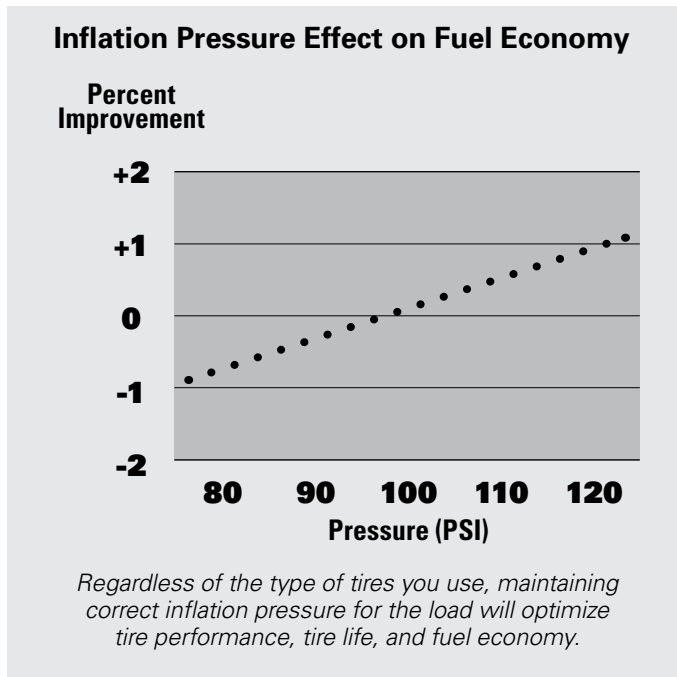

## Position contribution to fuel economy


In general, the contribution of the tires on any given axle to overall vehicle fuel efficiency is roughly determined by the amount of load on that axle.

In general, trailer tires make the largest contribution.

If you are evaluating tires, you should probably try fuel-efficient trailer tires first. If that doesn't work, changing drive and steer tires probably won't either.

### Axle Weight Distribution & Position Contribution to Fuel Economy

#### 80,000 lb. single trailer

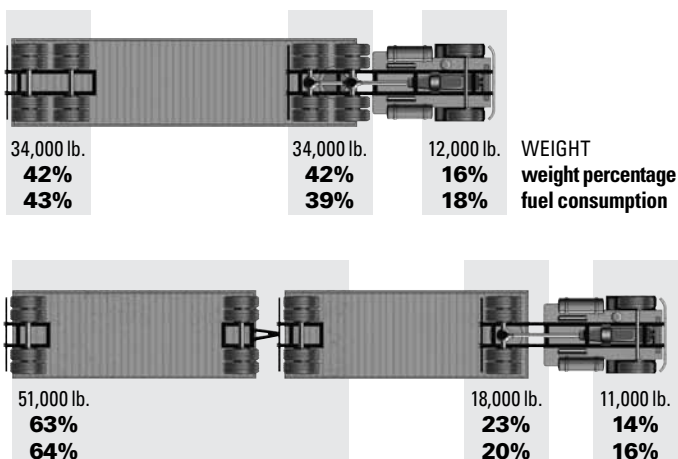

## What effect can fuel-efficient tires have?

Generally you will only see about half of the scientific test results in the real world. Much of this is because of interference by other factors outside the controlled variables of testing.

So, any fuel economy method that does not produce at least a 2-percent improvement in controlled testing will probably not produce a measurable real-world effect.

## Taking action

BBTS recommends you conduct your own tests to determine whether your investment will achieve a satisfactory return.

Comparing fuel receipts with odometer readings is something you can do yourself, on an ongoing basis, to see if your fuel economy program is working.

Here are some steps to take:








































## Recommendations

- 1 Test things yourself:** If you can't convince yourself and your accountant, what you're saving may be too small to stand out from the "noise."
- 2 Limit your investment:** Try trailer tires first, or better still, try fuel-efficient trailer retreads first.
- 3 Consider all the variables:** Fuel-efficient duals may save just as much fuel as wide base tires, without forcing you to buy new wheels. If you can't benefit from the weight savings, why spend the money?
- 4 Try other methods:** Driver behavior has a big effect on fuel economy. Driver training or incentives may be a better investment than new equipment.
- 5 Examine your priorities:** Make sure everyone is on board. If one department is trying to save fuel and another is trying to cut tire costs, they may be working against each other.
- 6 Call for help:** Your tire supplier can help you with advice and in conducting tests. Call BBTS for assistance at 1-800-847-3272.

## Try TLCC

Remember, only BBTS has the *Tire Life Cycle Cost (TLCC)* program, to help you make informed tire choices. Your BBTS representative will help you analyze your current tires (even if they are from BBTS competitors), and recommend tires that will produce the lowest overall tire and fuel cost over their useful life.

## Truck Type by Weight Class

Medium Truck	CLASS 1 6,000 lb & less	 Utility Van	 Compact Van	 Van
		 Pick-up	 Multi-purpose	 Doubles
Light Truck	CLASS 2 6,001-10,000 lb	 Utility Van	 Compact Van	 Liquid Tanker
		 Pick-up	 Walk-in	 Dry Bulk
General Technical	CLASS 3 10,001-14,000 lb	 Milk Bread	 Walk-in	 Logger
		 Compact Van		 Platform
	CLASS 4 14,001-16,000 lb	 Conventional Van		 Drop Frame
		 Large Walk-in		 Dump
	CLASS 5 16,001-19,500 lb	 Rack	 Tree Specialist	 Reefer
		 Large Walk-in		 Deep Drop
	CLASS 6 19,501-26,000 lb	 Furniture	 School	 Auto Trans
		 Coe Van	 Single Axle Van	
Load/Inflation	CLASS 7 26,001-33,000 lb	 Home Fuel	 Transit	
		 Trash	 Medium Conventional	
Technical Bulletins	CLASS 8 33,001 lb & over	 Dump	 Extra Heavy Tandem Conventional	
		 Cement	 Coe Sleeper	

Note: Trailer weight not listed.

## Medium Truck

## Light Truck

## General Technical

## Load/Inflation

## Technical Bulletins

NOTES

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins



**Load and Inflation Tables**  
**Table of Contents**

Medium Truck Radials . . . . . 92

Commercial Light Truck Radials . . . . . 98

Medium Truck
Light Truck
General Technical
Load/Inflation
Technical Bulletins



# Medium Commercial Truck Radials

RADIAL PLY TIRES FOR TRUCKS, BUSES AND TRAILERS USED IN NORMAL HIGHWAY SERVICE  
TIRES MOUNTED ON FLAT BASE RIMS

Tire Size Designation	USAGE	Tire Load Limits (kg./lb.) at various Cold Inflation Pressures (kPa/psi). Pressure Listed is the Minimum for the Load											
		kPa	480	520	550	590	620	660	690	720	760	790	830
		psi	70	75	80	85	90	95	100	105	110	115	120
11.00R15TR	DUAL	kg.	1820	1900	1970	2050	2120	2200	2270	<b>2360(G)</b> <sub>138</sub>	2460	2560	<b>2650(H)</b> <sub>142</sub>
		lb.	4000	4180	4350	4520	4680	4840	5000	<b>5205(G)</b>	5415	5625	<b>5840(H)</b> <sub>142</sub>
	SINGLE	kg.	1800	1970	2070	2160	2250	2340	2420	<b>2500(G)</b> <sub>140</sub>	2600	2700	<b>2800(H)</b> <sub>144</sub>
		lb.	4140	4350	4560	4770	4960	5150	5340	<b>5510(G)</b>	5730	5950	<b>6175(H)</b> <sub>144</sub>
11.00R20	DUAL	kg.	2170	2260	2360	2450	<b>2575(F)</b> <sub>141</sub>	2630	2680	<b>2725(G)</b> <sub>143</sub>	2840	2960	<b>3075(H)</b> <sub>147</sub>
		lb.	4780	4990	5190	5390	<b>5675(F)</b> <sub>141</sub>	5785	5895	<b>6005(G)</b>	6265	6525	<b>6780(H)</b> <sub>147</sub>
	SINGLE	kg.	2240	2360	2470	2580	<b>2725(F)</b> <sub>145</sub>	2820	2910	<b>3000(G)</b> <sub>146</sub>	3120	3240	<b>3350(H)</b> <sub>150</sub>
		lb.	4940	5200	5450	5690	<b>6005(F)</b> <sub>145</sub>	6205	2910	<b>6610(G)</b> <sub>146</sub>	3120	3240	<b>7390(H)</b> <sub>150</sub>
11.00R22	DUAL	kg.	2300	2400	2500	2600	<b>2650(F)</b> <sub>142</sub>	2770	2890	<b>3000(G)</b> <sub>146</sub>	3080	3160	<b>3250(H)</b> <sub>149</sub>
		lb.	5080	5300	5520	5730	<b>5840(F)</b> <sub>142</sub>	5095	6350	<b>6610(G)</b> <sub>146</sub>	6790	6970	<b>7160(H)</b> <sub>149</sub>
	SINGLE	kg.	2380	2500	2630	2740	<b>2900(F)</b> <sub>145</sub>	3020	3140	<b>3250(G)</b> <sub>149</sub>	3350	3450	<b>3550(H)</b> <sub>150</sub>
		lb.	5240	5520	5790	6040	<b>6395(F)</b> <sub>145</sub>	6650	6910	<b>7160(G)</b> <sub>149</sub>	7380	7600	<b>7830(H)</b> <sub>150</sub>
11.00R24	DUAL	kg.	2440	2550	2660	2760	<b>2800(F)</b> <sub>144</sub>	2920	3040	<b>3150(G)</b> <sub>148</sub>	3250	3350	<b>3450(H)</b> <sub>151</sub>
		lb.	5390	5630	5860	6090	<b>6175(F)</b> <sub>144</sub>	6430	6690	<b>6940(G)</b>	7160	7380	<b>7610(H)</b> <sub>151</sub>
	SINGLE	kg.	2440	2550	2660	2760	<b>3075(F)</b> <sub>147</sub>	3200	3330	<b>3450(G)</b> <sub>151</sub>	3550	3650	<b>3750(H)</b> <sub>154</sub>
		lb.	5390	5630	5860	6090	<b>6780(F)</b> <sub>147</sub>	7060	7340	<b>7610(G)</b> <sub>151</sub>	7830	8050	<b>8270(H)</b> <sub>154</sub>
12.00R20	DUAL	kg.	2470	2580	2680	2790	2880	<b>3000(G)</b> <sub>146</sub>	3080	3160	<b>3250(H)</b> <sub>149</sub>	3350	<b>3450(J)</b> <sub>151</sub>
		lb.	5440	5680	5910	6140	6360	<b>6610(G)</b> <sub>146</sub>	6790	6970	<b>7160(H)</b>	7390	<b>7610(J)</b> <sub>151</sub>
	SINGLE	kg.	2550	2690	2810	2940	3060	<b>3250(G)</b> <sub>149</sub>	3350	3450	<b>3550(H)</b> <sub>152</sub>	3650	<b>3750(J)</b> <sub>154</sub>
		lb.	5620	5920	6200	6480	6740	<b>7160(G)</b> <sub>149</sub>	7380	7600	<b>7830(H)</b>	8050	<b>8270(J)</b> <sub>154</sub>
12.00R24	DUAL	kg.	2780	2860	3020	3140	3250	<b>3350(G)</b> <sub>150</sub>	3450	3550	<b>3650(H)</b> <sub>153</sub>	3760	<b>3875(J)</b> <sub>155</sub>
		lb.	6120	6390	6650	6910	7160	<b>7390(G)</b> <sub>150</sub>	7610	7830	<b>8050(H)</b> <sub>153</sub>	8300	<b>8540(J)</b> <sub>155</sub>
	SINGLE	kg.	2870	3020	3170	3300	3440	<b>3650(G)</b> <sub>153</sub>	3770	3890	<b>4000(H)</b> <sub>156</sub>	4130	<b>4250(J)</b> <sub>158</sub>
		lb.	6330	6660	6980	7280	7580	<b>8050(H)</b> <sub>153</sub>	8310	8570	<b>8820(H)</b> <sub>156</sub>	9100	<b>9370(J)</b> <sub>158</sub>

NOTES: Letters in parentheses ( ) denote Load Range for which boldface loads and inflations are maximum.  
International Load Index numbers are shown after Load Range.  
IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

# Medium Commercial Truck Radials

RADIAL PLY METRIC TIRES FOR TRUCKS, BUSES AND TRAILERS USED IN NORMAL HIGHWAY SERVICE  
TIRES MOUNTED ON 15° DROP CENTER RIMS

Tire Size Designation	Usage	Tire Load Limits at various Cold Inflation Pressures (Pressure Listed is the Minimum for the Load)											
		kPa	480	520	550	590	620	660	690	720	760	790	830
		psi	70	75	80	85	90	95	100	105	110	115	120
215/75R17.5 M729 Only	DUAL	kg.		1250	1325	1400	1470	1550	<b>1600(F)</b> <sup>124</sup>				
		lb.		2760	2920	3080	3245	3420	<b>3525(F)</b>				
	SINGLE	kg.		1290	1370	1450	1520	1600	<b>1700(F)</b> <sup>126</sup>				
		lb.		2850	3015	3200	3350	3530	<b>3750(F)</b>				
215/75R17.5 R250F Load Range "G" Only	DUAL	kg.	1215	1285	1360	1400	1500	1550	<b>1600(G)</b> <sup>124</sup>				
		lb.	2680	2835	3000	3085	3305	3415	<b>3525(G)</b>				
	SINGLE	kg.	1285	1360	1530	1610	1680	1750	<b>1700(G)</b> <sup>126</sup>				
		lb.	2835	3000	3375	3540	3695	3860	<b>3750(G)</b>				
215/75R17.5 * R184 Only	DUAL	kg.			1450	1520	1590	1650	1720	1790	1860	1910	1990
		lb.			3195	3350	3500	3645	3795	3945	4095	4220	4390
	SINGLE	kg.			1530	1610	1680	1750	1820	1900	1960	2040	2110
		lb.			3375	3540	3695	3860	4010	4180	4330	4495	4650
245/70R17.5 * R184 Only	DUAL	kg.			1750	1840	1940	2030	2130	2220	2320	2420	2510
		lb.			3855	4060	4275	4485	4700	4905	5113	5330	5535
	SINGLE	kg.			1860	1960	2060	2150	2260	2360	2470	2570	2660
		lb.			4110	4330	4545	4750	4975	5210	5445	5660	5865

\* R184 FOR USE IN FREE-ROLLING TRAILER SERVICE ONLY.

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum. International Load Index numbers are shown after Load Range.  
IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

RADIAL PLY TIRES FOR TRUCKS, BUSES AND TRAILERS USED IN NORMAL HIGHWAY SERVICE  
TIRES MOUNTED ON 15° DROP CENTER RIMS

Tire Load Limits at Various Cold Inflation Pressures													
Tire Size Designation	Usage	kPa	590	620	660	690	720	760	790	830	860	900	930
		psi	85	90	95	100	105	110	115	120	125	130	135
9R17.5HC	DUAL	kg.	1380	1430	1480	1520	<b>1600(F)</b> <sup>124</sup>	1650	1700	<b>1750(G)</b> <sup>127</sup>	1800	1850	<b>1900(H)</b> <sup>130</sup>
		lb.	3040	3150	3260	3360	<b>3525(F)</b>	3635	3745	<b>3860(G)</b>	3970	4080	<b>4190(H)</b>
	SINGLE	kg.	1450	1520	1570	1630	<b>1700(F)</b> <sup>126</sup>	1750	1800	<b>1850(G)</b> <sup>129</sup>	1900	1950	<b>2000(H)</b> <sup>132</sup>
		lb.	3200	3340	3470	3590	<b>3750(F)</b>	3860	3970	<b>4080(G)</b>	4190	4300	<b>4410(H)</b>
10R17.5HC R180 Only	DUAL	kg.	<b>1650(E)</b> <sup>125</sup>	1720	1790	<b>1850(F)</b> <sup>126</sup>	1920	<b>2000(H)</b> <sup>132</sup>					
		lb.	<b>3640(E)</b>	3785	3930	<b>4080(F)</b>	4235	<b>4410(H)</b>					
	SINGLE	kg.	<b>1750(E)</b> <sup>127</sup>	1820	1890	<b>1950(F)</b> <sup>131</sup>	2030	<b>2120(H)</b> <sup>134</sup>					
		lb.	<b>3860(E)</b>	4005	4150	<b>4300(F)</b>	4470	<b>4675(H)</b>					

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.

International Load Index numbers are shown after Load Range.

IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

# Medium Commercial Truck Radials

RADIAL PLY METRIC TIRES FOR TRUCKS, BUSES AND TRAILERS USED IN NORMAL HIGHWAY SERVICE  
TIRES MOUNTED ON 15° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits (kg./lb.) at various Cold Inflation Pressures (kPa/psi). Pressure Listed is the Minimum for the Load											
		kPa	480	520	550	590	620	660	690	720	760	790	830
		psi	70	75	80	85	90	95	100	105	110	115	120
245/75R22.5	DUAL	kg.	1430	1500	1600	1640	1710	1800	1840	1900	<b>1950(G)</b> <sup>131</sup>		
		lb.	3160	3315	3525	3615	3765	3970	4055	4195	<b>4300(G)</b>		
	SINGLE	kg.	1570	1650	1750	1800	1880	1950	2020	2090	<b>2120(G)</b> <sup>134</sup>		
		lb.	3470	3645	3860	3975	4140	4300	4455	4610	<b>4675(G)</b>		
265/75R22.5	DUAL	kg.	1600	1680	1750	1830	1910	2000	2050	2130	<b>2180(G)</b> <sup>131</sup>		
		lb.	3525	3705	3860	4040	4205	4410	4525	4525	<b>4805(G)</b>		
	SINGLE	kg.	1760	1850	1950	2010	2100	2180	2260	2340	<b>2360(G)</b> <sup>138</sup>		
		lb.	3875	4070	4300	4440	4620	4805	4975	5150	<b>5205(G)</b>		
295/75R22.5 R287A & R280 Load Range "H" Only	DUAL	kg.	2030	2130	2240	2320	2420	2500	2600	2690	2800	2870	<b>3000(H)</b> <sup>143</sup>
		lb.	4470	4690	4940	5120	5330	5510	5740	5940	6175	6330	<b>6610(H)</b> <sup>143</sup>
	SINGLE	kg.	2230	2340	2430	2550	2660	2725	2860	2960	3075	3150	<b>3250(H)</b> <sup>148</sup>
		lb.	4915	5155	5355	5630	5860	6005	6305	6525	6780	6950	<b>7160(H)</b> <sup>148</sup>
295/75R22.5	DUAL	kg.	1860	1950	2060	2130	2220	2300	2390	2470	<b>2575(G)</b> <sup>141</sup>		
		lb.	4095	4300	4540	4690	4885	5070	5260	5440	<b>5675(G)</b>		
	SINGLE	kg.	2040	2140	2240	2340	2440	2500	2620	2710	<b>2800(G)</b> <sup>144</sup>		
		lb.	4500	4725	4940	5155	5370	5510	5780	5980	<b>6175(G)</b>		
285/75R24.5	DUAL	kg.	1870	1970	2060	2150	2240	<b>2360(F)</b> <sup>138</sup>	2410	2490	<b>2575(G)</b> <sup>141</sup>	2660	<b>2800(H)</b> <sup>144</sup>
		lb.	1435	4340	4540	4740	4930	<b>5205(F)</b>	5310	5495	<b>5675(G)</b>	5860	<b>6175(H)</b> <sup>144</sup>
	SINGLE	kg.	2060	2160	2240	2360	2460	<b>2575(F)</b> <sup>141</sup>	2650	2740	<b>2800(G)</b> <sup>144</sup>	2920	<b>3075(H)</b> <sup>147</sup>
		lb.	4545	4770	4940	5210	5420	<b>5675(F)</b>	5835	6040	<b>6175(G)</b>	6440	<b>6780(H)</b>

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.  
International Load Index numbers are shown after Load Range.  
IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

RADIAL PLY METRIC TIRES FOR TRUCKS, BUSES AND TRAILERS USED IN NORMAL HIGHWAY SERVICE  
TIRES MOUNTED ON 15° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	TIRE LOAD LIMITS AT VARIOUS COLD INFLATION PRESSURES											
		kPa	550	590	620	660	690	720	760	790	830	860	900
		psi	80	85	90	95	100	105	110	115	120	125	130
315/80R22.5 All Bridgestone Tires Except M860	DUAL	kg.	2575	2650	2750	2900	2970	3070	3150	3270	<b>3450(J)</b> <sup>151</sup>	3560	<b>3750(L)</b> <sup>154</sup>
		lb.	5675	5840	6070	6395	6545	6770	6940	7210	<b>7610(J)</b>	7850	<b>8270(L)</b> <sup>154</sup>
	SINGLE	kg.	2800	2910	3030	3150	3260	3370	3450	3590	<b>3750(J)</b> <sup>154</sup>	3900	<b>4125(L)</b> <sup>157</sup>
		lb.	6175	6415	6670	6940	7190	7440	7610	7920	<b>8270(J)</b>	8600	<b>9090(L)</b> <sup>157</sup>
315/80R22.5 Bridgestone M860 Only	DUAL	kg.	2575	2650	2750	2900	2970	3070	3150	3270	<b>3450(J)</b> <sup>151</sup>	3795	<b>4125(L)</b> <sup>157</sup>
		lb.	5675	5840	6070	6395	6545	6770	6940	7210	<b>7610(J)</b>	8350	<b>9090(L)</b> <sup>157</sup>
	SINGLE	kg.	2800	2910	3030	3150	3260	3370	3450	3590	<b>3750(J)</b> <sup>154</sup>	4150	<b>4355(L)</b>
		lb.	6175	6415	6670	6940	7190	7440	7610	7920	<b>8270(J)</b>	9135	<b>10000(L)</b>

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.  
International Load Index numbers are shown after Load Range.  
IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

# Medium Commercial Truck Radials

RADIAL PLY TIRES FOR TRUCKS, BUSES AND TRAILERS USED IN NORMAL HIGHWAY SERVICE  
TIRES MOUNTED ON 15° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits (kg./lb.) at various Cold Inflation Pressures (kPa/psi) Pressure Listed is the Minimum for the Load											
		kPa	480	520	550	590	620	660	690	720	760	790	830
		psi	70	75	80	85	90	95	100	105	110	115	120
8R19.5	DUAL	kg.	1120	1170	<b>1215(D)</b> <sup>115</sup>	1285	1310	<b>1360(E)</b> <sup>119</sup>	1410	1460	<b>1500(F)</b> <sup>122</sup>		
		lb.	2460	2570	<b>2680(D)</b> <sup>115</sup>	2785	2890	<b>3000(E)</b> <sup>119</sup>	3100	3200	<b>3305(F)</b> <sup>122</sup>		
	SINGLE	kg.	1150	1220	<b>1285(D)</b> <sup>117</sup>	1340	1400	<b>1450(E)</b> <sup>121</sup>	1500	1550	<b>1600(F)</b> <sup>124</sup>		
		lb.	2540	2680	<b>2835(D)</b> <sup>117</sup>	2955	3075	<b>3195(E)</b> <sup>121</sup>	3305	3415	<b>3525(F)</b> <sup>124</sup>		
8R22.5	DUAL	kg.	1250	1300	<b>1360(D)</b> <sup>119</sup>	1410	1460	<b>1500(E)</b> <sup>122</sup>	1570	1640	<b>1700(F)</b> <sup>126</sup>		
		lb.	2750	2870	<b>3000(D)</b> <sup>119</sup>	3100	3200	<b>3305(E)</b> <sup>122</sup>	3455	3605	<b>3525(F)</b> <sup>126</sup>		
	SINGLE	kg.	1290	1360	<b>1450(D)</b> <sup>121</sup>	1500	1550	<b>1600(E)</b> <sup>124</sup>	1670	1740	<b>1800(F)</b> <sup>128</sup>		
		lb.	2840	2990	<b>3195(D)</b> <sup>121</sup>	3305	3415	<b>3525(E)</b> <sup>124</sup>	3675	3825	<b>3970(F)</b> <sup>128</sup>		
9R22.5	DUAL	kg.	1480	1550	1610	1670	<b>1750(E)</b> <sup>127</sup>	1820	1890	<b>1950(F)</b> <sup>131</sup>	2010	2070	<b>2210(G)</b> <sup>134</sup>
		lb.	3270	3410	3550	3690	<b>3860(E)</b> <sup>127</sup>	4005	4150	<b>4300(F)</b> <sup>131</sup>	4425	4550	<b>4675(G)</b> <sup>134</sup>
	SINGLE	kg.	1530	1610	1690	1760	<b>1850(E)</b> <sup>129</sup>	1920	1990	<b>2060(F)</b> <sup>133</sup>	2120	2180	<b>2240(G)</b> <sup>136</sup>
		lb.	3370	3560	3730	3890	<b>4080(E)</b> <sup>129</sup>	4235	4390	<b>4540(F)</b> <sup>133</sup>	4675	4810	<b>4940(G)</b> <sup>136</sup>
10R22.5	DUAL	kg.	1750	1830	1910	<b>2000(E)</b> <sup>132</sup>	2080	2160	<b>2240(F)</b> <sup>136</sup>	2300	2360	<b>2430(G)</b> <sup>139</sup>	
		lb.	3860	4045	4230	<b>4410(E)</b> <sup>132</sup>	4585	4760	<b>4940(F)</b> <sup>136</sup>	5075	5210	<b>5355(G)</b> <sup>139</sup>	
	SINGLE	kg.	1850	1940	2030	<b>2120(E)</b> <sup>134</sup>	2200	2280	<b>2360(F)</b> <sup>138</sup>	2430	2500	<b>2575(G)</b> <sup>141</sup>	
		lb.	4080	4280	4480	<b>4675(E)</b> <sup>134</sup>	4850	5025	<b>5205(F)</b> <sup>138</sup>	5360	5515	<b>5675(G)</b> <sup>141</sup>	
11R22.5	DUAL	kg.	1990	2080	2160	2250	<b>2360(F)</b> <sup>138</sup>	2460	2560	<b>2650(G)</b> <sup>142</sup>	2680	2710	<b>2725(H)</b> <sup>143</sup>
		lb.	4380	4580	4760	4950	<b>5205(F)</b> <sup>138</sup>	5415	5625	<b>5840(G)</b> <sup>142</sup>	5895	5950	<b>6005(H)</b> <sup>143</sup>
	SINGLE	kg.	2050	2160	2260	2370	<b>2500(F)</b> <sup>140</sup>	2600	2700	<b>2800(G)</b> <sup>144</sup>	2870	2940	<b>3000(H)</b> <sup>146</sup>
		lb.	4560	4770	4990	5220	<b>5510(F)</b> <sup>140</sup>	5730	5950	<b>6175(G)</b> <sup>144</sup>	6320	6465	<b>6610(H)</b> <sup>146</sup>
11R24.5	DUAL	kg.	2110	2210	2300	2390	<b>2500(F)</b> <sup>140</sup>	2580	2660	<b>2725(G)</b> <sup>143</sup>	2820	2910	<b>3000(H)</b> <sup>146</sup>
		lb.	4660	4870	5070	5260	<b>5510(F)</b> <sup>140</sup>	5675	5840	<b>6005(G)</b> <sup>143</sup>	6205	6405	<b>6610(H)</b> <sup>146</sup>
	SINGLE	kg.	2190	2300	2410	2520	<b>2650(F)</b> <sup>142</sup>	2770	2890	<b>3000(G)</b> <sup>146</sup>	3080	3160	<b>3250(H)</b> <sup>149</sup>
		lb.	4820	5070	5310	5550	<b>5840(F)</b> <sup>142</sup>	6095	6350	<b>6610(G)</b> <sup>146</sup>	6790	6970	<b>7160(H)</b> <sup>149</sup>
12R22.5	DUAL	kg.	2170	2260	2350	2440	<b>2575(F)</b> <sup>141</sup>	2630	2680	<b>2725(G)</b> <sup>143</sup>	2840	2960	<b>3075(H)</b> <sup>147</sup>
		lb.	4780	4990	5190	5390	<b>5675(F)</b> <sup>141</sup>	5785	5895	<b>6005(G)</b> <sup>143</sup>	6265	6525	<b>6780(H)</b> <sup>147</sup>
	SINGLE	kg.	2240	2360	2470	2580	<b>2725(F)</b> <sup>141</sup>	2820	2910	<b>3000(G)</b> <sup>146</sup>	3120	3240	<b>3350(H)</b> <sup>150</sup>
		lb.	4940	5200	5450	5690	<b>6005(F)</b> <sup>141</sup>	6205	6405	<b>6610(G)</b> <sup>146</sup>	6870	7130	<b>7390(H)</b> <sup>150</sup>
12R24.5	DUAL	kg.	2300	2400	2500	2600	<b>2650(F)</b> <sup>142</sup>	2770	2890	<b>3000(G)</b> <sup>146</sup>	3080	3160	<b>3250(H)</b> <sup>149</sup>
		lb.	5080	5300	5520	5730	<b>5840(F)</b> <sup>142</sup>	6095	6350	<b>6610(G)</b> <sup>146</sup>	6790	6970	<b>7160(H)</b> <sup>149</sup>
	SINGLE	kg.	2380	2500	2630	2740	<b>2900(F)</b> <sup>145</sup>	3020	3140	<b>3250(G)</b> <sup>152</sup>	3350	3450	<b>3550(H)</b> <sup>152</sup>
		lb.	5240	5520	5790	6040	<b>6395(F)</b> <sup>145</sup>	6650	6910	<b>7160(G)</b> <sup>152</sup>	7380	7600	<b>7830(H)</b> <sup>152</sup>

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.

International Load Index numbers are shown after Load Range.

IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

METRIC WIDE BASE RADIAL TIRES FOR TRUCKS, BUSES AND TRAILERS USED IN NORMAL HIGHWAY SERVICE  
TIRES ARE USED AS SINGLES

TIRE SIZE DESIGNATION	TIRE LOAD LIMITS AT VARIOUS COLD INFLATION PRESSURES											
	kPa	480	520	550	590	620	660	690	720	760	790	830
	psi	70	75	80	85	90	95	100	105	110	115	120
445/50R22.5	kg.			3330	3520	3660	3850	3990	4130	4310	4450	4625
	lb.			7370	7740	8100	8460	8820	9170	9515	9860	10200
445/65R19.5	kg.	3410	3610	3750	3960	4100	4250	4410	4540	<b>4750(J)</b> <sup>162</sup>		
	lb.	7540	7930	8270	8680	9040	9370	9730	10100	<b>10500</b>		
385/65R22.5	kg.	2880	3060	3150	3350	3470	3650	3740	3850	4000	4100	<b>4250(J)</b> <sup>158</sup>
	lb.	6380	6720	6940	7350	7650	8050	8230	8510	8820	9050	<b>9370(J)</b> <sup>158</sup>
425/65R22.5	kg.	3430	3640	3750	3980	4130	4250	4440	4580	<b>4750(J)</b> <sup>162</sup>	4880	<b>5150(L)</b> <sup>165</sup>
	lb.	7590	7990	8270	8740	9100	9370	9790	10100	<b>10500</b>	10700	<b>11400(L)</b> <sup>165</sup>
445/65R22.5	kg.	3720	3950	4125	4320	4470	4625	4820	4960	5150	5290	<b>5600(L)</b> <sup>168</sup>
	lb.	8230	8660	9090	9480	9870	10200	10600	11000	11400	11700	<b>12300(L)</b> <sup>168</sup>

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.

International Load Index numbers are shown after Load Range.

IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

**BRIDGESTONE**

# Medium Commercial Truck Radials

RADIAL PLY METRIC TIRES FOR TRUCKS, BUSES AND TRAILERS USED IN NORMAL HIGHWAY SERVICE  
TIRES MOUNTED ON FLAT BASE RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits (kg./lb.) at various Cold Inflation Pressures (kPa/psi). Pressure Listed is the Minimum for the Load												
		kPa	480	520	550	590	620	660	690	720	760	790	830	860
		psi	70	75	80	85	90	95	100	105	110	115	120	125
7.50R15TR	DUAL	kg.	1030	1070	1120	1160	1200	<b>1250(E)</b> <sub>116</sub>	1300	1350	<b>1400(F)</b> <sub>120</sub>			
		lb.	2260	2360	2460	2550	2640	<b>2755(E)</b>	2865	2975	<b>3085(F)</b>			
	SINGLE	kg.	1060	1120	1170	1220	1270	<b>1329(E)</b>	1380	1440	<b>1500(F)</b> <sub>122</sub>			
		lb.	2460	2460	2580	2690	2800	<b>2910(E)</b>	3040	3170	<b>3305(F)</b>			
7.50R20	DUAL	kg.	1250	1300	<b>1360(D)</b> <sub>119</sub>	1410	1460	<b>1500(E)</b> <sub>122</sub>	1570	1640	<b>1700(F)</b> <sub>126</sub>	1750	<b>1800(G)</b> <sub>128</sub>	
		lb.	2750	2870	<b>3000(D)</b>	3100	3200	<b>3305(E)</b> <sub>122</sub>	3455	3605	<b>3750(F)</b> <sub>126</sub>	3860	<b>3970(G)</b> <sub>128</sub>	
	SINGLE	kg.	1290	1360	<b>1450(D)</b> <sub>121</sub>	1500	1550	<b>1600(E)</b> <sub>124</sub>	1670	1740	<b>1800(F)</b> <sub>128</sub>	1850	<b>1900(G)</b> <sub>130</sub>	
		lb.	2840	2990	<b>3195(D)</b> <sub>121</sub>	3305	3415	<b>3525(E)</b> <sub>124</sub>	3675	3825	<b>3970(F)</b> <sub>128</sub>	4080	<b>4190(G)</b> <sub>130</sub>	
8.25R15TR	DUAL	kg.	1220	1270	1330	1380	1430	1480	1520	<b>1600(F)</b> <sub>124</sub>	1650	1700	<b>1750(G)</b> <sub>127</sub>	<b>2190(J)*</b>
		lb.	2700	2810	2930	3040	3150	3260	3360	<b>3525(F)</b> <sub>124</sub>	3635	3745	<b>3860(G)</b> <sub>127</sub>	<b>4830(J)*</b>
	SINGLE	kg.	1260	1330	1400	1450	1520	1570	1630	<b>1700(F)</b> <sub>126</sub>	1750	1800	<b>1850(G)</b> <sub>129</sub>	<b>2255(J)*</b>
		lb.	2780	2930	3080	3200	3340	3470	3590	<b>3750(F)</b> <sub>126</sub>	3860	3970	<b>4080(G)</b> <sub>129</sub>	<b>4970(J)*</b>
8.25R20	DUAL	kg.	1480	1550	1610	1670	<b>1750(F)</b> <sub>127</sub>	1820	1890	<b>1950(F)</b> <sub>131</sub>	2010	2070	<b>2120(G)</b> <sub>134</sub>	
		lb.	3270	3410	3550	3690	<b>3860(E)</b>	4005	4150	<b>4300(F)</b> <sub>131</sub>	4425	4550	<b>4675(G)</b> <sub>134</sub>	
	SINGLE	kg.	1530	1610	1690	1760	<b>1850(E)</b> <sub>129</sub>	1920	1990	<b>2060(F)</b> <sub>133</sub>	2120	2180	<b>2240(G)</b> <sub>136</sub>	
		lb.	3370	3560	3730	3890	<b>4080(E)</b> <sub>129</sub>	4235	4390	<b>4540(F)</b> <sub>133</sub>	4675	4810	<b>4940(G)</b> <sub>136</sub>	
9.00R15TR	DUAL	kg.	1460	1520	1580	<b>1650(E)</b> <sub>125</sub>	1720	1790	<b>1850(F)</b> <sub>129</sub>	1920	1990	<b>2060(G)</b> <sub>133</sub>		
		lb.	3330	3500	3660	<b>3860(E)</b>	4005	4150	<b>4080(F)</b> <sub>129</sub>	4470	4640	<b>4805(G)</b> <sub>133</sub>		
	SINGLE	kg.	1510	1580	1660	<b>1750(E)</b> <sub>127</sub>	1820	1890	<b>1950(F)</b> <sub>131</sub>	2030	2110	<b>2180(G)</b> <sub>135</sub>		
		lb.	3330	3500	3660	<b>3860(E)</b> <sub>127</sub>	4005	4150	<b>4300(F)</b> <sub>131</sub>	4470	4640	<b>4805(G)</b> <sub>135</sub>		
9.00R20	DUAL	kg.	<b>1750(D)</b> <sub>127</sub>	1830	1910	<b>2000(E)</b> <sub>132</sub>	2080	2160	<b>2240(F)</b> <sub>136</sub>	2300	2360	<b>2430(G)</b> <sub>139</sub>		
		lb.	<b>3860(D)</b> <sub>127</sub>	4045	4230	<b>4410(E)</b> <sub>132</sub>	4585	4760	<b>4940(F)</b> <sub>136</sub>	5080	5220	<b>5355(G)</b> <sub>139</sub>		
	SINGLE	kg.	<b>1850(D)</b> <sub>129</sub>	1940	2030	<b>2120(E)</b> <sub>134</sub>	2200	2280	<b>2360(F)</b> <sub>138</sub>	2430	2500	<b>2575(G)</b> <sub>141</sub>		
		lb.	<b>4080(D)</b> <sub>129</sub>	4280	4480	<b>4675(E)</b> <sub>134</sub>	4850	5025	<b>5205(F)</b> <sub>138</sub>	5360	5515	<b>5675(G)</b> <sub>141</sub>		
10.00R15TR	DUAL	kg.	1660	1740	1810	1870	<b>1950(F)</b> <sub>131</sub>	2030	2110	<b>2180(G)</b> <sub>135</sub>	2260	2340	<b>2430(H)</b> <sub>139</sub>	<b>2900(H)*</b> <sub>145</sub>
		lb.	3660	3830	3980	4130	<b>4300(F)</b> <sub>131</sub>	4470	4640	<b>4805(G)</b> <sub>135</sub>	4990	5175	<b>5355(H)</b> <sub>139</sub>	<b>6395(J)*</b> <sub>145</sub>
	SINGLE	kg.	1710	1810	1890	1980	<b>2060(F)</b> <sub>133</sub>	2140	2220	<b>2300(G)</b> <sub>137</sub>	2390	2480	<b>2575(H)</b> <sub>141</sub>	<b>3150(J)*</b> <sub>148</sub>
		lb.	3780	3980	4170	4370	<b>4540(F)</b> <sub>133</sub>	4715	4890	<b>5070(G)</b> <sub>137</sub>	5270	5470	<b>5675(H)</b> <sub>141</sub>	<b>6945(J)*</b> <sub>148</sub>
10.00R20	DUAL	kg.	1990	2080	2160	2250	<b>2360(F)</b> <sub>138</sub>	2460	2560	<b>2650(G)</b> <sub>142</sub>	2680	2710	<b>2725(H)</b> <sub>143</sub>	
		lb.	4380	4580	4760	4950	<b>5205(F)</b> <sub>138</sub>	5415	5625	<b>5840(G)</b> <sub>142</sub>	5895	5950	<b>6005(H)</b> <sub>143</sub>	
	SINGLE	kg.	2050	2160	2260	2370	<b>2500(F)</b> <sub>140</sub>	2600	2700	<b>2800(G)</b> <sub>144</sub>	2870	2940	<b>3000(H)</b> <sub>146</sub>	
		lb.	4530	4770	4990	5220	<b>5510(F)</b> <sub>140</sub>	5730	5950	<b>6175(G)</b> <sub>144</sub>	6320	6455	<b>6610(H)</b> <sub>146</sub>	
10.00R22	DUAL	kg.	2110	2210	2300	2390	<b>2500(F)</b> <sub>140</sub>	2580	2660	<b>2725(G)</b> <sub>143</sub>	2820	2910	<b>3000(H)</b> <sub>146</sub>	
		lb.	4660	4870	5070	5260	<b>5510(F)</b> <sub>140</sub>	5675	5840	<b>6005(G)</b> <sub>143</sub>	6205	6405	<b>6610(H)</b> <sub>146</sub>	
	SINGLE	kg.	2190	2300	2410	2520	<b>2650(F)</b> <sub>142</sub>	2770	2890	<b>3000(G)</b> <sub>146</sub>	3080	3160	<b>3250(H)</b> <sub>149</sub>	
		lb.	4820	5070	5310	5550	<b>5849(F)</b> <sub>142</sub>	6095	6350	<b>6610(G)</b> <sub>146</sub>	6790	6970	<b>7160(H)</b> <sub>149</sub>	

\* R187 For Free Rolling Trailer ONLY

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.

International Load Index numbers are shown after Load Range.

IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

# Medium Commercial Truck Radials

RADIAL PLY METRIC TIRES FOR TRUCKS, BUSES AND TRAILERS USED IN NORMAL HIGHWAY SERVICE  
TIRES MOUNTED ON 15° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits (kg./lb.) at various Cold Inflation Pressures (kPa/psi). Pressure Listed is the Minimum for the Load												
		kPa	480	520	550	590	620	660	690	720	760	790	830	860
		psi	70	75	80	85	90	95	100	105	110	115	120	125
225/70R19.5	DUAL	kg. lb.	1230 2720	1300 2860	<b>1360(E)<sup>119</sup></b> <b>3000(E)<sup>119</sup></b>	1410 3115	1470 3245	<b>1550(F)<sup>123</sup></b> <b>3415(F)<sup>123</sup></b>	1580 3490	1640 3615	<b>1700(G)<sup>126</sup></b> <b>3750(G)<sup>126</sup></b>			
	SINGLE	kg. lb.			<b>1450(E)<sup>121</sup></b> <b>3195(E)<sup>121</sup></b>	1500 3315	1570 3450	<b>1650(F)<sup>125</sup></b> <b>3640(F)<sup>125</sup></b>	1690 3715	1740 3845	<b>1800(G)<sup>128</sup></b> <b>3970(G)<sup>128</sup></b>			
245/70R19.5	DUAL	kg. lb.			1550 3415	1650 3650	1700 3750	<b>1800(F)<sup>128</sup></b> <b>3970(F)<sup>128</sup></b>	1850 4080	1900 4190	<b>2000(G)<sup>134</sup></b> <b>4410(G)<sup>134</sup></b>			
	SINGLE	kg. lb.			1600 3525	1700 3750	1750 3860	<b>1850(F)<sup>129</sup></b> <b>4080(F)<sup>129</sup></b>	1900 4190	1950 4300	<b>2060(G)<sup>135</sup></b> <b>4540(G)<sup>135</sup></b>			
245/70R19.5 R250F M729F LOAD RANGE "H" ONLY	DUAL	kg. lb.			1550 3415	1650 3640	1700 3750	1800 3970	1850 4080	1900 4190	2000 4410	2060 4540	<b>2120(H)<sup>141</sup></b> <b>4675(H)<sup>141</sup></b>	
	SINGLE	kg. lb.			1600 3525	1700 3750	1750 3860	1850 4080	1950 4300	2000 4410	2060 4540	2180 4805	<b>2240(H)<sup>144</sup></b> <b>4940(H)<sup>144</sup></b>	
245/70R19.5 M724F ONLY	DUAL	kg. lb.			1550 3415	1650 3650	1660 3655	<b>1750(F)<sup>127</sup></b> <b>3860(F)<sup>127</sup></b>	1870 4125	1990 4390	<b>2120(G)<sup>134</sup></b> <b>4675(G)<sup>134</sup></b>			
	SINGLE	kg. lb.			1650 3640	1700 3740	1770 3890	<b>1850(F)<sup>129</sup></b> <b>4080(F)<sup>129</sup></b>	1980 4370	2110 4655	<b>2240(G)<sup>136</sup></b> <b>4940(G)<sup>136</sup></b>			
265/70R19.5 R250F ONLY	DUAL	kg. lb.			1700 3750	1780 3930	1860 4095	1950 4300	2000 4405	2000 4415	<b>2180(G)<sup>135</sup></b> <b>4805(G)<sup>135</sup></b>			
	SINGLE	kg. lb.			1800 3970	1900 4180	1970 4355	2060 4540	2130 4685	2200 4850	<b>2360(G)<sup>138</sup></b> <b>5205(G)<sup>138</sup></b>			
265/70R19.5 M729 ONLY	DUAL	kg. lb.			1700 3745	1780 3925	1860 4100	1950 4300	2000 4410	2170 4785	<b>2360(G)<sup>138</sup></b> <b>5205(G)<sup>138</sup></b>			
	SINGLE	kg. lb.			1800 3970	1900 4190	1970 4345	2060 4540	2200 4850	2340 5205	<b>2500(G)<sup>140</sup></b> <b>5510(G)<sup>140</sup></b>			
285/70R19.5	DUAL	kg. lb.				1980 4365	2000 4400	2120 4675	2150 4735	2220 4900	<b>2300(G)<sup>137</sup></b> <b>5070(G)<sup>137</sup></b>	2380 5255	2570 5675	<b>2725(H)<sup>143</sup></b> <b>6005(H)<sup>143</sup></b>
	SINGLE	kg. lb.				2110 4645	2190 4835	2300 5070	2360 5205	2440 5385	<b>2500(G)<sup>140</sup></b> <b>5510(G)<sup>140</sup></b>	2600 5740	2800 6175	<b>2900(H)<sup>145</sup></b> <b>6395(H)<sup>145</sup></b>
305/70R19.5 R227F Only	DUAL	kg. lb.			2060 4540	2120 4670	2200 4860	2300 5070	2370 5230	2450 5410	<b>2575(H)<sup>141</sup></b> <b>5675(H)<sup>141</sup></b>	2620 5770	2725 6005	<b>2900(J)<sup>145</sup></b> <b>6395(J)<sup>145</sup></b>
	SINGLE	kg. lb.			2240 4940	2330 5130	2420 5340	2500 5510	2610 5745	2700 5945	<b>2800(H)<sup>144</sup></b> <b>6175(H)<sup>144</sup></b>	2870 6340	3000 6610	<b>3150(J)<sup>148</sup></b> <b>6945(J)<sup>148</sup></b>
255/70R22.5	DUAL	kg. lb.			1800 3970	1860 4110	1940 4275	2000 4410	2020 4455	2090 4610	<b>2120(G)<sup>134</sup></b> <b>4675(G)<sup>134</sup></b>	2230 4915	<b>2300(H)<sup>137</sup></b> <b>5070(H)<sup>137</sup></b>	
	SINGLE	kg. lb.			1900 4190	1980 4370	2060 4550	2120 4675	2220 4895	2300 5065	<b>2360(G)<sup>138</sup></b> <b>5205(G)<sup>138</sup></b>	2450 5400	<b>2500(H)<sup>140</sup></b> <b>5510(H)<sup>140</sup></b>	
275/70R22.5 R250 F/ED LOAD RANGE "J" ONLY	DUAL	kg. lb.				2180 4805	2300 5070	2430 5355	2500 5510	2575 5675	2725 6005	2800 6175	<b>2900(J)<sup>145</sup></b> <b>6395(J)<sup>145</sup></b>	
	SINGLE	kg. lb.				2430 5355	2500 5510	2650 5840	2725 6005	2900 6395	3000 6610	3075 6940	<b>3175(J)<sup>145</sup></b> <b>7000(J)<sup>145</sup></b>	
275/70R22.5 M840 LOAD RANGE "J" ONLY	DUAL	kg. lb.				2180 4805	2300 5070	2430 5355	2500 5510	2575 5675	2725 6005	2800 6175	<b>2900(J)<sup>145</sup></b> <b>6395(J)<sup>145</sup></b>	
	SINGLE	kg. lb.				2360 5205	2500 5510	2650 5840	2725 6005	2800 6175	2900 6395	3075 6780	<b>3150(J)<sup>148</sup></b> <b>6940(J)<sup>148</sup></b>	
275/80R22.5	DUAL	kg. lb.			2060 4540	2130 4690	2220 4885	<b>2300(F)<sup>137</sup></b> <b>5070(F)<sup>137</sup></b>	2390 5260	2470 5440	<b>2575(G)<sup>141</sup></b> <b>5675(G)<sup>141</sup></b>	2630 5795	<b>2725(H)<sup>145</sup></b> <b>6005(H)<sup>145</sup></b>	
	SINGLE	kg. lb.			2240 4940	2340 5155	2440 5370	<b>2500(F)<sup>140</sup></b> <b>5510(F)<sup>140</sup></b>	2620 5780	2710 5980	<b>2800(G)<sup>144</sup></b> <b>6175(G)<sup>144</sup></b>	2890 6370	<b>3000(H)<sup>148</sup></b> <b>6610(H)<sup>148</sup></b>	
295/80R22.5 R250F Only	DUAL	kg. lb.			2180 4810	2300 5080	2420 5340	2540 600	2660 5860	2780 6130	2900 6390	3075 6780	3115 6860	<b>3150(H)<sup>148</sup></b> <b>6940(H)<sup>148</sup></b>
	SINGLE	kg. lb.			2430 5350	2560 5640	2690 5930	2820 6220	2950 6510	3090 6810	3220 7100	3350 7390	3455 7610	<b>3550(H)<sup>152</sup></b> <b>7830(H)<sup>152</sup></b>
305/75R22.5	DUAL	kg. lb.			2360 5205	2440 5375	2540 5595	2560 5840	2730 6025	2830 6235	3000 6610	3010 6640	<b>3150(J)<sup>148</sup></b> <b>6940(J)<sup>148</sup></b>	
	SINGLE	kg. lb.			2575 5675	2680 5905	2790 6150	2900 6395	3000 6620	3110 6850	3250 7160	3310 7300	<b>3450(J)<sup>151</sup></b> <b>7610(J)<sup>151</sup></b>	
305/85R22.5	DUAL	kg. lb.			2430 5355	2520 5550	2620 5780	2725 6005	2820 6215	2920 6435	<b>3075(H)<sup>147</sup></b> <b>6780(H)<sup>147</sup></b>			
	SINGLE	kg. lb.			2650 840	2770 6100	2880 6350	3000 6610	3100 6830	3210 7070	<b>3350(H)<sup>150</sup></b> <b>7390(H)<sup>150</sup></b>			
305/75R24.5 R294 Only	DUAL	kg. lb.			2170 4780	2290 5040	2400 5300	2520 5560	2660 5860	2640 5820	2760 6090	2880 6340	3010 6640	<b>3250(J)<sup>148</sup></b> <b>6945(J)<sup>148</sup></b>
	SINGLE	kg. lb.			2380 5251	2510 5540	2640 5820	2770 6110	2900 6400	3030 6680	3160 6970	3290 7260	3420 7540	<b>3550(J)<sup>152</sup></b> <b>7830(J)<sup>152</sup></b>

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum. • International Load Index numbers are shown after Load Range. • IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.



# Commercial Light Truck Radials

LIGHT TRUCK METRIC TIRES FOR TRUCKS, BUSES, TRAILERS AND MULTIPURPOSE PASSENGER VEHICLES USED IN  
NORMAL HIGHWAY SERVICE  
RADIAL PLY TIRES MOUNTED ON 5° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits (lb.) at various Cold Inflation Pressures							
		kPa	250	300	350	400	450	500	550
		psi	35	45	50	60	65	75	80
LT205/75R15	DUAL	kg.	530	605	<b>690(C)</b> <sup>95</sup>	740	<b>800(D)</b> <sup>100</sup>		
		lb.	1145	1360	<b>1520(C)</b>	1665	<b>1765(D)</b>		
	SINGLE	kg.	585	665	<b>750(C)</b> <sup>98</sup>	815	<b>875(D)</b> <sup>103</sup>		
		lb.	1260	1500	<b>1655(C)</b>	1795	<b>1930(D)</b>		
LT215/75R15	DUAL	kg.	570	645	<b>730(C)</b> <sup>97</sup>	790	<b>875(D)</b> <sup>103</sup>		
		lb.	1255	1420	<b>1610(C)</b>	1740	<b>1930(D)</b>		
	SINGLE	kg.	625	710	<b>800(C)</b> <sup>100</sup>	870	<b>950(D)</b> <sup>106</sup>		
		lb.	1375	1565	<b>1765(C)</b>	1915	<b>2095(D)</b>		
LT225/75R15	DUAL	kg.	610	690	<b>775(C)</b> <sup>99</sup>	845	<b>900(D)</b> <sup>104</sup>		
		lb.	1345	1520	<b>1710(C)</b>	1860	<b>1985(D)</b>		
	SINGLE	kg.	670	760	<b>850(C)</b> <sup>102</sup>	930	<b>1000(D)</b> <sup>108</sup>		
		lb.	1475	1675	<b>1875(C)</b>	2050	<b>2205(D)</b>		
LT235/75R15	DUAL	kg.	645	735	<b>825(C)</b> <sup>101</sup>	900	<b>975(D)</b> <sup>107</sup>	1060	<b>1150(E)</b> <sup>113</sup>
		lb.	1420	1620	<b>1820(C)</b>	1985	<b>2150(D)</b>	2335	<b>2535(E)</b>
	SINGLE	kg.	710	810	<b>900(C)</b> <sup>104</sup>	990	<b>1060(D)</b> <sup>110</sup>	1160	<b>1250(E)</b> <sup>116</sup>
		lb.	1565	1785	<b>1985(C)</b>	2180	<b>2335(D)</b>	2555	<b>2755(E)</b>
LT245/75R15	DUAL	kg.	690	785	<b>875(C)</b> <sup>103</sup>				
		lb.	1520	1730	<b>1930(C)</b>				
	SINGLE	kg.	760	865	<b>975(C)</b> <sup>107</sup>				
		lb.	1675	1905	<b>2150(C)</b>				
LT255/75R15	DUAL	kg.	735	835	<b>925(C)</b> <sup>105</sup>				
		lb.	1620	1840	<b>2040(C)</b>				
	SINGLE	kg.	805	915	<b>1030(C)</b> <sup>109</sup>				
		lb.	1775	2015	<b>2270(C)</b>				
LT265/75R15	DUAL	kg.	780	885	<b>1000(C)</b> <sup>108</sup>				
		lb.	1720	1950	<b>2205(C)</b>				
	SINGLE	kg.	855	970	<b>1090(C)</b> <sup>111</sup>				
		lb.	1885	2140	<b>2405(C)</b>				

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.

International Load Index numbers are shown after Load Range.

IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

# Commercial Light Truck Radials

LIGHT TRUCK METRIC TIRES FOR TRUCKS, BUSES, TRAILERS AND  
MULTIPURPOSE PASSENGER VEHICLES USED IN NORMAL HIGHWAY SERVICE  
RADIAL PLY TIRES MOUNTED ON 5° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits at various Cold Inflation Pressures										
		kPa	250	280	310	350	380	410	450	480	520	550
		psi	35	40	45	50	55	60	65	70	75	80
80 SERIES												
LT215/80R15	DUAL	kg.	590	645	675	750	810	825	875(D) 1930(D) <sup>103</sup>			
		lb.	1275	1395	1515	1655	1745	1855				
	SINGLE	kg.	650	710	740	825	890	905	975(D) 2150(D) <sup>107</sup>			
		lb.	1400	1535	1665	1820	1920	2040				
LT235/80R17	DUAL	kg.	730	800	830	925	1015	1010	1120	1090	1180	1285(E) 2835(E) <sup>117</sup>
		lb.	1570	1725	1870	2040	2190	2315	2470	2560	2685	
	SINGLE	kg.	800	880	910	1030	1115	1110	1215	1305	1300	1400(E) 3085(E) <sup>120</sup>
		lb.	1725	1895	2055	2270	2405	2545	2680	2815	2950	
85 SERIES												
LT215/85R16	DUAL	kg.	630	690	720	800(C) 1765(C) <sup>100</sup>	865	870	975(D) 2150(D) <sup>107</sup>	1025	1030	1120(E) 2470(E) <sup>112</sup>
		lb.	1360	1490	1625		1865	1985		2210	2320	
	SINGLE	kg.	695	760	790	880(C) 1940(C) <sup>103</sup>	950	965	1060(D) 2335(D) <sup>110</sup>	1130	1130	1215(E) 2680(E) <sup>115</sup>
		lb.	1495	1640	1785		2050	2180		2430	2550	
LT235/85R16	DUAL	kg.	720	790	820	910(C) 2006(C) <sup>104</sup>	985	1000	1080(D) 2381(D) <sup>111</sup>	1165	1170	1260(E) 2778(E) <sup>116</sup>
		lb.	1545	1700	1845		2125	2260		2515	2645	
	SINGLE	kg.	790	965	900	1000(C) 2205(C) <sup>108</sup>	1100	1155	1190(D) 2623(D) <sup>114</sup>	1285	1290	1380(E) 3042(E) <sup>120</sup>
		lb.	1700	1870	2030		2335	2485		2765	2905	
LT255/85R16	DUAL	kg.	815	890	930	1030(C) 2270(C) <sup>109</sup>	1115	1130	1250(D) 2755(D) <sup>116</sup>	1320	1320	1400(E) 3085(E) <sup>120</sup>
		lb.	1745	1920	2085		2400	2550		2840	2980	
	SINGLE	kg.	895	980	1020	1120(C) 2470(C) <sup>112</sup>	1225	1240	1360(D) 3000(D) <sup>119</sup>	1450	1450	1550(E) 3415(E) <sup>123</sup>
		lb.	1920	2110	2290		2635	2800		3120	3275	

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.

International Load Index numbers are shown after Load Range.

IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

RADIAL PLY TIRES FOR TRUCKS, BUSES, TRAILERS IN NORMAL HIGHWAY SERVICE  
MOUNTED ON FLAT BASE RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits at various Cold Inflation Pressures									
		kPa	410	450	480	520	550	590	620	660	690
		psi	60	65	70	75	80	85	90	95	100
7.50R16LT	DUAL	kg.	925	<b>975(D)</b> <sup>107</sup>	1020	1065	<b>1120(E)</b> <sup>112</sup>	1150	1190	<b>1250(F)</b> <sup>116</sup>	<b>1450(G)</b> <sup>121</sup>
		lb.	2040	<b>2150(D)</b>	2245	2345	<b>2470(E)</b>	2540	2630	<b>2755(F)</b>	<b>3195(G)</b>
	SINGLE	kg.	1050	<b>1120(D)</b> <sup>112</sup>	1160	1210	<b>1250(E)</b> <sup>116</sup>	1310	1360	<b>1400(F)</b> <sup>120</sup>	<b>1510(G)</b> <sup>122</sup>
		lb.	2310	<b>2470(D)</b>	2560	2670	<b>2755(E)</b>	2885	2900	<b>3085(F)</b>	<b>3330(G)</b>

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.

International Load Index numbers are shown after Load Range.

IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

Commercial Light Truck Radials

LIGHT TRUCK TIRES FOR TRUCKS, BUSES, TRAILERS AND MULTIPURPOSE PASSENGER VEHICLES USED IN NORMAL HIGHWAY SERVICE  
RADIAL PLY TIRES MOUNTED ON 5° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits (lb.) at various Cold Inflation Pressures										
		RADIAL PLY										
		kPa	250	280	310	340	380	410	450	480	520	550
		psi	35	40	45	50	55	60	65	70	75	80
		DIAGONAL (BIAS) PLY										
		kPa	210	240	280	310	340	380	410	450	480	520
	psi	30	35	40	45	50	55	60	65	70	75	
6.50*16LT	DUAL	kg.	510	555	600	650(C) <sub>93</sub>	680	720	750(D) <sub>98</sub>	795	830	875(E) <sub>103</sub>
		lb.	1120	1225	1320	1435(C)	1500	1590	1655(D)	1750	1830	1930(E)
	SINGLE	kg.	575	630	680	730(C) <sub>97</sub>	775	815	875(D) <sub>103</sub>	905	945	975(E) <sub>107</sub>
		lb.	1270	1390	1500	1610(C)	1710	1800	1930(D)	1990	2080	2150(E) <sub>107</sub>
6.70*15LT	DUAL	kg.	480	530	575	615(C) <sub>91</sub>	655	690	730(D) <sub>97</sub>	760	795	825(E) <sub>101</sub>
		lb.	1060	1170	1265	1355(C)	1440	1520	1610(D)	1670	1750	1820(E) <sub>101</sub>
	SINGLE	kg.	550	600	650	690(C) <sub>95</sub>	740	780	825(D) <sub>101</sub>	860	900	925(E) <sub>105</sub>
		lb.	1210	1320	1430	1530(C)	1630	1720	1820(D)	1900	1980	2040(E) <sub>105</sub>
7.00*15LT	DUAL	kg.	540	595	645	690(C) <sub>95</sub>	735	780	825(D) <sub>101</sub>	850	890	925(E) <sub>105</sub>
		lb.	1190	1310	1420	1520(C)	1620	1715	1820(D)	1870	1960	2040(E) <sub>105</sub>
	SINGLE	kg.	610	670	730	775(D) <sub>99</sub>	830	880	925(D) <sub>105</sub>	965	1005	1060(E) <sub>110</sub>
		lb.	1350	1480	1610	1710(C)	1830	1940	2040(D)	2130	2220	2335(E) <sub>110</sub>

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.  
International Load Index numbers are shown after Load Range.  
IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

LIGHT TRUCK TIRES FOR TRUCKS, BUSES, TRAILERS AND MULTIPURPOSE PASSENGER VEHICLES USED IN NORMAL HIGHWAY SERVICE  
MOUNTED ON FLAT BASE RIMS

TIRE SIZE DESIGNATION	Usage	Tire Load Limits at various Cold Inflation Pressures			
		kPa	500	550	900
		psi	75	80	85
8R17.5 LT M773 SWP Only	DUAL	kg.	11225	1190	<b>1250(E)</b> <sub>116</sub>
		lb.	2480	2625	<b>2755(E)</b>
	SINGLE	kg.	1155	1220	<b>1285(E)</b> <sub>116</sub>
		lb.	2545	2690	<b>2835(E)</b>

NOTES: Letters in parentheses denote Load Range for which boldface loads and inflations are maximum.  
International Load Index numbers are shown after Load Range.  
IMPORTANT — ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETER AND CONTOURS.

# Commercial Light Truck Radials

LIGHT TRUCK TIRES FOR TRUCKS, BUSES, TRAILERS, AND MULTIPURPOSE PASSENGER VEHICLES USED IN NORMAL HIGHWAY SERVICE  
TIRES MOUNTED ON 5° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits (lb.) at various Cold Inflation Pressures													
		RADIAL PLY													
		kPa	250	280	310	350	380	410	450	480	520	550	590	620	660
		psi	35	40	45	50	55	60	65	70	75	80	85	90	95
		DIAGONAL (BIAS) PLY													
8.00*16.5LT	DUAL	kg.	540	595	640	<b>690(C)</b> <sup>95</sup>	735	775	<b>825(D)</b> <sup>101</sup>	855	895	<b>925(E)</b> <sup>105</sup>	965	1000	<b>1030(F)</b> <sup>109</sup>
		lb.	1195	1310	1415	<b>1520(C)</b> <sup>95</sup>	1620	1710	<b>1820(D)</b> <sup>101</sup>	1885	1970	<b>2040(E)</b> <sup>105</sup>	2130	2200	<b>2270(F)</b> <sup>109</sup>
	SINGLE	kg.	615	675	730	<b>800(C)</b> <sup>100</sup>	835	880	<b>925(D)</b> <sup>105</sup>	975	1020	<b>1060(E)</b> <sup>110</sup>	1100	1130	<b>1180(F)</b> <sup>114</sup>
		lb.	1360	1490	1610	<b>1765(C)</b> <sup>100</sup>	1840	1945	<b>2040(D)</b> <sup>105</sup>	2145	2240	<b>2335(E)</b> <sup>110</sup>	2420	2500	<b>2600(F)</b> <sup>114</sup>
8.75*16.5LT	DUAL	kg.	625	685	740	<b>800(C)</b> <sup>100</sup>	840	895	<b>950(D)</b> <sup>105</sup>	985	1030	<b>1090(E)</b> <sup>111</sup>	1110	1150	<b>1215(F)</b> <sup>115</sup>
		lb.	1380	1515	1630	<b>1765(C)</b> <sup>100</sup>	1855	1970	<b>2095(D)</b> <sup>105</sup>	2175	2260	<b>2405(E)</b> <sup>111</sup>	2450	2540	<b>2680(F)</b> <sup>115</sup>
	SINGLE	kg.	710	780	840	<b>900(C)</b> <sup>104</sup>	955	1020	<b>1090(D)</b> <sup>111</sup>	1120	1170	<b>1215(E)</b> <sup>115</sup>	1260	1310	<b>1360(F)</b> <sup>119</sup>
		lb.	1570	1720	1850	<b>1985(C)</b> <sup>104</sup>	2110	2240	<b>2405(D)</b> <sup>111</sup>	2470	2570	<b>2680(E)</b> <sup>115</sup>	2780	2880	<b>3000(F)</b> <sup>119</sup>
9.50*16.5LT	DUAL	kg.	740	810	875	<b>950(C)</b> <sup>106</sup>	1000	1060	<b>1120(D)</b> <sup>112</sup>	1170	1220	<b>1285(E)</b> <sup>117</sup>			
		lb.	1635	1785	1925	<b>2095(C)</b> <sup>106</sup>	2200	2330	<b>2470(D)</b> <sup>112</sup>	2570	2685	<b>2835(E)</b> <sup>117</sup>			
	SINGLE	kg.	845	920	995	<b>1090(C)</b> <sup>111</sup>	1130	1200	<b>1285(D)</b> <sup>117</sup>	1320	1380	<b>1450(E)</b> <sup>121</sup>			
		lb.	1860	2030	2190	<b>2405(C)</b> <sup>111</sup>	2500	2650	<b>2835(D)</b> <sup>117</sup>	2920	3050	<b>3195(E)</b> <sup>121</sup>			
10*16.5LT	DUAL	kg.	<b>730(B)</b> <sup>97</sup>	805	865	<b>925(C)</b> <sup>105</sup>	990	1050	<b>1120(D)</b> <sup>112</sup>	1150	1200	<b>1250(E)</b> <sup>116</sup>			
		lb.	<b>1610(B)</b> <sup>97</sup>	1770	1910	<b>2040(C)</b> <sup>105</sup>	2180	2310	<b>2470(D)</b> <sup>112</sup>	2540	2650	<b>2755(E)</b> <sup>116</sup>			
	SINGLE	kg.	<b>850(B)</b> <sup>102</sup>	910	985	<b>1060(C)</b> <sup>110</sup>	1120	1190	<b>1250(D)</b> <sup>118</sup>	1310	1370	<b>1450(E)</b> <sup>121</sup>			
		lb.	<b>1875(B)</b> <sup>102</sup>	2010	2170	<b>2335(C)</b> <sup>110</sup>	2480	2620	<b>2755(D)</b> <sup>118</sup>	2885	3010	<b>3195(E)</b> <sup>121</sup>			
12*16.5LT	DUAL	kg.	<b>950(C)</b> <sup>106</sup>	1030	1120	<b>1215(D)</b> <sup>116</sup>	1270	1350	<b>1450(E)</b> <sup>121</sup>	1490	1550	<b>1650(F)</b> <sup>125</sup>			
		lb.	<b>2095(C)</b> <sup>106</sup>	2280	2460	<b>2680(D)</b> <sup>116</sup>	2810	2970	<b>3195(E)</b> <sup>121</sup>	3275	3420	<b>3640(F)</b> <sup>125</sup>			
	SINGLE	kg.	<b>1090(C)</b> <sup>111</sup>	1170	1270	<b>1360(D)</b> <sup>119</sup>	1450	1530	<b>1650(E)</b> <sup>125</sup>	1690	1760	<b>1850(F)</b> <sup>129</sup>			
		lb.	<b>2405(C)</b> <sup>111</sup>	2590	2800	<b>3000(D)</b> <sup>119</sup>	3190	3370	<b>3640(E)</b> <sup>125</sup>	3720	3885	<b>4080(F)</b> <sup>129</sup>			

NOTES: Letters in parentheses ( ) denote Load Range for which boldface loads are MAXIMUM.

International Load Index numbers are shown after the Load Range.

IMPORTANT: ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETERS AND CONTOURS.

LIGHT TRUCK METRIC TIRES FOR TRUCKS, BUSES, TRAILERS, AND MULTIPURPOSE PASSENGER VEHICLES USED IN NORMAL HIGHWAY SERVICE.  
RADIAL PLY TIRES MOUNTED ON 5° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits (lb.) at various Cold Inflation Pressures										
		kPa	250	275	300	350	380	400	450	780	500	550
		psi	35	40	45	50	55	60	65	70	75	80
LT225/75R16	DUAL	kg.	635	675	725	<b>800(C)</b> <sup>100</sup>	945	885	<b>975(D)</b> <sup>107</sup>	1000	1040	<b>1120(E)</b> <sup>112</sup>
		lb.	1365	1500	1630	<b>1765(C)</b> <sup>100</sup>	1875	1995	<b>2150(D)</b> <sup>107</sup>	2220	2330	<b>2470(E)</b> <sup>112</sup>
	SINGLE	kg.	700	745	795	<b>880(C)</b> <sup>103</sup>	930	970	<b>1060(D)</b> <sup>110</sup>	1100	1140	<b>1215(E)</b> <sup>115</sup>
		lb.	1500	1650	1790	<b>1940(C)</b> <sup>103</sup>	2060	2190	<b>2335(D)</b> <sup>110</sup>	2440	2560	<b>2680(E)</b> <sup>115</sup>
LT245/75R16	DUAL	kg.	720	765	820	<b>910(C)</b> <sup>104</sup>	960	1000	<b>1080(D)</b> <sup>111</sup>	1135	1170	<b>1260(E)</b> <sup>116</sup>
		lb.	1545	1695	1845	<b>2006(C)</b> <sup>104</sup>	2125	2255	<b>2381(D)</b> <sup>111</sup>	2515	2640	<b>2778(E)</b> <sup>116</sup>
	SINGLE	kg.	790	840	900	<b>1000(C)</b> <sup>108</sup>	1055	1100	<b>1190(D)</b> <sup>114</sup>	1250	1290	<b>1380(E)</b> <sup>120</sup>
		lb.	1700	1865	2030	<b>2205(C)</b> <sup>108</sup>	2335	2480	<b>2623(D)</b> <sup>114</sup>	2765	2900	<b>3042(E)</b> <sup>120</sup>
LT265/75R16	DUAL	kg.	810	860	920	<b>1030(C)</b> <sup>109</sup>	1080	1130	<b>1250(D)</b> <sup>116</sup>	1275	1310	<b>1400(E)</b> <sup>120</sup>
		lb.	1740	1910	2075	<b>2270(C)</b> <sup>109</sup>	2390	2540	<b>2755(D)</b> <sup>116</sup>	2825	2965	<b>3085(E)</b> <sup>120</sup>
	SINGLE	kg.	890	950	1010	<b>1120(C)</b> <sup>112</sup>	1185	1240	<b>1360(D)</b> <sup>119</sup>	1400	1440	<b>1550(E)</b> <sup>123</sup>
		lb.	1910	2100	2280	<b>2470(C)</b> <sup>112</sup>	2625	2790	<b>3000(D)</b> <sup>119</sup>	3105	3260	<b>3415(E)</b> <sup>123</sup>
LT225/75R17	DUAL	kg.	665	710	750	<b>850(C)</b> <sup>102</sup>	885	920	<b>1000(D)</b> <sup>108</sup>	1050	1070	<b>1150(E)</b> <sup>113</sup>
		lb.	1425	1565	1695	<b>1875(C)</b> <sup>102</sup>	1950	2075	<b>2205(D)</b> <sup>108</sup>	2310	2430	<b>2535(E)</b> <sup>113</sup>
	SINGLE	kg.	730	780	825	<b>925(C)</b> <sup>105</sup>	970	1010	<b>1090(D)</b> <sup>111</sup>	1155	1180	<b>1250(E)</b> <sup>116</sup>
		lb.	1565	1720	1865	<b>2040(C)</b> <sup>105</sup>	2145	2280	<b>2405(D)</b> <sup>111</sup>	2540	2670	<b>2755(E)</b> <sup>116</sup>
LT245/75R17	DUAL	kg.	750	805	850	<b>925(C)</b> <sup>105</sup>	1005	1040	<b>1150(C)</b> <sup>113</sup>	1190	1220	<b>1320(E)</b> <sup>118</sup>
		lb.	1610	1770	1920	<b>2040(C)</b> <sup>105</sup>	2210	2350	<b>2535(C)</b> <sup>113</sup>	2615	2750	<b>2910(E)</b> <sup>118</sup>
	SINGLE	kg.	825	880	935	<b>1030(C)</b> <sup>109</sup>	1100	1140	<b>1250(D)</b> <sup>116</sup>	1305	1340	<b>1450(E)</b> <sup>121</sup>
		lb.	1770	1945	2110	<b>2270(C)</b> <sup>109</sup>	2430	2580	<b>2755(D)</b> <sup>116</sup>	2875	3020	<b>3195(E)</b> <sup>121</sup>

NOTES: Letters in parentheses ( ) denote Load Range for which boldface loads are MAXIMUM.

International Load Index numbers are shown after the Load Range.

IMPORTANT: ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETERS AND CONTOURS.

# Commercial Light Truck Radials

LIGHT TRUCK METRIC TIRES FOR TRUCKS, BUSES, TRAILERS AND MULTIPURPOSE PASSENGER VEHICLES USED IN NORMAL HIGHWAY SERVICE  
RADIAL PLY TIRES MOUNTED ON 5° DROP CENTER RIMS

TIRE SIZE DESIGNATION	USAGE	Tire Load Limits (lb.) at various Cold Inflation Pressures										
		kPa	250	275	300	350	380	400	450	480	500	550
		psi	35	40	45	50	55	60	65	70	75	80
LT245/70R17	DUAL	kg.	715	765	810	<b>900(C)</b> <sup>104</sup>	955	990	<b>1060(D)</b> <sup>110</sup>	1130	1160	<b>1250(E)</b> <sup>116</sup>
		lb.	1540	1690	1830	<b>1985(C)</b>	2105	2240	<b>2335(D)</b>	2495	2615	<b>2755(E)</b>
	SINGLE	kg.	785		890	<b>1000(C)</b> <sup>108</sup>	1050	1090	<b>1180(D)</b> <sup>114</sup>	1240	1270	<b>1360(E)</b> <sup>119</sup>
		lb.	1690		2010	<b>2205(C)</b>	2315	2460	<b>2600(D)</b>	2740	2875	<b>3000(E)</b>
LT265/70R17	DUAL	kg.	715		810	<b>1030(C)</b> <sup>109</sup>	1070	1110	<b>1060(D)</b> <sup>110</sup>	1240	1260	<b>1320(E)</b> <sup>118</sup>
		lb.	1540		1830	<b>2270(C)</b>	2360	2510	<b>2680(D)</b>	2735	2820	<b>2910(E)</b>
	SINGLE	kg.	785		890	<b>1120(C)</b> <sup>112</sup>	1175	1220	<b>1215(D)</b> <sup>114</sup>	1360	1390	<b>1450(E)</b> <sup>119</sup>
		lb.	1690		2010	<b>2470(C)</b>	2595	2760	<b>2910(D)</b>	3005	3100	<b>3195(E)</b>
LT275/65R18	DUAL	kg.	715		810	<b>1060(C)</b> <sup>110</sup>	1095	1140	1250	1300	1130	<b>1400(E)</b> <sup>120</sup>
		lb.	1540		1830	<b>2335(C)</b>	2420	2570	2755	2865	3010	<b>3085(E)</b>
	SINGLE	kg.	785		890	<b>1150(C)</b> <sup>113</sup>	1205	1250	1360	1425	1450	<b>1550(E)</b> <sup>123</sup>
		lb.	1940	2130	2310	<b>2535(C)</b>	2660	2825	3000	3150	3305	<b>3415(E)</b>
LT275/70R18	DUAL	kg.	875	935	990	1120	1175	1220	1320	1390	1420	<b>1500(E)</b> <sup>132</sup>
		lb.	1885	2065	2250	2470	2585	2750	2910	3060	3210	<b>3305(E)</b>
	SINGLE	kg.	960	1030	1090	1215	1290	1340	1450	1525	1560	<b>1650(E)</b> <sup>125</sup>
		lb.	2070	2270	2470	2680	2840	3020	3195	3360	3530	<b>3640(E)</b>

NOTES: Letters in parentheses ( ) denote Load Range for which boldface loads are MAXIMUM.  
International Load Index numbers are shown after the Load Range.  
IMPORTANT: ALWAYS USE APPROVED TIRE AND RIM COMBINATIONS FOR DIAMETERS AND CONTOURS.

## Medium Truck

## Light Truck

## General Technical

## Load/Inflation

## Technical Bulletins



NOTES

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins

# **BRIDGESTONE Firestone**

## **Technical Bulletins Table of Contents**

<b>Reference Number</b>	<b>Date</b>	<b>Title</b>	<b>Page</b>
TB-2000-01	January 2000	New 11-Digit DOT Number . . . . .	105
T9106TD	April 1996	TBR Sidewall Repair and Identification . . . . .	106
T9502TI	October 1995	Extra-Deep-Tread Tires' Lateral Stiffness Effects . . . . .	107
T9501X	October 1995	Bridgestone Firestone Chassis Dynamometer Test Guides for Truck/Bus Tires. . . . .	108
TB-2008-001	January 2008	Aftermarket Tire Products and Additives in Truck/Bus Tires. . . . .	109
G-008-X	October 1991	Aerosol Tire Sealer/Inflators. . . . .	110
G-004-X	June 1991	Innertube Storage . . . . .	112
T9106PD	August 1991	Mismatching Tire Bead and Rim Diameters. . . . .	113
T9101TD	December 1990	Mounting Tubeless Truck Tires. . . . .	116
T8701GD	October 1987	Steam Cleaning Tires . . . . .	117

# **BRIDGESTONE Firestone**

## **TECHNICAL BULLETIN**

---

*January 2000*

---

---

*Ref. No. TB2000-01*

---

## **New 11 Digit DOT Number**

The National Highway Traffic Safety Administration (NHTSA) has approved a change to the regulation that requires the date of manufacture in the tire identification number to change from 3 digits to 4 digits (2 digits for week + 2 digits for year.)

Bridgestone/ Firestone tire will start to adopt the new regulation for tires produced starting the first DOT week of 2000. Full integration of the 11 digit DOT serial number will be completed during the 2nd quarter of 2000.

Tire dealers will need to list the new 11-digit DOT serial number on Tire Registration Cards and Warranty Claim Forms (both forms have space for 11-digits.)

The new DOT Serial Number format:

<b>4D</b>	<b>HL</b>	<b>ABC</b>	<b>0508</b>
Plant Code	Size Code	Option Code	Date Mfg.

Ex: 5th week of 2008

---

**BRIDGESTONE FIRESTONE NORTH AMERICAN TIRE COMPANY, LLC**  
Bridgestone Technical Hotline 1-800-847-3272

---

# BRIDGESTONE Firestone

## TECHNICAL BULLETIN

April 1996

Ref. No. T9106TD

### TBR Sidewall Repair and Identification

#### Background


Radial truck tires can successfully be repaired in the sidewall area. When damaged body cord is removed and a reinforcing unit is used in the repair process, a radial sidewall bulge may be visible. In 1984, the Rubber Manufacturers Association (RMA) issued a bulletin stating that bulges up to 3/8" in height are permitted when associated with these repairs.

#### Issue

The Commercial Vehicle Safety Alliance (CVSA) is responsible for inspecting commercial vehicles for safety defects and placing vehicles out of service if defects such as tire separations or exposed cord/fabric are found. The inspectors, in the past have had difficulty distinguishing between sidewall bulges due to repairs (allowed) and tire separations.

#### Action

In October 1990, the CVSA agreed to accept the use of a blue triangular identification adjacent to a sidewall repair bulge. A vehicle will not be placed out of service if a tire repair bulge is 3/8" or less in height and is identified with an adjacent blue triangle. The retread and repair industry will be incorporating these identification patches into their sidewall repair procedures.

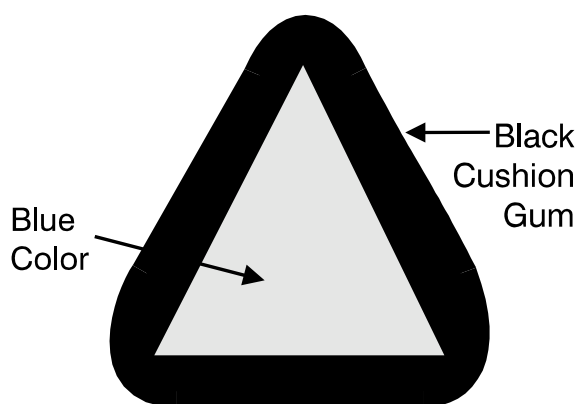

Sample Triangular  
Identification Patch

Note: Actual Size

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins


# BRIDGESTONE Firestone

## TECHNICAL BULLETIN

October 1995

Ref. No. T9502TI

### Extra-Deep-Tread Tires' Lateral Stiffness Effects

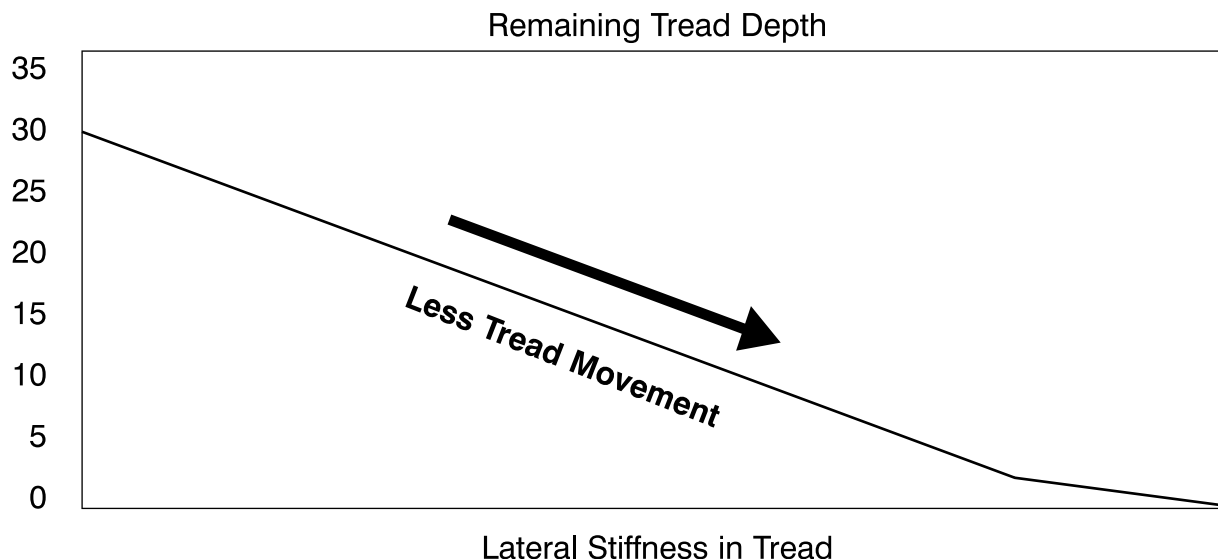

Many drivers are aware of the feel of the trucks used on a daily basis in fleets, and are sometimes sensitive to the ride dynamics of fitment changes of new tire designs on the vehicle.

One of the sensations drivers notice is a side-to-side motion. This motion is the byproduct of what is commonly referred to as lateral stiffness.

The lateral stiffness of a tire is due in large part to inflation pressure, as well as the tire's tread depth. Both of these factors vary over time. Reduced inflation pressure and deeper tread depth results in lower lateral stiffness.

Therefore, some users may comment on experiencing a slight swaying with newly installed extra-deep-tread drive tires, especially under full load or after replacing worn drive tires.

The sensation the driver feels is the lateral stiffness effect of the extra-deep-tread drive tire compared to the worn tire being replaced and does not affect traction or warrant any concerns.

The lateral stiffness improves quickly as the tread wears and a driver will become accustomed to the initial difference in sensation.

BRIDGESTONE FIRESTONE NORTH AMERICAN TIRE COMPANY, LLC  
Bridgestone Technical Hotline 1-800-847-3272

# BRIDGESTONE Firestone

## TECHNICAL BULLETIN

October 1995

Ref. No. T9501X

### Bridgestone Firestone Chassis Dynamometer Test Guidelines for Truck/Bus Tires

#### I. Background

Vehicle manufacturers and many maintenance facilities conduct in-place vehicle testing on twin-roll chassis dynamometers. Testing is usually conducted over a short period of time on empty vehicles. If the following procedure is not adhered to, irreversible damage may occur to the tire.

#### II. Procedure

To prevent excessive head buildup in the center of the tire tread, follow the recommended time period based on roller diameter as listed below:

Maximum Allowable Time by Roller Diameter	
8-5/8" Roller	18" Roller
3.5 minutes	6 minutes

Maximum Allowable Speed is 55 mph.

**Load:** These time restrictions apply regardless of the actual load and are, in fact, more critical when the vehicle is tested without a load.

#### III. Precautions

To avoid the possibility of irreversible tire damage and/or failure during testing, it is important that the following precautions be taken:

- Do not exceed the time and speed restrictions listed in part II.
- Allow at least one hour cool down between tests.
- When it is anticipated that a test will exceed the time/test value established, a worn or "slave" tire should be used in place of the new tire for testing purposes.

Questions regarding test procedures, loads, etc. should be directed to your Regional Field Engineering Office.



Example of Dyno Damage

BRIDGESTONE FIRESTONE NORTH AMERICAN TIRE COMPANY, LLC  
Bridgestone Technical Hotline 1-800-847-3272



# **BRIDGESTONE Firestone**

## **TECHNICAL BULLETIN**

---

---

January 2008TB-2008-001 (Replaces TB-95-002)

---

---

### **Aftermarket Tire Products and Additives in Truck/Bus Tires**

Bridgestone Firestone does not endorse or prohibit the use of aftermarket tire products. The use of internally applied additives for balance, sealing, cooling, or any other alleged tire performance enhancement in Bridgestone or Firestone brand truck/bus tires will not void the Limited Warranty unless an inspection of the tire reveals damage related to the use of the additive.

---

---

**BRIDGESTONE FIRESTONE NORTH AMERICAN TIRE COMPANY, LLC**  
Bridgestone Technical Hotline 1-800-847-3272

# BRIDGESTONE Firestone

## TECHNICAL BULLETIN

October 1991

Ref. No. G-008-X

### Aerosol Tire Sealer/Inflators

Aerosol tire sealer/inflators have been used by large numbers of motorists each year and an undetermined number of tires now on the road, which have been filled with these devices, may have combustible gases in their air chambers.

Please read carefully and make sure all your employees read the attached publications that have been approved and distributed by the Rubber Manufacturers Association and the National Highway Safety Administration.

### TIRE OR RIM REPAIR SAFETY BULLETIN



#### FACTS YOU SHOULD KNOW...

It is difficult to determine whether a tire has been inflated with a flammable aerosol type tire sealer/inflator. Therefore, if your establishment repairs or works on rims or on pressurized, rim-mounted tires, you should handle all of them as if they contain a flammable tire sealer-inflator.



The gases in the sealer/inflator, which can be poisonous, are combustible inside the tire. An explosion can occur if ANY ignition source is present. Even the insertion of a plug into a steel-belted tire could cause an explosion!

Proper safety precautions to avoid ignition of flammable gases **MUST** be followed during the repair or maintenance of **ALL** tires or rims.



Failure to follow these precautions and procedures may result in serious or even fatal injury.



#### PRECAUTIONS YOU SHOULD TAKE...

All tires should be handled as if a flammable tire sealer has been used. Do not rely upon the customer, even if he advises you that one has not been used. Customers may neglect to tell you or even may have forgotten they used a sealer/inflator.



Always make sure that the repair area is well-ventilated so that any gases that are present will not accumulate.



Never weld or use a cutting torch on a wheel or rim without first completely removing the tire from the rim. Otherwise, explosions resulting in possible serious or fatal injury can occur, even in the absence of flammable sealer/inflator.



Do not use a tire rasp, plug or any object which could cause sparks on a tire or rim without first completely removing the tire from the rim. These ignition sources could lead to an explosion.



Do not permit smoking or any flame, spark or other ignition source in the area where tires or rims are being kept.



Never add air to a tire treated with a flammable sealer/inflator without completely removing the flammable gas. Air added to a tire containing flammable gas may make it more explosive.



#### BEFORE BEGINNING REPAIRS OR SERVICE ON ANY RIM OR TIRE, YOU SHOULD ALWAYS FOLLOW THESE SAFETY PROCEDURES:



Remove the valve stem completely to release the tire pressure in a well-ventilated area, away from sparks or other ignition sources.

After the pressure has been released and before making any repairs, remove the tire from the wheel rim.

If you believe a sealer/inflator has been used, wash the inside of the tire with a detergent/water solution and rinse thoroughly. Allow the tire to dry before repairs are made.

# BRIDGESTONE Firestone

## TECHNICAL BULLETIN

October 1991

Ref. No. G-008-X



U.S. Department of  
Transportation

## News:

Office of the Assistant Secretary for Public Affairs  
Washington, D.C. 20590

**FOR IMMEDIATE RELEASE**  
Tuesday, September 24, 1991

**CONSUMER ADVISORY**

NHTSA 49-91  
Contact: Skipp Calvert  
Barry McCahill  
Tel. No.: (202) 366-9550

### NHTSA WARNS ABOUT HAZARDS OF FIXING TIRES FILLED WITH AEROSOL INFLATORS

The National Highway Traffic Safety Administration (NHTSA) today cautioned motorists and urged workers at service stations and auto and tire repair shops to be careful while fixing tires that have been filled with aerosol inflators.

According to NHTSA Administrator Jerry Ralph Curry, many of the aerosol inflators contain a flammable propellant that can cause an explosion under certain circumstances. "People in the tire repair business especially should be aware of the hazard and take precautions to reduce the risk of an explosion," he said.

Aerosol inflators, marketed under various brand names, are widely sold to the public for temporarily fixing tires that have gone flat because of slow leaks and small punctures, Curry said.

He said that despite flammability warnings on the cans and instructions for safe use, many consumers may be unaware of the potential danger. "Aerosol flat tire fixes should be considered as emergency, temporary repairs and used with caution. It is always preferable to have the tire repaired professionally or replaced.

"After filling a tire with an aerosol inflator, don't expose the tire to extreme heat, flames, sparks or other ignition sources. Be careful using metal tools like tire irons, metal reamers and hammers because they could cause sparks while being used to repair a tire," Curry said.

He noted that because aerosol inflators are used so commonly, consumers and service personnel should assume a tire may have been repaired previously with an aerosol product. "Before starting to fix a tire, remove the valve core and completely deflate the tire to eliminate as much of the aerosol propellant as possible. Then, inflate and deflate the tire a few times to completely remove all traces of the potentially explosive propellant. Once this is done, you may repair the tire without risk of explosion," Curry said.

####

**BRIDGESTONE**

# **BRIDGESTONE Firestone**

## **TECHNICAL BULLETIN**

June 1991

Ref. No. G-004-X

### **Innertube Storage**

Innertubes should always be stored in a sealed enclosure. If the seal is damaged or broken, reseal the enclosure or repackage the affected tubes to prevent premature ozone crack damage on tubes. Exposure to weather, open doors, sunlight, electric motors and fans can cause premature aging of the rubber compound, especially when folded. In addition, tubes stored in tires can be similarly affected if unprotected by a flap or rim.

**Tubes with ozone crack damage should be replaced. Do not place these in service.**

BRIDGESTONE FIRESTONE NORTH AMERICAN TIRE COMPANY, LLC  
Bridgestone Technical Hotline 1-800-847-3272

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins

# BRIDGESTONE Firestone

## TECHNICAL BULLETIN

August 1991

Ref. No. T9106PD

# Mismatching Tire Bead and Rim Diameters

**T**here is danger in installing a tire of one rim diameter on a rim of a different rim diameter.

Always replace a tire on a rim with another tire of exactly the same rim diameter designation and suffix letter.

For example a 16" tire goes with a 16" rim. **Never mount a 16" size diameter tire on a 16.5" rim.** While it is possible to pass a 16" diameter tire over the lip or flange of a 16.5" size rim diameter, it cannot be inflated enough to position itself against the rim flange. If an attempt is made to seat the tire bead by inflation, the tire bead will break with explosive force and could cause serious injury or death.

Various materials have been published on the importance of properly matching tire bead and rim diameters prior to attempting to mount the assembly. Listed below is a sampling of that material.

### Bridgestone:

#### 1. Technical Bulletin #T9104TD

##### Sec. V Tire and Rim Matching Importance

Remember the importance of proper matching of tires and rims. In particular, special care must also be used in the mounting of any 16" diameter tire sizes, as well as the 15.5" and 17.5" sizes. The 16" size tire must be mounted only on the approved 16" rims and not the 15.5" or 16.5" rims. In addition, any 15" size

tire must be mounted only on approved 15" rims not on the 15.5" rim and any 17" size tire must be mounted only on approved 17" rims not on the 17.5" rim.

If mounting of a 15" diameter tire is attempted on a 15.5" rim, or a 16" tire is attempted to be mounted on a 16.5" rim, or a 17" tire is attempted to be mounted on 17.5" rim, serious injury or death may result.

#### 2. Tire Label Safety Warning

##### Safety Warning

- Serious injury or death may result from an explosion of tire/rim assembly due to the use of excessive pressure during mounting.
- Never exceed 40 psi (275 kpa) to seat beads. After beads are seated, adjust inflation to pressure recommended by vehicle manufacturer.
- During tire inflation, always have assembly secured, stand clear, and use remote controlled clip on air hose.
- Only specially trained persons should mount tires.
- Mount only on 16 inch\* diameter rims.

\*Warning: Varies by tire size.

BRIDGESTONE FIRESTONE NORTH AMERICAN TIRE COMPANY, LLC  
Bridgestone Technical Hotline 1-800-847-3272

# BRIDGESTONE Firestone

## TECHNICAL BULLETIN

August 1991

Ref. No. T9106PD

### 3. Molded Sidewall Safety Warning

#### Safety Warning: Serious Injury may result from:

- Tire failure due to underinflation/overloading – follow owner's manual or tire placard in vehicle.
- Explosion of tire/rim assembly due to improper mounting – never exceed 40 psi (275 kpa) to seat beads – mount only on 16 inch diameter rims\* – only specially trained persons should mount tires.

\*Warning: Varies by tire size.

#### Rubber Manufacturer Association (RMA):

#### 1. Care and Service of Automobile and Light Truck Tires†

†Copies of the RMA material can be ordered from:

Rubber Manufacturers Association  
1400 K Street N.W.  
Washington, D.C. 20005


#### WARNING

There is danger in installing a tire of one rim diameter on a rim of a different diameter.

Always replace a tire on a rim with another tire of exactly the same rim diameter designation and suffix letters.

For example, a 16" tire goes with a 16" rim. Never mount a 16" size diameter tire on a 16.5" rim. While it is possible to pass a 16" diameter tire over the lip of flange of a 16.5" size diameter rim, it cannot be inflated enough to position itself against the rim flange. If an attempt is made to seat the tire bead by inflating, the tire bead will break with explosive force and could cause serious injury or death.

Rims of different diameters and tapers cannot be interchanged. The following diagram illustrates the difference between rims of two different tapers and diameters:

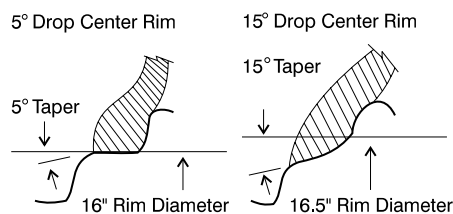

The following diagram shows how the beads of a 16" tire will not seat on a 16.5" rim. The beads cannot be forced out against the rim flanges by using more air pressure, because this will break the beads and the tire will explode.





# BRIDGESTONE Firestone

## TECHNICAL BULLETIN

August 1991

Ref. No. T9106PD

**WARNING**

**Never inflate beyond 40 pounds pressure to seat beads.**

**Never stand, lean or reach over the assembly during inflation.**

Inspect both sides of the tire to be sure that the beads are evenly seated. If tire is mounted on a machine that does not have a positive lock - down devices to hold the wheel, inflation should be done in a safety cage. If both beads are not properly seated when pressure reaches 40 pounds, completely deflated the assembly, reposition the tire and/or tube on the rim, relubricate and reinflate. Inflating beyond 40 pounds air pressure when trying to seat the beads is a DANGEROUS PRACTICE that may break a tire bead (or even the rim) with explosive force, possibly resulting in serious injury or death. After the beads are fully seated, pressure may be increased above 40 psi to operating pressures, not to exceed the maximum labeled on the tire sidewall.

**WARNING**

**Serious Injury May Result From:**

- Tire failure due to underinflation/overloading - follow owner's manual or tire placard in vehicle;
- Explosion of tire/rim assembly due to improper mounting - only specially trained persons should mount tires.

**WARNING**

**Tire changing can be dangerous and should be done by trained personnel using proper tools and procedures. Always read and understand any manufacturer's warning contained in their customer's literature or molded into the tire sidewall.**

Failure to comply with these procedures may result in faulty positioning of the tire and/or rim parts, and cause the assembly to burst with explosive force, sufficient to cause serious physical injury or death. Never mount or use damaged tires or rims.

2. "Demounting and Mounting Procedures for Automobile Tires" (Wallchart)\*

3. "Tire Replacement Guide for Light Trucks" (Wallchart)\*

**Consumer Inquires:**

If questioned by a consumer on this matter, it is recommended that you stress the following areas:

1. Bridgestone tires are designed with adequate strength to withstand mounting and dimounting stresses when correctly matched to rims of the correct diameter.
2. All Bridgestone 16" and 16.5" tires carry a safety warning permanently molded into the tire sidewall which directs trained personnel to mount only on the approved matching rim (example: "Mount only on 16 inch diameter rims.")

\*Warning: Varies by tire size.

BRIDGESTONE FIRESTONE NORTH AMERICAN TIRE COMPANY, LLC  
Bridgestone Technical Hotline 1-800-847-3272

3/3

# BRIDGESTONE Firestone

## TECHNICAL BULLETIN

December 1990

Ref. No. T9101TD

### Mounting Tubeless Truck Tires


Proper mounting practices are mandatory to help ensure uniform tire/wheel assemblies for application to heavy duty trucks which use 22.5 and 24.5 bead diameter tubeless truck tires. Failure to follow the industry recommendations for mounting uniformity may result in improper tire bead/wheel fit and can lead to vehicle vibration and irregular tire wear.

Bridgestone recently conducted a tire mounting study involving tubeless tires of different brands, aspect ratios and bead diameters on new and used steel and aluminum wheels. Bridgestone tires included in this study were R299, R194-LP, R293 and R194 designs.

Results of the evaluation showed that regardless of the item combination checked, uniform assemblies were obtained when the following three practices were performed:

1. Clean the wheel or rim
  2. Lubricate the tire and beads AND WHEEL/RIM BEAD SEAT
  3. Check the assembly for concentricity
1. A used wheel/rim should be cleaned by wire brushing to remove rust, scale and build-up. Painting the cleaned metal with primer or anti-rust paint is recommended.
  2. Before assembling tire **and wheel/rim**, lubricate tire beads and wheel/rim seat with a vegetable oil-based lubricant formulated for tire and wheel/rim use. Do not use petroleum- or solvent-based products, as they cause rubber deterioration.
- Failure to lubricate the wheel/rim as well as the tire can lead to a non-uniform assembly.
- The best initial balance is obtained by matching the tire's light spot (marked by a yellow dot or circle) at the wheel/rim valve.
3. To check the assembly for concentricity of a tire and wheel/rim, measure the distance between the tire-flange interface and the circumferential ring molded into the tire sidewall at four locations (90 degrees apart) around the tire-flange circumference. Distances measured should be within a 2/32" (1.5 mm) range for acceptable uniformity. If the ranges in distance within the same side of the tire are greater than this, break down assembly, re-lubricate and remount the tire.

Following these practices will reduce vehicle vibration and irregular wear occurrences. The first step in investigating these types of complaints should be the measurement of tire and wheel/rim concentricity to determine if non-uniform mounting is present, and the probable cause. If so, break down assembly, re-lubricate tire and wheel and remount tire.

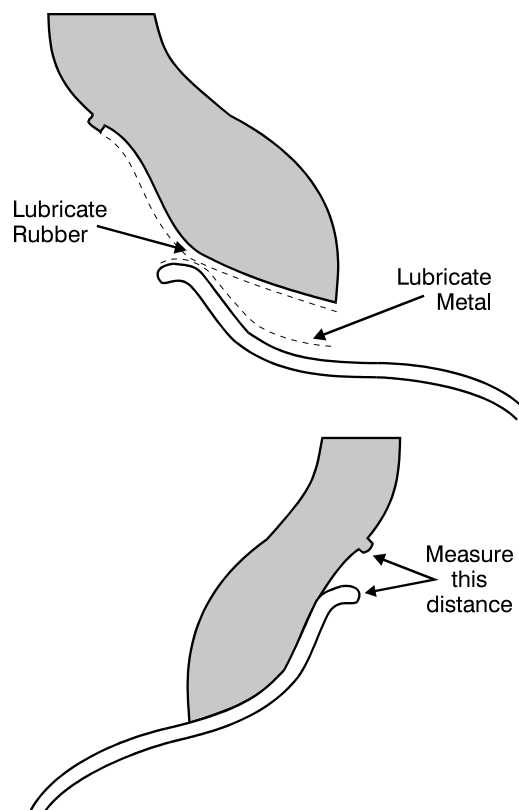

**REMEMBER:  
CLEAN!  
LUBRICATE!  
CHECK!  
AND ALWAYS FOLLOW ALL OSHA,  
RMA, AND MANUFACTURER  
MOUNTING SAFETY  
PRECAUTIONS!**

BRIDGESTONE FIRESTONE NORTH AMERICAN TIRE COMPANY, LLC

Bridgestone Technical Hotline 1-800-847-3272

# **BRIDGESTONE Firestone**

## **TECHNICAL BULLETIN**

---

December 1987

---

Ref. No. T8701GD

---

### **Steam Cleaning Tires**

**CAUTION:** Steam cleaning can damage a tire and render it unserviceable.

At many businesses throughout the United States, it is common practice to use "steam cleaning equipment" to wash trucks and tires.

Nozzle temperature on steam cleaning equipment typically reaches 280°F.

When a steam cleaning nozzle is held too close to the sidewall of a tire for as short a time as 45 seconds, a small spongy blister may appear on the sidewall. When this blister is cut open, one will observe reverted rubber resulting from the excessive localized heat.

Steam cleaning of tires can be harmful to tires when the nozzle is concentrated in one spot for a period of time.

---

**BRIDGESTONE FIRESTONE NORTH AMERICAN TIRE COMPANY, LLC**

**Bridgestone Technical Hotline 1-800-847-3272**

## Medium Truck

## Light Truck

## General Technical

## Load/Inflation

## Technical Bulletins

## Medium Truck



R287A	R227F	R280	R260F	R250F & R250 ED
Innovative tread design and compounding allows shallower tread depth for irregular wear resistance. Features include Side Groove™ and Equalizer Rib™ technologies for higher mileage.	Unidirectional tread pattern and high-performance tread compounds, along with Side Groove™ and Equalizer Rib™ technologies promote improved fuel economy, long mileage, and outstanding wet traction in all line haul applications.	All-position radial designed for regional and long haul service. Features include Equalizer Rib™ and Defense Groove™ features plus stone rejectors.	All-position radial featuring high-scrub compounds, sidewall protectors, Equalizer Rib™ design and stone rejectors.	A five-rib design featuring wide, rounded shoulders, straight grooves and sidewall protector ribs for high-scrub regional service.
Michelin XZA3	Michelin XZA, XZE+	Michelin XZA3, XZA-1+	Michelin XZE2	Michelin XZE2, XZE*, XRV
Goodyear G399, G395	Goodyear None	Goodyear G399, G395	Goodyear G169, G661, G662	Goodyear G169, G149, G661, G662

## Light Truck



M711	M729F	M895	M724F	R197
A deep-tread drive tire offering excellent mileage and traction. Staggered tread blocks distribute forces evenly for resistance to irregular wear.	A drive radial featuring a convex block design to resist irregular wear. Provides excellent long tread life and superior retreadability.	All-position radial with superior handling and reduced noise. Designed for steer and drive positions in metro or urban applications.	An all-position, all-season radial designed for steer and drive positions. Features sidewall protector ribs for resistance to curb damage.	Premium trailer radial with sidewall protectors and advanced irregular-wear fighting features. Superior fuel economy and long life.
Michelin XDE M/S, XDN2, XD4	Michelin XDE2+, XDS2	Michelin XZE, XDS2, XDE2+	Michelin XZE, XDS2, XDE2+	Michelin XT-1, XTA Energy
Goodyear G662, G182, G338, G124	Goodyear G622, G647	Goodyear G662, G647	Goodyear G647, G622, G633	Goodyear G316

## General Technical

## Load/Inflation








M860	M850	M843	M840	M857
Wide tread to enhance handling and deep tread depth for longer mileage. Sidewall protectors resist scrubbing and curbing. Stone rejectors help protect casing from damage.	An aggressive, wide and deep tread on/off-highway design provides excellent traction, long mileage, and long wear. Stone rejectors help protect casing from damage.	Extra-deep rib-lug radial designed for use on all wheel positions in all on/off-highway applications. Resists cuts, tearing, and irregular wear.	An all-position on/off-highway radial. Tread compound features anti-chip and cut capability for use on unimproved roads.	A rib-lug tread design for use on all wheel positions in on/off-highway applications such as dump trucks, logging rigs, and refuse haulers.
Michelin XZUS, XZY3	Michelin XZY3	Michelin XZY3, XZUS	Michelin XZY, XTY2	Michelin None
Goodyear G289, G287	Goodyear G287, G288	Goodyear G287, G288	Goodyear G288	Goodyear G286

## Technical Bulletins



				
M720	M726 EL	M726	Greatec® M825	M725
Low rolling-resistance drive radial promotes fuel efficiency. Solid shoulder ribs and aggressive inner blocks provide long, even wear and high traction.	Up to 32/32" tread depth drive tire with solid shoulders and aggressive inner blocks to provide long, even wear and high traction.	Extra-deep drive tire with solid shoulder ribs delivers long tread life, maximum traction and even wear.	Wide base drive tire replaces 295/75R22.5 dual assemblies. Aggressive tread design for good traction. Long-wearing compounds, and Waved Belt™ technology for enhanced casing stability.	An extra-deep tread drive radial that provides aggressive traction, high scrub-resistance and long mileage. Center groove platforms reject damaging stones and a long-wearing tread compound increases tire life.
Michelin XDA5, XDA3, XDA Energy	Michelin XDN2, XDA5, XDA3	Michelin XD2	Michelin X One XDN2, X One XDA Energy	Michelin XDN2, XDE M/S, XD4
Goodyear G305, G362, G372	Goodyear G372, G362	Goodyear G622, G164	Goodyear None	Goodyear G622, G182, G338

				
R195F	Greatec® R125	R196	R294	R184
A trailer radial with sidewall protector ribs, Equalizer Rib™ and Defense Groove™ features to combat irregular wear. Tread siping provides all-weather traction.	Wide base trailer tire replaces 295/75R22.5 duals. Features Equalizer Rib™ and Defense Groove™ technologies to combat irregular wear and Waved Belt™ technology for enhanced casing durability.	A five-rib radial designed for high-scrub, free-rolling axles such as spread axles and tri-axle trailers.	A five-rib, all-position, tire provides excellent control on wet surfaces.	Five rib pattern designed for low-platform, high-load trailer service. Multiple cross-rib sipes for a firm grip on wet roads. Continuous shoulders fight maneuvering scrub.
Michelin XT-1, XTA Energy	Michelin X One XTA, X One XTE	Michelin XTE	Michelin XZA1, XZA2 Energy	Michelin XTA, XTE2, XTA2 Energy
Goodyear G316	Goodyear None	Goodyear G316, G661	Goodyear G291	Goodyear G114

				
L320	L317	M775	M844F	L315
A deep-tread, high-traction lug design for drive axles in on/off-highway service. Special tread compounds are cut-, chip-, tear- and irregular wear-resistant.	A deep-tread off-highway, high-traction lug design for drive axles. Tread compound is cut- and chip-resistant.	A deep-tread drive axle on/off-highway tire, designed for the special demands of the logging and construction industries.	An on/off-highway wide base tire with a self-cleaning tread pattern designed for use on all wheel positions. Innovative tread compound is cut- and chip-resistant.	Aggressive lug tread designed for axles carrying extra-heavy loads in on/off-highway service. Special tread compound resists cuts, chips, tearing and irregular wear. Wide base design for higher payload and outstanding flotation.
Michelin XDL, XDY3, XDY-2, XDY-EX	Michelin XDL	Michelin XDY-EX, XDY3, XDY-2	Michelin XZY3, XZL, XZUS, XFE	Michelin XZY3, XZL
Goodyear G177, G282	Goodyear G177	Goodyear G177, G282	Goodyear G178, G286, G296	Goodyear G178, G286, G296



NOTES

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins

## Medium Truck

## Light Truck

## General Technical

## Load/Inflation

## Technical Bulletins

NOTES

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins

## Medium Truck

## Light Truck

## General Technical

## Load/Inflation

## Technical Bulletins

NOTES

Medium Truck

Light Truck

General Technical

Load/Inflation

Technical Bulletins

## This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## Technical Bulletins



NOTES

Medium Truck

Light Truck


General Technical

Load/Inflation

Technical Bulletins

# Bridgestone Technical Service

## (800) 847-3272

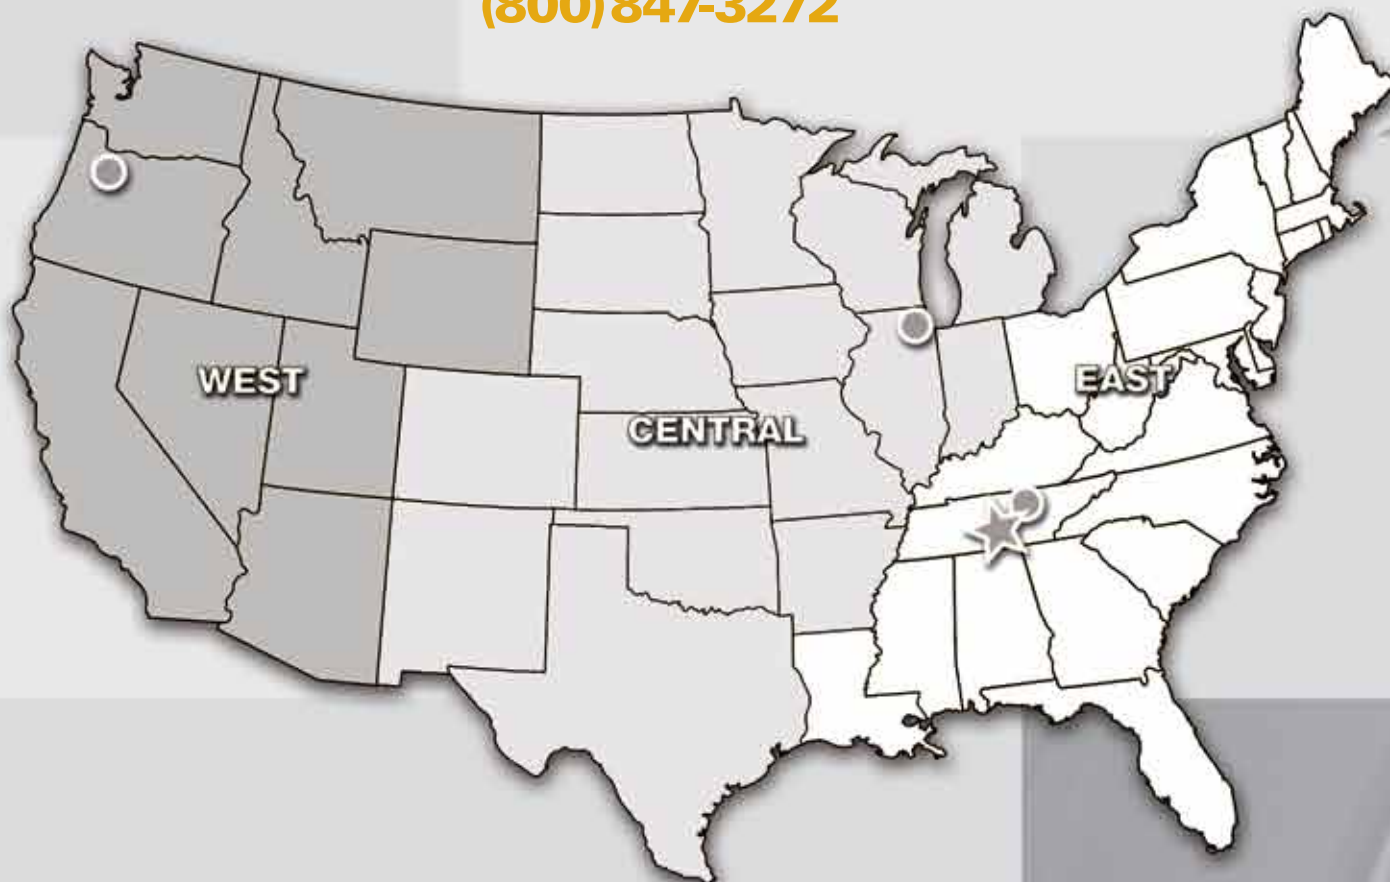**WEST** (503) 491-2580

18555 NE Riverside Pkwy Gresham, OR 97230

**CENTRAL** (630) 972-5000

2100 Internationale Pkwy Woodridge, IL 60517

★ **HOME OFFICE** (615) 937-1000  
535 Marriott Drive Nashville, TN 37214**EAST** (615) 695-5968

201 Bridgestone Pkwy Lebanon, TN 37090

**BRIDGESTONE**  
BridgestoneTrucktires.com

TE06190005 2-2011 (25M)