Zenith ZTE Series

Low-Voltage Automatic and Manual Transfer Switches

Power and Flexibility for Critical Source Switching



Power and flexibility for critical source switching







- Reliability
- Ease of operation
- Troubleshooting & diagnostics
- Flexibility to adapt to site changes
- Scalability to grow with a facility
- Simple & low-cost facility integration

Today's Challenges

Momentary loss of electric power to critical loads can endanger life, cause severe financial losses, or both.

Today's 7x24 service centers, critical healthcare facilities and data centers demand more than just continuity of power. The *quality of power* delivered to the load, the *effectiveness of periodic system testing* and the *ability to diagnose outages and disturbances* in the electrical system are issues that have serious implications for critical facilities.

Poor power quality damages equipment and increases maintenance costs. Inherent power problems stay hidden when testing is ineffective or incomplete. Going beyond source switching and addressing the issues of complete power quality requires a whole new level of ATS capability.

GE: Your Power Quality Partner

Since 1930, GE has designed and manufactured Automatic Transfer Switches (ATS) – products specifically designed to keep critical loads energized and protect personnel, facilities and businesses against losses. The technological advances of the Zenith ZTE firmly establishes GE as not only a worldwide leader in the design and manufacture of ATS, but a trusted Power Quality Partner.

New Technology Solutions

GE's Zenith ZTE Series of transfer switches goes beyond just source switching. Integral metering and communications, high level diagnostics and unsurpassed flexibility make the Zenith ZTE a perfect solution for today's critical source switching.

Global Service Capability

The Zenith ZTE is backed by the global service capabilities and resources of one of the world's largest corporations, capable of providing solutions to all of your power quality needs.

APPLICATIONS

- Healthcare Facilities
- Critical Infrastructure
- 7x24 Call Centers, E-Commerce
- Data Centers

- Telecom Central Offices
- Process Control & Manufacturing
- Distributed Power & Load Management
- Institutional & Transportation Facilities

KEY BENEFITS

• Reliability

Durable solenoid ATS operated mechanisms and robust electronics, tested for severe EMC and environmental conditions

• Third-Party Certifications

UL 1008, IEC 60947-6-1 and CSA 22.2 Certifications, CE Marking, Seismic testing and certification to IBC 2006

• Ease of Operation

Intuitive, color graphical display with built-in Help functions

• Advanced Troubleshooting

High-speed event log and data logging

• Diagnostics

Advanced system troubleshooting and event reporting

Low Cost Installation & Quick Commissioning Duilt in particular for radiused bardwising control

Built-in networking for reduced hardwiring, centrally located customer connections; simple field modification of features without need for factory service

• Flexible & Expandable for Changing Site Needs

Modular, expandable I/O and field-upgradeable features for maximum flexibility

• Power Quality Metering

True PQ metering, including waveform, harmonics and high-speed event capture

• Simple & Low-Cost Facility Integration & Monitoring Built-in networking, customizable User Data Map,

and plug-and-play monitoring using EnerVista
Viewpoint Monitoring™ software

FEATURES

Robust switching mechanisms

- 40-4000A, 2-4 Pole, standard and bypass isolation construction
- Proven solenoid operated mechanism
- GE-engineered and manufactured contacts and arc quenching components
- Standard/open two position transition plus delayed and closed transition
- UL/IEC 3-cycle (unconditional) short circuit withstand & closing ratings

Advanced user interface & controls

- ¼ VGA color display with built-in Help menus
- System status LEDs and menu-driven soft keys
- Dedicated control and navigational pushbuttons
- Front accessible USB programming port
- Password protected control switches

Built-in power quality metering

- 3-phase and neutral (ground) current, including voltage, power, energy, frequency and harmonics (THD)
- 20 Channel Data Logger with sampling rates user-configurable from 1 cycle to 60 minutes

Enhanced connectivity

- Built-in RS-485 serial and 10/100 base-T Ethernet
- Open protocols Modbus RTU and Modbus TCP
- User-configurable data map
- Download of event, waveform and data log to PC
- Customized control logic using FlexLogic™
- Local/remote configuration via EnerVista™ MX350 Setup Software
- PC monitoring and control using EnerVista[™] Viewpoint Monitoring software

Diagnostics & event recording

- Power source anomaly events recorder
- Detailed transfer event reporting
- Local storage of 256 time-stamped events with 1 ms resolution
- User-configurable alarms

Flexible feature assignment

- Field modification of control features
- User-configurable load control contacts
- Reduced commissioning delays from incorrect configurations


Transition Types

Non-Bypass

| Product Specifications Electrical Ratings Design & Construction Features Sequence of Operations Applications | SOURCE 1 SOURCE 2 | SOURCE 1 SOURCE 2 | SOURCE 1 SOURCE 2 | | |
|----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| Transition Type | Standard (Open) Transition | Delayed Transition | Closed Transition | | |
| Electrical Ratings | orania (opon, nansiaon | Delayea Handiden | Giosca il alibidion | | |
| Ampere Ratings | | 40A to 4000A, Continuous Rated | | | |
| Poles | | 2, 3 or 4 Pole Switching | | | |
| Enclosure Types & Compliance | Open, NEMA 1, 3R, 4, 4X (Stainless | Steel), 12, Compliance: UL 508, UL | 50, ANCI C33.76, ICS 6, NEMA 250 | | |
| Load Types | | d standby applications on all load or strough 400 amps. IEC 60947-6-1 U | | | |
| Short Circuit Withstandard | | ization Category 33A Unconditiona | | | |
| Certifications | UL 1008 up to 480VAC, C | SA C22.2 No. 178 up to 600VAC, IEC Test Qualified to IBC-2006 & IEEE 6 | 60947-6-1 up to 415 VAC | | |
| Design & Construction F | | · | | | |
| Code and Standards | NFPA (70,99, 101, 110), | IEEE (466,241,602), NEC (517, 700, 7 | 701, 702), NEMA ICS-10 | | |
| Control System – Type Tests | | JL1053, CSA C22.2.14-05, IEC 60068 isplay, IP20 control), IEC 61000, C3 | | | |
| Construction | Double throw, solenoid operated, Break-before-Make mechanism, inherent mechanical interlock with Center/Off Position | | | | |
| Safety Mechanism | Mechanically interlocked closure of both sc | | Supervisory/Backup Trip circuit to inhibit both source closure to load for > 100 ms | | |
| Transfer Speed | ~30 to 70 ms | ~80 ms + {Customer- programmable time delay setting} | Less than 100 ms parallel | | |
| Main Contacts | Segmented, silv | er tungsten alloy, GE engineered & | manufactured | | |
| Arcing Contacts | Arc quenching grids, enclosed arc ch | nambers, and wide contact air gap for | superior source-to-source isolation | | |
| Sequence of Operations | | | | | |
| Sensing | 3-phase sensir | ng of Source 1 & Source 2 power so | ource supplies | | |
| On Loss of Primary Source | | send start signal to backup genera ised (Genset or backup utility suppl | | | |
| On Return of Primary Source | After programmed time delay, disconnect load from Source 2 and immediately re-connect to Source 1. Remove Generator start signal. | After programmed time delay, disconnect load from Source 2 and move to center/off position. Wait in center off until expiration of time delay period, then re-connect Source 1 to the load. Remove Generator start signal. | After programmed time delay, monitor Source 1 & 2 waveforms. When Source 1 & 2 source voltages match & waveforms are in synchronism connect Source 1 to the load. Immediately disconnect Source 2 from Load (make-before-break), then remove Generator start signal. | | |
| Applications | | | | | |
| Source Types | Generator-to- | -Utility, Generator-to-Generator, Ut | ility-to-Utility | | |
| Typical Applications | Fast, reliable, general source switching | Source Switching above UPS. Switching of motor, transformer and other regenerative loads. | Switching of Critical loads (general or motor)where a non load-break retransfer to the Primary Source is desired. | | |


Bypass/Isolation Switching

Available in Standard, Delayed and Closed Transition Types

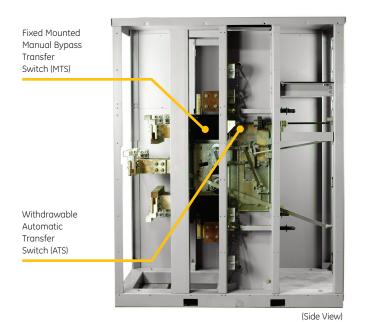

2000A, 277/480V, 3-pole shown (covers removed for clarity)

- Comprises two Transfer Switches bussed in parallel –
 (1) Automatic (ATS) and (1) Manual (MTS)
- ATS can be isolated from main power conductors similar to withdrawable circuit breakers
- (2) redundant paths from each source to load
- ATS and MTS are mechanically and electrically interlocked to prevent accidental closure of both sources
- Bypassing load power from ATS to Bypass MTS allows testing or maintenance
- If power fails while bypassed, genset is auto started to permit fast load transfer using the Bypass MTS

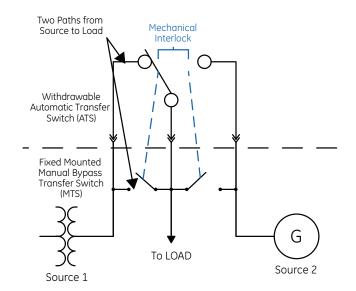

Description and Operation

The bypass section is a Manual (MTS) switch provided with a **quick break/quick make** manual load transfer handle and GE's control/interlock system consisting of both mechanical and electrical interlocks. The bypass MTS is equipped with Source 1 failure sensing and a time delay to start the engine automatically if the Automatic Transfer Switch (ATS) has been removed for service. The ATS and MTS modules are mounted in a compact enclosure and completely interconnected requiring only Source 1 (normal), Source 2 (emergency) and load cable connections. Once installed, no cables need to be removed to isolate the transfer switch module for maintenance or inspection. The ATS module has three positions:

- 1. **Automatic/Connected:** The ATS is carrying the load, and the bypass MTS is in the open position. This is the normal operating position.
- Test: The bypass MTS is closed and feeding the load.
 The ATS has control power and may be operated for test purposes via the test switch. The load is not affected during testing.
- 3. **Isolate:** The ATS is withdrawn from all power sources and ready for maintenance. The load is served by the bypass MTS.

The ATS is installed on a draw-out mechanism, with electrical and mechanical interlocks for secure removal after load bypass. The ATS control/logic panel is mounted on the enclosure door and connected by a wire harness and multi-pin disconnect plugs. The ATS and/or the control panel may be tested, isolated and removed for maintenance without load interruption.


The bypass/isolation MTS module is the same basic design as the ATS module and thus has the same electrical ratings. Manually operated, it features high speed, quick break/quick make contact action. The bypass/isolation MTS has three basic positions:

- 1. **Automatic:** Source 1 (Normal) bypass contacts open, Source 2 (emergency) bypass contacts open.
- 2. **Bypass Normal:** Source 1 (Normal) bypass contacts closed, Source 2 (emergency) bypass contacts open.
- 3. **Bypass Emergency:** Source 1 (Normal) bypass contacts open, Source 2 (emergency) bypass contacts closed.

Robust Switching Mechanisms

Non-Bypass/Isolation Models

800A, 277/480V, 4-pole Closed Transition ATS shown (covers removed for clarity)

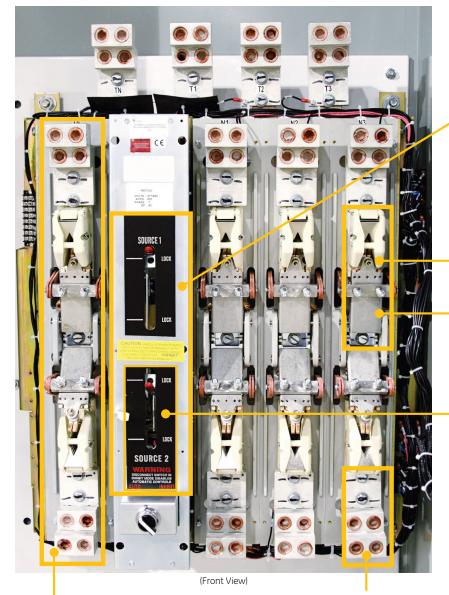

Electrically-operated, mechanically-held, over-center mechanism

- * Operated via momentarily energized solenoid-driven mechanism
- Inherent mechanical interlock design inhibits closure of both sources to the load
- * Fast operation contact transfer speed less than 100 msec

For ease of inspection, main and arching contacts are visible without disassembly

High close-in and withstand capability
* UL/IEC 3-cycle (unconditional) fault ratings


Handles are provided for manual operation during de-energized maintenance

Two-piece contacts, including:

- * Segmented main contacts of silver tungsten alloy composition
- Arc quenching contacts, grids and chamber to protect main contacts from excessive wear during transfers
- * Self-cleaning main contacts

True 4-pole/neutral switching


- * Neutral pole switches on same mechanism as phase poles
- * Neutral main and arching contacts have same rating as phase contacts
- A break-last/make-first neutral pole construction to minimize neutral switching transients and eliminate the possibility of the neutral pole failing to switch along with the phase poles

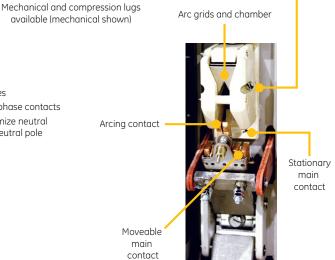


Robust Switching Mechanisms

Bypass/Isolation Models


2000A, 277/480V, 3-pole Delayed Transition shown (covers removed for clarity)

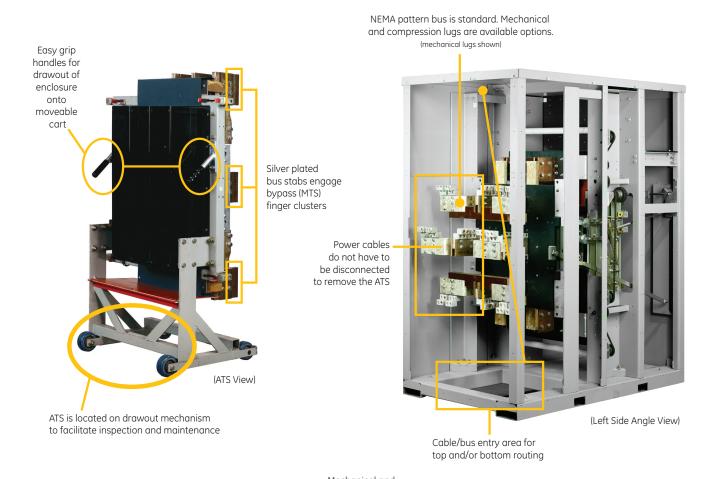


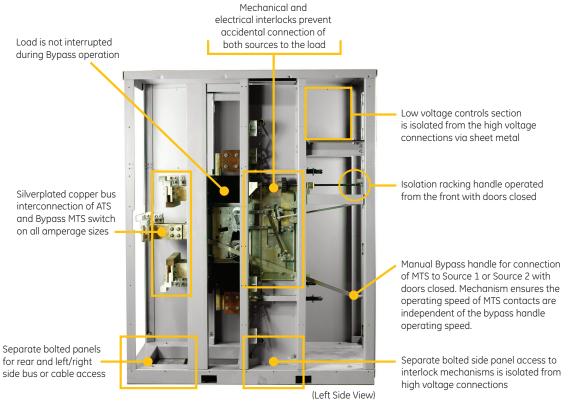

The MX350 Control System on the ZTE

MX350 Graphical Operator Interface

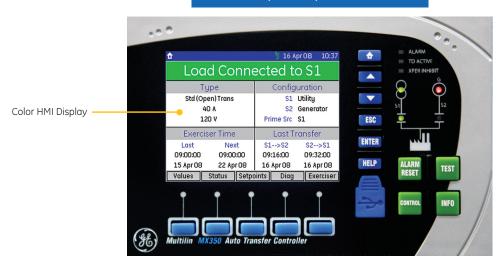

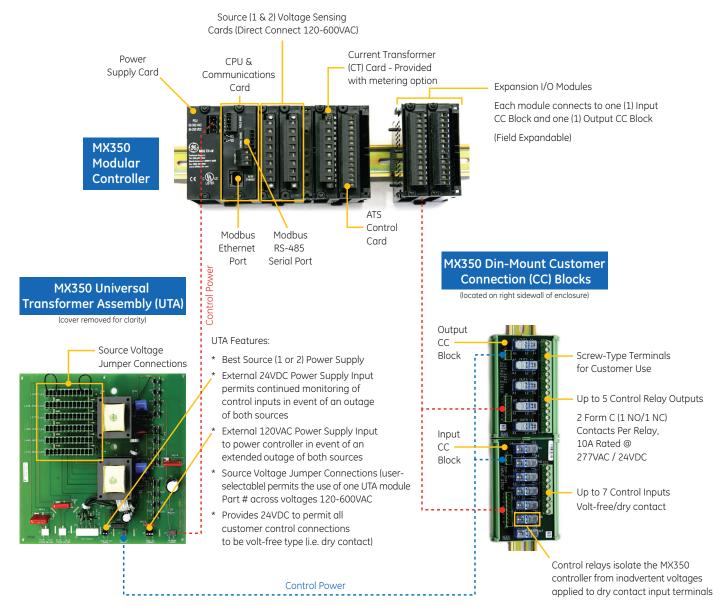

Advanced User Interface & Controls

The ZTE Series MX350 Graphical Operator Interface includes a ¼ VGA, color graphical display. The ZTE is built on the **GE Multilin** time tested, software hardened UR relay and EPM metering platforms, which has thousands of installations in the field.

Easy-to-see status LEDs

- Source Availability (Source 1 Green, Source 2 Red) Indicates source voltage and frequency are acceptable
- Source Connected (Source 1 Green, Source 2 Red)
 Indicates source contacts are closed and load is being fed from the source
- Xfer Inhibit (1 Red) Indicates ATS is being inhibited from automatic transfer to the unconnected source; inhibits may be commanded through external control contacts, AUTO/MANUAL control switch or remote communication
- Alarm (1 Red) Indicates that an alarm condition is active
- TD Active (1 Red) Indicates that the controller is actively timing to initiate an automatic sequence; an example is an active timer for re-transfer to Source 1

USB programming port

- Provides a connection point for the EnerVista™ MX350 Setup software
- Front door-mounting provides capability for closeddoor configuration and programming changes, without risk of contact with live electrical conductors and switching mechanisms inside the ATS

Menu-driven soft keys, dedicated control and navigational keys

- (5) Soft keys below the graphical display change function based on user location in the menu structure
- Dedicated navigational keys for: HOME, SCROLL UP, SCROLL DOWN, ESC (Escape), ENTER, and HELP
- Dedicated control pushbuttons for: ALARM RESET, TEST, CONTROL and INFO
 - ALARM REST Resets all latches alarm conditions
 - TEST Permits selection of Test With Load, Test Without Load or Fast Transfer Test modes of operation
 - CONTROL Brings operator immediately to a Control Menu, where operator-initiated control functions may be activated
 - INFO Brings operator to a report screen that displays comprehensive data on the last outage or test event



Graphical Operator Interface





USB Programming Port (with cover closed)



USB Programming Port (with cover removed)



Menu-driven soft keys



Navigational Keys



Dedicated Control Keys

Diagnostics and Event Recording

The advanced diagnostic features of the ZTE MX350 can significantly reduce the time needed for trouble-shooting source failure and a wide variety of power system anomalies.

Sequence of events recorder

- Local storage of 256 time tagged events with 1 ms resolution
- All MX350 controllers on an Ethernet network may be time-synchronized via Network Time Protocol (NTP) to a master PC to align each controller date time stamping

Data logger

- Configurable 20-channel data logger
- User-adjustable sampling rates from 1 cycle to 60 minutes

Waveform capture/oscillography

 Power source outage and other events can be recorded using 1920 samples/sec. waveform capture

Outage & test event recorder

- Time-sequenced recording of test and utility outage events, including:
 - Sequence of Events Recorder (Time Genset start signal sent, Genset startup time, time transferred to Genset, time utility supply returned or test reset, time re-transferred to utility supply, time start signal removed)
 - Genset loading performance Recorder (max Genset voltage & frequency dip on connection of load)
 - Genset on load performance Recorder (max current, kW, Avg PF, Avg THD%), time utility supply returned or test reset, time re-transferred to utility supply, time start signal removed

Customer-configurable alarms


 Up to 10 digital and 11 analog alarms may be configured via the MX350 front keypad or EnerVista™ MX350 Setup software

FlexLogic[™] Designer


The MX350 controller has an optional control logic engine called FlexLogic™. This provides the user the **ability to create customized protection and control schemes**, thereby minimizing the need for and the associated costs of auxiliary components and wiring. Using FlexLogic™, the ZTE can be configured to specify what actions will be taken based on the status of measured parameters or control inputs.



Event Recorder Screen

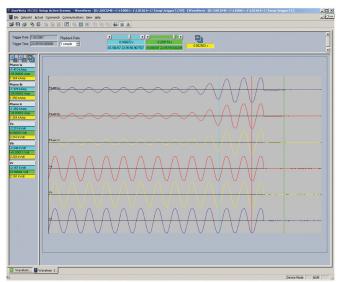

EnerVista™ MX350 Setup Screen showing Voltage and Current Waveform Captures

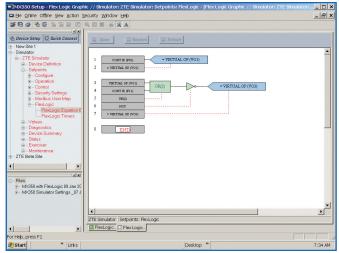

FlexLogic™ Designer Screen

Power Quality Metering

In addition to standard voltage and frequency monitoring of both sources, the ZTE MX350 can be equipped for extended metering of the connected load. The ZTE MX350 provides true RMS metering for current, voltage, real and reactive power, energy use, power factor and frequency. Direct metering of both source voltages make the MX350 metering equivalent to having power quality meters on each source. The advanced metering features of the ZTE MX350 include:

- 3 phase and neutral (ground) current: Ia, Ib, Ic, In plus average current (lavg)
- 3 phase voltage: Va, Vb, Vc, Vab, Vbc, Vca
- Voltage and current unbalance
- Hz, PF, W, Var, VA, Wh, VARh, VAh
- Voltage and Current Harmonics (% THD)
- Phase Rotation Sensing
- Syncroscope (Lead/Lag Display)

Connectivity

Networking

- Built-in, two-wire RS-485 serial and 10/100 base-T Ethernet
- Open protocols Modbus RTU (Serial) and Modbus TCP
- Supports simultaneous communications on both Serial and 10/100 base-T ports
- Easily interfaces with third-party building management systems
- USB programming port accessible with ATS enclosure door closed


Facility Integration


- User-configurable customer data map
- Fast download of event, waveform and data logs
- Advanced system control using GE FlexLogic™
- Auto load shed capability, without need for system master control/PLC

Monitoring

Plug-&-Play, PC-based monitoring is available using GE Multilin's EnerVista™ Viewpoint Monitoring software. Viewpoint Monitoring is a simple-to-use and full-featured monitoring and data recording software package. EnerVista™ Viewpoint Monitoring provides a complete HMI package with the following functionality:

- Plug & Play Device Monitoring
- System Single-Line Monitoring & Control
- Annunciator Alarm Screens with e-mail notifications
- Trending Reports
- Automatic Event and Waveform Retrieval

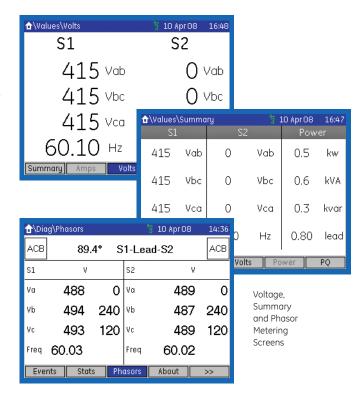

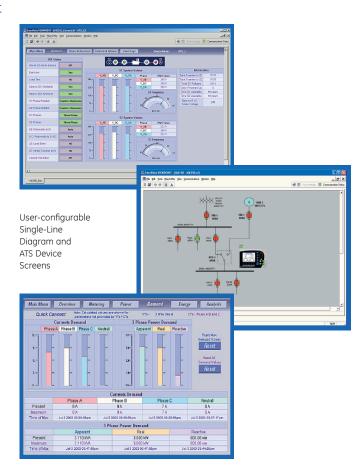




Connectivity Diagram

Motor Load


- Automatic recording of alternate source voltage and frequency dips during motor starting – Helps avoid inadvertent undervoltage trips
- Waveform recording and data logging triggerable on overload/trip or outage events – Permits fast and efficient fault diagnostics
- Up to (6) programmable Load Control relays, each with individual time delay settings – Simple field addition/removal of stages and timer adjustments

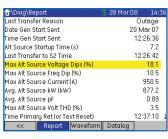

| ↑\Setpnts\Cfq\ATS | ™ 28 Mar 08 14:36 |
|---------------------------|-------------------|
| ATS Name | ATS MCC1 |
| Load Control 1 (LC1) Type | Load Disconnect |
| Load Control 2 (LC2) Type | Load Disconnect |
| Load Control 3 (LC3) Type | Load Disconnect |
| Load Control 4 (LC4) Type | Load Disconnect |
| Load Control 5 (LC5) Type | Load Disconnect |
| Load Control 6 (LC6) Type | Load Disconnect |
| | |
| | |
| | |
| | |
| | |
| ATS CT-VT Inputs | Outputs >> |

Emergency / Life Safety Load

- Critical switch statistics all on one (1) page Quick and efficient interrogation of Standby System performance
- 256 Events stored locally, automatic upload to Master PC for infinite event storage, user selectivity on which events are logged – Log only the information that is useful
- Time synchonization of events from ATS to ATS Permits true diagnostics on a consolidated ATS log built in the Master PC

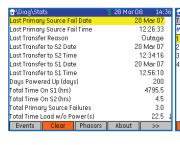

| \Diag\Events | 👸 28 Mar 08 | 14:36 |
|-------------------------------|-----------------|-------|
| ital Number of Events Since L | ast Clear 4 | |
| Date/Time | Cause | |
| 20 Mar/12:26:33:620 | S1 Undervoltage | |
| 20 Mar/12:26:33:620 | S1 Failure | |
| 20 Mar/12:26:35:620 | Engine Start | |
| 20 Mar/12:26:42:817 | S2 Connected | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| Clear Stats Phaso | rs About : | >> |
| | | |


Server or UPS Load


- Full Power Quality Metering Mins, Max, Unbalances, Volts and Current THD%, PF, etc. – Know exactly what is going on with the loads at all times
- Custom Alarm Capability Alert maintenace staff to any/all power anomolies before problems occur
- Per source, and per Phase Harmonic monitoring Perfect for systems with mixed single phase and three phase UPS/Server loads






Load Types

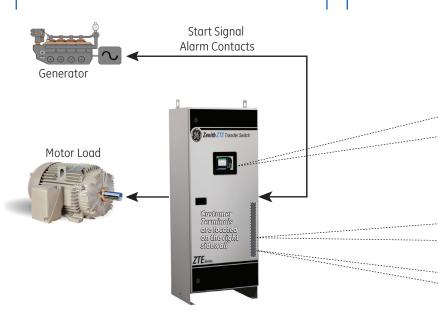

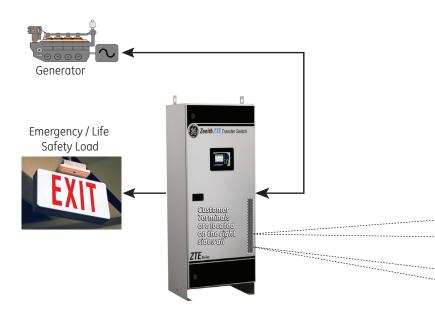

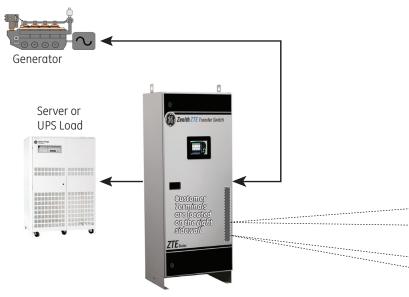

Network Solutions

Laptop

Serial RS-485

EnerVista™ Setup

USB Connection

Software Solutions

Modbus Master

Building or Paralleling Switchgear PLC






EnerVista™ MX350 Setup Software



EnerVista™ MX350 Setup Software Screen (Free Software)

- Communicate with multiple ZTE switches at same time
- Access to all switch adjustments and settings in an easy-to-use, PC-based format configure devices online or offline
- Upload/Save/Download settings from local or remote location
- Real time data logging
- View waveform data stored in ZTE


EnerVista™ Viewpoint Monitoring

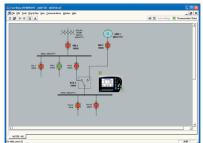

EnerVista™ Viewpoint Monitoring Single-Line Diagram Screen


- Pre-configured screens for instand monitoring
- Create custom singleline diagrams in minutes
- Effortless data archiving
- View waveforms recorded in the ZTE
- Automatic uploads of waveform capture files with added diagnostic capabilities
- Customizable Alarm notification – automatic e-mail notification for user-configured events

EnerVista™ Viewpoint Engineer

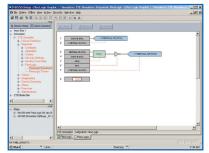

EnerVista™ Viewpoint Engineer Screen

- Design control logic in an intuitive, easy-to-use IEC 1131 graphical editor
- Design logic with dragand-drop ease using a library of inputs, outputs, logic gates, symbols and configuration tools
- Real time monitoring and feedback of logic and program status monitoring - Perfect for systems with mixed single phase and three phase UPS/Server loads
- Design "PLC like" logic for ATS and load controls with FlexLogic™

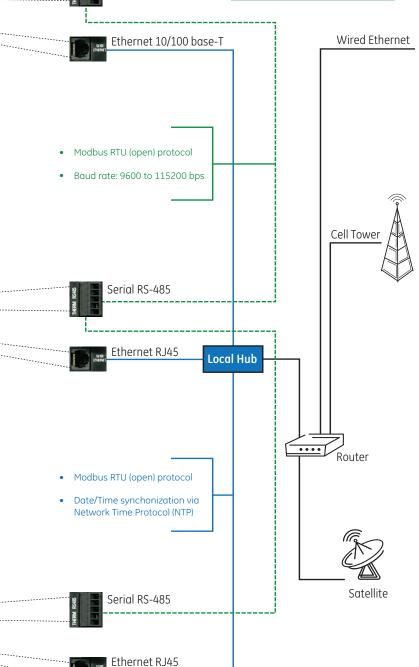



Flexible (Re-Configurable) Feature Assignment


Prior to ZTE, control features necessary to meet project requirements had to be selected at time of order. Features such as elevator pre-signals, auxiliary contacts and external transfer inhibit signals required factory wiring and configuration. If transfer switches were ordered incorrectly, or site conditions changed, a visit by a factory certified technician was traditionally required to reconfigure the ATS control logic.

The ZTE transfer switch provides complete flexibility to add, delete or modify switch features in the field, without the cost and time associated with an on-site personnel field service visit.

The ZTE switches are configured similar to a programmable logic controller (PLC), with a preset quantity of inputs and outputs (I/O). Option packages "A" through "D" provide increasing amounts of customer programmable I/O. The I/O provided on the ZTE is user-assignable to any of a large list of available control features. These features can be specified at the time of order, or a standard configuration of the I/O can be ordered and user re-assigned on site once requirements are known.

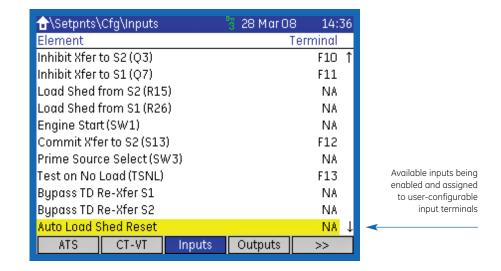

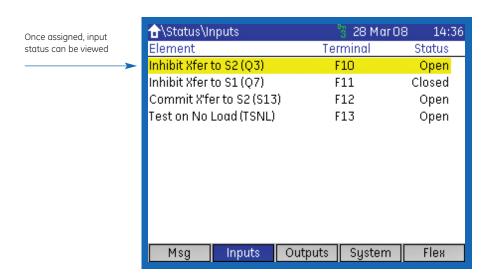

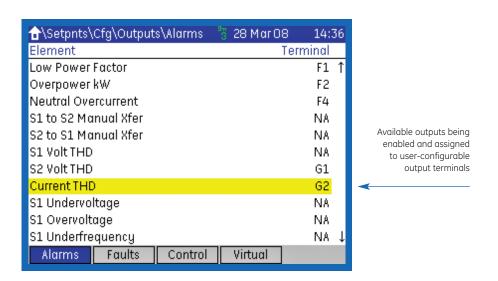


The flexible feature assignment capability of the ZTE greatly **reduces the risk of commissioning delays** due to incorrect switch configuration, and it makes the task of specifying ATS easy, as there is no longer a need to match features to project-specific requirements.


Examples of user-assignable inputs include:

Inhibit transfers, load sheds, control switch activation via remote dry contacts, time delay bypass commands, etc.

Examples of user-assignable outputs include:

Switch position contacts, source availability status, load shed and load control commands, elevator pre-signals, user-configurable alarms, etc.

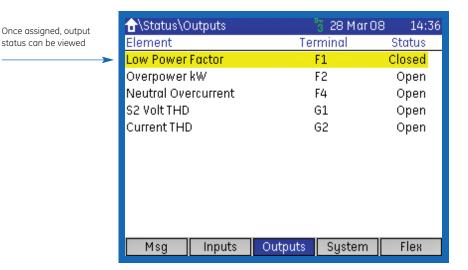

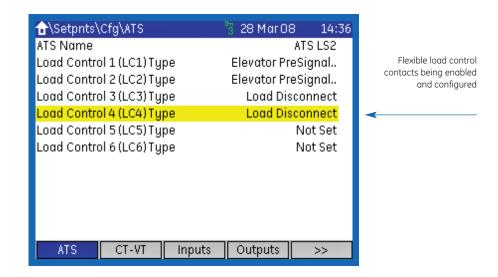


Customer-Configurable Alarms

Up to 11 analog alarms and 10 digital alarms are customer-configurable.

Alarms may be assigned to available configurable outputs, viewed locally, or monitored via Serial or Ethernet communications.

Customer can assign a unique name to each alarm.

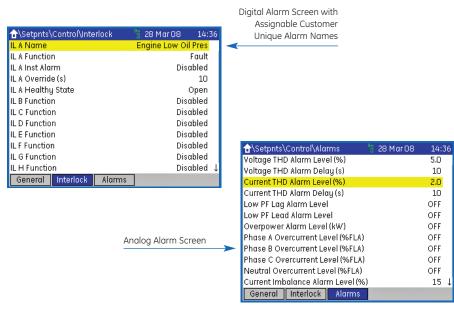

ZTE Series Option Package Descriptions

| Option Package | Features | Application | | | |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|--|--|--|
| "A" | Full function ATS control with full sensing and control capabilities Expanded diagnostics, high-speed 256-event capture, 365-day exerciser, EnerVista™ launchpad USB interface for calibration upload/download (local or remote) (4) programmable inputs and (4) outputs assignable to additional ATS features Full complement of programmable ATS control switches (AUTO/MAN, Preferred Source Select, Commit/No Commit Xfer, Transition Mode Select for Closed Transition models) | Standard Mission- Critical Switching Standard Density I/O | | | |
| "B" | Includes Option Package "A" Features, plus (10) customer programmable digital and (11) analog alarms (10) channel data logger, customer configurable sample period 1 cycle to 60 minutes Waveform capture, (10) channels, up to 64 cycles per channel 32 samples/cycle Auto load shed with voltage, frequency and kW triggers | Custom Alarm Capability High-Speed Diagnostics Standard Density I/O | | | |
| "C" | Includes Option Package "B" Features, plus • (4) additional inputs and outputs (total 8 in, 8 out) | Custom Alarms & Diagnostics Medium Density I/O | | | |
| "D" | Includes Option Package "C" Features, plus • (4) additional input and outputs (total 12 in, 12 out) • FlexLogic™ for user-customized control logic | | | | |
| "M" | Non-automatic switching Standard Density I/O | | | | |

Application Notes:

Metering and communications are available options on all configurations (see model number descriptions, page 20-21)

Option Package User-Configurable Inputs and Outputs

| Source S | | | See | Туре | Option | Factory Default I/O Configuration | | | | |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|----------------------------------------------------------------------------|-----|----------|----------------|-----------------------------------|---|---|--------|-----|
| Source Source Sist Foliure Output A1 | Feature | Description | | | | | | | | |
| Status Source 2 S23 Failure Connected to S1 2 Output A2E | | Carrage 1 (C1) Failure | | | A 1 | | | | | |
| Switch Connected to \$1 | | | | | | | | | | |
| Switch Position Connected to S2 Comput A3 A | Status | | | | | | | | | |
| Position Connected to Center (Delay type only) Dutput A34N R R R R R R R R R | | | | <u> </u> | | | | | | |
| Syposs MTS connected to \$1 for \$2 Output | | | | | | | | | | |
| Sylitch Syli | Position | | | <u> </u> | | | | | | |
| Engine Start Signal Active | | | | | · | | | | | |
| Auto Transfer Occurred 51-52 for S2-51 | | | | | | | | | | |
| Manual Transfer to \$2 Iffrom \$1] Occurred | | 3 | | | | | | | | |
| Switch Status & Transfer Inhibits 2 to S1 for S1 to S21 On Output MTS1S2 N/A N/A N/A Out 4 Output S128 Transfer Inhibits 2 to S1 for S1 to S21 On Output Transfer Inhibits 2 to S1 for S1 to S21 On Output ALM * * Out 7 Out 7 * N/A Foil to Transfer to S1 Alarm Output FTS1 * * * Out 7 Out 7 * * Output Foil to Transfer to S2 Alarm Output FTS2 Out 3 | | | | | | | | | | |
| Transfer Inhibit S2 to S1 (or S1 to S2) On | | | | | | | | | | |
| Diagnostics Common Alarm (any alarm active) Output ALM * * Out7 Out7 * No | | | | | | | | | | |
| Fail to Transfer to \$1 Alarm | | | | | | | | | | |
| Foil to Transfer to \$2 Alarm | Diagnostics | • | | | | | | | | |
| ATS Not in Auto Mode | | | | | | | | | | |
| Transfer to \$2 Alarm | | | | | | | | | | |
| Remote Engine Start | | | 5 | | | | | | | |
| No Load Test 1 Input TSNL | | | | ' | | | | | | |
| Remote Control Relay on Transfer to S1 | | | | | | | | | | |
| Remote Control Relay Remote Control Remot | | | 1 | _ | | | | | | |
| Inhibit Transfer to S1 | | | | | | | | | | |
| Remote Control Inhibit Transfer to S2 | | | | - | | | | | | |
| AUTO/MAN Re-transfer S2 to S1 | | | | | | | | | | |
| Initiate Manual Re-transfer to S1 | | | | - | | | | | | |
| AUTO/MAN Transfer \$1 to 2 & 2 to 1 | Control | | | | | | | | | |
| Initiate Manual Transfer to S2 | | | | - | | | | | | |
| Prime Source Select Switch | | | | | | | | | | |
| Commit/No Commit to Transfer to S2 | | | | <u> </u> | | | | | | |
| Load Control Relay #1 6 Output LCE1, LCL1 Out 4 Out 4 Out 4 Nut 4 | | | | | | | | | | |
| Load Control Relay #1 | | | | | | * | * | | * | |
| Load Control Relay #3 thru #6 6 Output LCE3-6, LCL3-6 * * * * * * * * * * * * * * * * * * | | | | | | | | | | |
| Auto Load Shed Active Auto Load Shed Reset 3 Input LS1R N/A * * In 9 N/A | | , | | Output | | | | | | |
| Auto Load Shed Reset 3 Input LS1R N/A * * In 9 N/A N | Relays | , | 6 | Output | | | | * | * | |
| Auto Load Shed kW Pickup On/Off | A | | | Output | | | | | Out 10 | |
| Auto Load Shed kW Pickup On/Off | | | 3 | | LS1R | | | | | |
| Auto Load Shed Enable/Disable | | Auto Load Shed kW Pickup On/Off | | Input | | N/A | * | * | In 10 | N/A |
| S1 (or S2) Overvoltage | | Auto Load Shed Enable/Disable | | Input | ALS1 | N/A | * | * | In 11 | |
| User-Configurable Analog Alarms S1 (or S2) Underfrequency Low PF S1 (or S2) High Volts THD% Current High THD% kW Overload Overcurrent (Phase A, B, C, or N) S1 (or S2) Voltage Imbalance Current Unbalance User-Configurable Digital Inputs (up to qty 10) for User-Configurable S1 (or S2) Underfrequency Output UFS1, UFS2 N/A * * N/A * | |) | | | | | | | | |
| User-Configurable Analog Alarms S1 (or S2) Overfrequency Low PF S1 (or S2) High Volts THD% Current High THD% N/A N/A Overcurrent (Phase A, B, C, or N) S1 (or S2) Voltage Imbalance Current Unbalance User-Configurable S1 (or S2) Overfrequency Output Curph Output CTA N/A N/A N/A N/A CAPA/B/C,NOCA N/A N/A N/A N/A N/A N/A N/A N | | | | | | | | | | |
| User-Configurable Analog Alarms Low PF S1 (or S2) High Volts THD% Current High THD% S0 Output CTA S1 (or S2) Voltage Imbalance Current Unbalance Current Unbalance Current Unbalance Configurable Low PF S1 (or S2) High Volts THD% Output VTHDS1, VTHDS2 N/A Current N/A Current N/A CTA N/A CTA N/A CAPA/B/C,NOCA N/A * * N/A * N/A CURRENT CONIGURABLE Digital Inputs (up to qty 10) for User-Configurable LOKWA N/A CURRENT COLLA N/A * * N/A N/A * N/A CCDI-x N/A * N/A * N/A N/A * N/A N/A | | | | Output | | | | | | |
| Configurable Analog Alarms Alarms S1 (or S2) High Volts THD% Output VTHDS1, VTHDS2 N/A * * * N/A Current High THD% Output LOKWA N/A * * * N/A kW Overload Output LOKWA N/A * * N/A Overcurrent (Phase A, B, C, or N) Output CCAPA/B/C,NOCA N/A * * N/A S1 (or S2) Voltage Imbalance Output VIAS1, VIAS2 N/A * * N/A Current Unbalance Output CIA N/A * * N/A User-Configurable Digital Inputs (up to qty 10) for User-Configurable Alarms & Flexlogic™ 4 Input CCDI-x N/A * * * N/A | | , | | Output | OFS1/2 | | * | * | * | |
| Analog Alarms Current High THD% Current (Phase A, B, C, or N) S1 (or S2) Voltage Imbalance Current Unbalance Current Unbalance Digital Inputs (up to qty 10) for User-Configurable Alarms & Flexlogic™ Output VIAS1, VIAS2 N/A * * * N/A * N/A * N/A * N/A * N/A * N/A | | | | | | | | | | |
| Alarms Current High THD% kW Overload Overcurrent (Phase A, B, C, or N) S1 (or S2) Voltage Imbalance Current Unbalance Output O | | | | Output | VTHDS1, VTHDS2 | | | | | |
| kW Overload Overcurrent (Phase A, B, C, or N) Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A Overcurrent (Phase A, B, C, or N) Output OCAPA/B/C,NOCA N/A * * * N/A OVERCURRENT N/A Overcurrent Unbalance Output OCAPA/B/C,NOCA N/A * * * N/A OVERCURRENT N/A OVERCURRENT OUTPUT OCAPA/B/C,NOCA N/A * * * N/A OVERCURRENT OUTPUT O | | 9 | | | | | | | | |
| S1 (or S2) Voltage Imbalance Current Unbalance Output VIAS1, VIAS2 N/A * * N/A Output VIAS1, VIAS2 N/A * N/A * N/A User-Configurable VIAS1, VIAS2 N/A * * N/A * * N/A * N/A Input CCDI-x N/A * * N/A | | | | | | | | | | |
| Current Unbalance Output CIA N/A * N/A User- Configurable Digital Inputs (up to qty 10) for User-Configurable Alarms & Flexlogic™ 4 Input CCDI-x N/A * * N/A | | | | | | | | | | |
| User-Configurable Digital Inputs (up to qty 10) for User-Configurable Alarms & Flexlogic™ 4 Input CCDI-x N/A * * * | | S1 (or S2) Voltage Imbalance | | Output | VIAS1, VIAS2 | N/A | * | * | * | |
| Configurable User-Configurable Alarms & Flexlogic™ 4 Input CCDI-X IN/A | | Current Unbalance | | Output | CIA | N/A | * | * | * | N/A |
| | | Digital Inputs (up to qty 10) for User-Configurable Alarms & Flexlogic™ | 4 | Input | CCDI-x | N/A | * | * | * | N/A |
| | | Digital Alarms (up to qty 10) | | Output | CCAD-x | N/A | * | * | * | N/A |

GENERAL NOTE: All of the above status and alarm items above can be monitored via serial or ethenet network (see networking options on page 21)

NOTE 1: Test with Load (Q2) is provided as a standard (pre-configured) feature on all ZTE switches

NOTE 2: (2) Form C contacts are provided as standard on all ZTE switches. These features may be used when additional contacts are required.

NOTE 3: Auto Load Shed features may also be controlled via the front display, without need for remote control inputs.

NOTE 4: For each of the (10) alarms, user-programmable alarm text, time delay, and normal state (open/close) adjustments are field programmable.

NOTE 5: Activates when ATS is either in MANUAL mode, or an active transfer inhibit signal is being received.

NOTE 6: Each load control relay is programmable as either elevator pre-signal type or load disconnect type.

^{* -} Indicates feature may be customer-enabled in the field by de-selecting the factory-default parameter and re-assigning the input to the desired feature

Application Guide

HEALTHCARE / HOSPITAL

Application Profile

- 1. Typically 1 or 2 utility supplies, diesel genset(s) backup
- 2. Multiple load classifications in the same facility: Life Safety, Essential, Non-Essential
- 3. Always open 24/7, 365-day operation
- 4. Strict regulatory requirements for testing, operation and maintenance

Application Challenges

- 1. Keeping Life Safety loads less than the capacity of one (1) Genset (per NFPA regulations)
- 2. Quick notification of any failures to connect loads to the backup supply during power disturbances
- Efficient collection and reporting of data to satisfy regulatory agencies (e.g. JCAHO)
- Assuring that the ATS has the correct interface signals for motors, elevator pre-signals, etc.
 The ability to modify the ATS to accommodate facility changes and upgrades.

ZTE Solutions

- Automatic generation of the Test and Outage Report, giving the maximum Genset %V and %Hz dips on connection of Priority 1 loads (Life Safety)
- 2. Automatic e-mails to PDAs, mobile phone and web e-mail account from EnerVista™ immediately on connection of any/all loads to the Genset supply
- 3. 256 Events, 1 ms accuracy Sequence of Events Recorder with full Genset loading characteristic (max kW, max amps, pf, etc.) for direct data collection for reports such as JCAHO
- 4. All I/O is field re-configurable. Load signaling (motor, elevator) and building interface signals (inhibit transfers, test signals, etc.) can all be added, deleted or changed in minutes.
- Option packages "B", "C" and "D" typically used based on facility size



DATA CENTER / TELECOMMUNICATIONS / IT

Application Profile

- 1. Typically multiple utility feeds with 80-100% Genset backup
- 2. High percentage (%) electronic loads (Servers, UPS, Ethernet Switches, etc.)
- 3. High power system uptime/ reliability needs (99.999999))

Application Challenges

- 1. Identifying system faults or anomolies during testing vs. during outages
- Preventing a device (cable, circuit breaker, switchboards, transformer) from overloading when servers are added or moved
- 3. Ability to monitor, diagnose and re-configure remote equipment (e.g. cell towers) from central location

ZTE Solutions

- Time-synchronized Sequence of Events recorders, 32 samples/sec waveform capture, 1 ms-resolution datalogging and full Power Quality metering provides precise information on system performance during
- 2. Built-in Power Quality Metering, including harmonic %THD, with user-configurable overcurrent and overpower alarms
- 3. Full remote access to timers, setpoints and calibrations using built-in TCP/IP Ethernet communications and free EnerVista™ MX350 Setup software. The device settings can be saved in a central location for quick addition of devices from a remote location.
- 4. Option packages "A", "B", "C" and "D" typically used based on facility size



Application Guide

MFG / PROCESS CONTROL / PETRO CHEMICAL

Application Profile

- 1. Single or multiple utility feeds, often limited Genset capacity
- 2. High variety load types (motor, arc welding, HVAC, process sensors, etc.)
- 3. Interruption-sensitive operations (batch processing, plastics/molds, high-speed part inspection, etc.)

Application Challenges

- 1. Real-time values with frequent addition/removal of loads (e.g. process lines added, removed, relocated)
- 2. Prevent overloading of limited genset supply capacity
- 3. Efficient, affordable integration of critical equipment into the Facility Management system
- 4. Complex load adding/shedding sequences due to large content motor loads and often limited Genset supply

ZTE Solutions

- 1. Easy install/de-install of devices on serial or ethernet network, with all necessary communication parameters accessible via front panel display
- 2. Auto-upload and synchronization of ATS device data logs along with loading info (dips, maximums, pf, etc.) to central EnerVista™ PC station gives precise Genset loading and performance after each test or outage event
- Utilize open/non-proprietary (Modbus) protocols, setup simultaneous serial and ethernet connectivity, user-configurable digital and analog alarms points (ATS or non-ATS/system related) and user-configurable data maps for fast, flexible and low-cost building network interface
- Fully user-configurable Auto Load Shed capability, plus addition of advanced load and system control logic using Flexlogic™ Designer
- 5. Option packages "A", "B" and "C" typically used based on facility size



WASTE TO ENERGY / WASTE WATER TREATMENT

Application Profile


- High capacity utility feed(s), typically with partial Genset backup
- High percentage (%) motor loads with varying starting types (across line, VFD, soft start, etc.) high content automation
- Community critical 7x24 operation for health and safety

Application Challenges

- 1. Loads trip and poor power quality due to voltage dips
- 2. Keeping equipment on-line and reporting status during outage events
- 3. Making required operations intuitive and status monitoring easy to understand

ZTE Solutions

- Genset loading info (% dips) on each test event using Test and Outage Report, setup 10-channel waveform captures to trigger on starting of larger motors for precise analysis of system performance under large inrush conditions
- 2. Utilize standard auxiliary power supply inputs on controller to keep CPU, communications and I/O all energized even during temporary outage of both sources of power to the ATS
- 3. Embedded help messages, high visibility status LEDs, dedicated control pushbuttons, easy navigation menu system, high-resolution color graphical display, banner display showing exact state of ATS at all times (ex: "Timing to connect to Source 2", "Waiting for Source 2 available", etc.)
- 4. Option packages "B", "C" and "D" typically used based on facility size

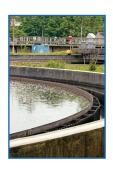

ZTE Configuration

Option Package Features

| Feature | Description | See Note | Code | Op [*] | tion | | | e "M" |
|-----------------------|------------------------------------------------------------------------------------------------|---------------------------------------------|---------------------------------------|-----------------|----------|----------|----------|----------|
| | ATS Source 1 and Source 2 Position Contacts, SPDT, Qty 2 ea | # | 2-A3, 2-A4 | ✓ | ✓ | ✓ | ✓ | √ |
| Contacts | Bypass MTS Source 1 & Source 2 Position Contacts, SPDT, Qty 1 ea | 1 | · · · · · · · · · · · · · · · · · · · | √ | √ | √ | √ | √ |
| | Remote Load Test Signal, Dry Contact Input | | | ✓ | √ | √ | √ | √ |
| | Engine start contact, SPDT | | E | √ | √ | √ | √ | √ |
| | Source 1 to 2 In Phase Monitor (w/enable-disable) | 2 | R50 | ✓ | √ | √ | √ | √ |
| Composition | Synchroscope (Gen Fast/Slow vs. Utility Source) | 3 | SYNC | √ | √ | √ | ✓ | ✓ |
| Generator | Programmable Gen Exerciser, Gen-Util Applications, 365 Day (user-selectable with/without load) | 4 | EX-1 | ✓ | ✓ | ✓ | ✓ | |
| | Automatic Load Shed, w/adj. Freq, Voltage & kW | 5 | LS 1 | | √ | ✓ | ✓ | |
| | Color Graphical Display, with USB Caibration Port & Embedded Help | | OIP, USB, HELP | ✓ | √ | √ | √ | √ |
| | Status LED's for: Source 1 & 2 Connected, Source 1 & 2 Available | produce 2 Position Contacts, SPDT, Qty 2 ea | ✓ | ✓ | ✓ | ✓ | ✓ | |
| | Status LCD Indication of ATS in Center-off position | 6 | LN/P | ✓ | √ | √ | ✓ | √ |
| | Event log, last 256 events | | EL/P | ✓ | √ | ✓ | ✓ | ✓ |
| Indication/ Status | Customer Configurable Alarms, 10 Status-Digital & 10 Threshold-Analog | | CCA-A, CCA-D | | √ | √ | √ | |
| Status | Detailed Outage and Test Reports | | INFO | ✓ | √ | ✓ | ✓ | ✓ |
| | Event Waveform Capture | | WC-1 | | √ | √ | √ | |
| | Data Logger | | DL 1 | | ✓ | ✓ | ✓ | |
| | FlexLogic™ | | FLEX | | | | ✓ | |
| | Calibration upload/download via Enervista™ MX350 Setup | | CAL 1 | ✓ | ✓ | ✓ | ✓ | ✓ |
| | Diagnostics Reports | | DIAG 1, 2, 3 | ✓ | √ | √ | ✓ | ✓ |
| Sensing & | Over/under Freq Source 1 & 2 | | J2E/J2N | ✓ | ✓ | ✓ | ✓ | ✓ |
| Calibration | Over/under Voltage Source 1 & 2 | | R1, R1-3, R7, R8, R17, R2E | ✓ | ✓ | ✓ | ✓ | ✓ |
| | Phase Rotation Sensing | | R16 | ✓ | ✓ | ✓ | ✓ | ✓ |
| | Voltage Imbalance Sensing | | VI | ✓ | √ | √ | ✓ | √ |
| | Neutral-Source 1 or Neutral-Source 2 Transfer | 6 | DT/DW | ✓ | ✓ | ✓ | ✓ | ✓ |
| | Engine Start Timer, adj up to 10 sec | 11 | P1 | ✓ | ✓ | ✓ | ✓ | ✓ |
| Time Delays | Source 2 - Source 1 Retransfer | | Т | ✓ | ✓ | ✓ | ✓ | |
| Time Delays | Emergency Source Failure Override Time Delay | | ESO | ✓ | ✓ | ✓ | ✓ | |
| | Engine Stop/Cool Down | | U | ✓ | ✓ | ✓ | ✓ | ✓ |
| | Source 1 - Source 2 Transfer | | | ✓ | ✓ | ✓ | ✓ | |
| | Test Switch, Load/No Load Adjustable | | | ✓ | ✓ | ✓ | ✓ | |
| | Controller Disconnect Switch | 7 | DS | ✓ | ✓ | ✓ | ✓ | ✓ |
| | Bypass Retransfer Time Delays, Source 1-2/2-1, Adjustable | 8 | | ✓ | ✓ | ✓ | ✓ | |
| | Manual Transfer, Source 1-2/2-1 | | · | | | | | ✓ |
| Switches | Preferred Source Selector Switch | 9 | | ✓ | ✓ | ✓ | ✓ | |
| | Auto/Manual Transfer, Source 2 to Source 1 | | S5/P | ✓ | ✓ | ✓ | ✓ | |
| | Auto/Manual Transfer, Source 2-1/1-2 | | | ✓ | ✓ | ✓ | ✓ | |
| | Commit/No Commit Transfer to Source 2 | | S13/P | ✓ | ✓ | ✓ | ✓ | |
| | Transition Mode Selector Switch | 3 | TMS/P | ✓ | ✓ | ✓ | ✓ | |
| | 4 INPUT and 4 OUTPUT | 10 | | ✓ | ✓ | | | ✓ |
| Programmable I/O | 8 INPUT and 8 OUTPUT | 10 | | | | ✓ | | |
| 1/0 | 12 INPUT and 12 OUTPUT | 10 | | | | | √ | |

Application Notes:

- Bypass only
 Utility to Generator Only
 Closed Transition Only
 Standard on gen-utility applications only
 Requires R15 for transfer of ATS away from source, utilizes (1)
 programmable output if only signal to downstream load required

- Delayed Transition only
 Not available if CTAP option selected on ATS
 Automatic switches only
 Not available with load shed option/R15 and R15D
- 10 Refer to Pg. 15
- 11 Can be extended beyond 10 sec (up to 259 min) with customer-supplied 120VAC external input (no extra ZTE hardware required)


ZTE Dimensions and Weights

| Ampere Rating | Poles | _ | NEMA 1 | | We | Application | | | | | |
|-----------------|-------|------------|------------|--------------------------------------------|-----------|-------------|------------|------------|----------|-----------|------------|
| Ampère Ruting | Poles | Height (A) | Width (B) | n (B) Depth (C) Reference Figure Open Type | | NEMA 1 | Notes | | | | |
| 40, 80, 100, | 2, 3 | 46 (117) | 24 (61) | 14 (36) | А | 14 (7) | 120 (55) | 1-7, 11-12 | | | |
| 150, 225 | 4 | 40 (117) | 24 (01) | 24 (61) 14 (36) A 20 (9) | | 126 (57) | 1-7, 11-12 | | | | |
| 260, 400 | 2, 3 | 46 (117) | 24 (61) | 14 (36) | А | 59 (27) | 168 (76) | 1-7, 11-12 | | | |
| 200, 400 | 4 | 40 (117) | 24 (01) | 14 (50) | A | 70 (32) | 180 (82) | 1-7, 11-12 | | | |
| 600 | 2, 3 | 74 (188) | 40 (102) | 10 5 (50) | 10 5 (50) | 10 5 (50) | 19.5 (50) | В | 150 (68) | 410 (186) | 1-8, 11-12 |
| 000 | 4 | 74 (100) | 40 (102) | 19.5 (50) | Б | 180 (82) | 440 (200) | 1-0, 11-12 | | | |
| 800, 1000, 1200 | 2, 3 | 74 (188) | 40 (102) | 19.5 (50) | В | 190 (86) | 460 (209) | 1-8, 11-12 | | | |
| 600, 1000, 1200 | 4 | 74 (100) | 40 (102) | 19.5 (50) | D | 230 (104) | 490 (222) | 1-0, 11-12 | | | |
| 1600, 2000 | 3 | 90 (229) | 35.5 (90) | 48 (122) | С | 345 (156) | 1010 (458) | 1-8, 10-12 | | | |
| 1600, 2000 | 4 | 90 (229) | 33.3 (90) | 40 (122) | C | 450 (204) | 1160 (526) | 1-8, 10-12 | | | |
| 3000 | 3 | 90 (229) | 35.5 (90) | 48 (122) | С | 465 (211) | 1130 (513) | 1-12 | | | |
| 3000 | 4 | 50 (229) | 33.3 (90) | 40 (122) | C | 670 (304) | 1396 (633) | 1-12 | | | |
| 4000 | 3 | 90 (229) | 46.5 (118) | 60 (152) | С | 770 (349) | 1595 (723) | 1-12 | | | |
| 4000 | 4 | 30 (229) | 40.5 (110) | 00 (132) | C | 1025 (465) | 1850 (839) | 1-12 | | | |

Application Notes

- 1. Metric dimensions (cm) and weights (Kg) shown in parenthesis adjacent to English measurements in inches and pounds.
- Includes 1.25" door projection beyond base depth. Allow a minimum of 3" additional depth for projection of handle, light, switches, pushbuttons, etc.
- 3. All dimensions and weights are approximate and subject to change without notice.
- Special enclosures (NEMA 3R, 4, 4X, 12, etc.) dimensions and layout may differ. Consult the GE factory for details.
- Normal and emergency may be ordered inverted on any switch. Consult the GE factory for details.
- Special lug arrangements may require different enclosure dimensions. For certified drawings, contact the GE factory.

- Packing materials must be added to weights shown. Allow 15% additional weight for cartons, skids, crates, etc.
- 8. Add 4" in height for removable lifting lugs.
- 9. Lug adapters for 3000-4000A limits may be staggered length for ease of entrance. Consult the GE factory for details.
- 10. 1600-4000A switches have ventilation louvers on both sides and rear of enclosure.
 Louvers must be clear for airflow with standard cable connections.
- 11. For Delayed and Closed Transition dimensions and weights, consult the appropriate GE mechanical drawing.
- 12. For Bypass/Isolation dimensions and weights, consult the appropriate GE mechanical drawing.

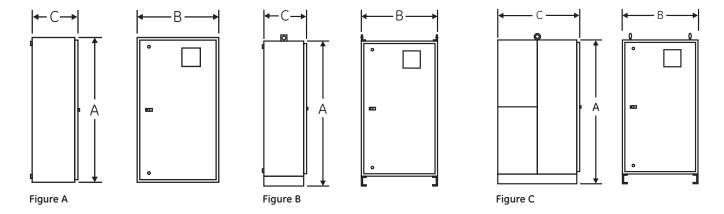

ZTE Power Connection Terminals

AL-CU UL Listed Solderless Screw-Type Terminals for External Power Connections


| Switch Size | | mal, Emergency & Load Terminals | Switch Size | Normal, Emergency & Load Terminals | | | |
|----------------|-----------------|------------------------------------|---------------------------|---------------------------------------|---------------|--|--|
| Amps | Cables/ Pole | Wire Ranges | Amps | Cables/ Pole | Wire Ranges | | |
| 40-80 | 1 | #8 to 3/0 | 600 | 2 | #2 to 600 MCM | | |
| 100, 150 | 1 | #6 to 250 MCM | 800, 1000, 1200 | 4 | #2 to 600 MCM | | |
| 225 | 1 | #4 to 600 MCM | | | | | |
| 260 | 1 | #4 to 600 MCM | 1600, 2000, 3000, 4000 | | * | | |
| 400 | 1 | #4 to 600 MCM | | | | | |

Notes

- Line and load terminals are located in rear and arranged for bus bar connection. Terminal lugs are available as an accessory. Contact the GE factory for more details.
- Special terminal lugs and neutral bars are available at additional cost. Contact the GE factory and advise cable sizes and number of conductors per pole.
- 2. Fully rated neutral provided on 3 phase, 4 wire system.
- Special lug arrangements may require different enclosure dimensions. For certified drawings, contact the GE factory.


Ordering Information

ZTE Model Number Key

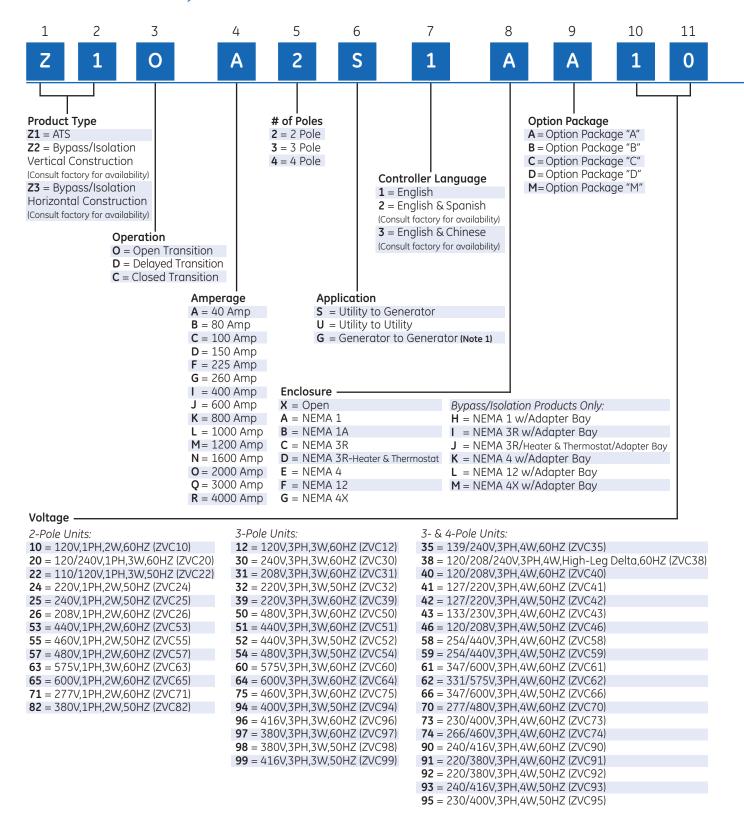

Notes:

1 Please contact the factory for availability

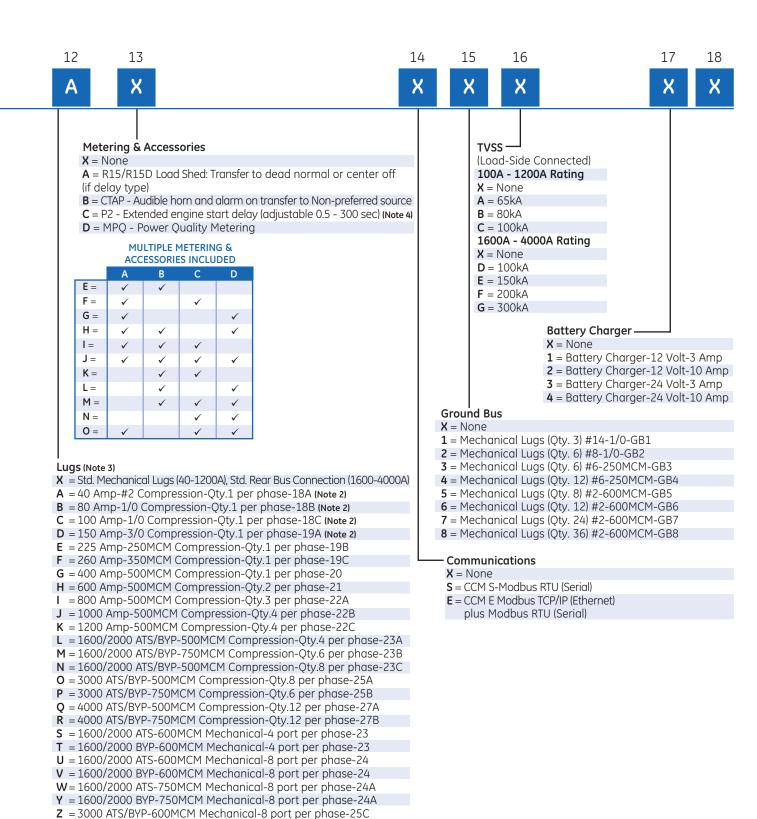

Notes:

2 Compression lugs are not available on ZTE open transition below 225 Amp. If needed, order 225 Amp ZTE with compression lug options A-E.

1 = 3000 ATS/BYP-750MCM Mechanical-8 port per phase-25D 2 = 4000 ATS/BYP-600MCM Mechanical-12 port per phase-26A 3 = 4000 ATS/BYP-750MCM Mechanical-12 port per phase-26B

- 3 Lugs are provided on all three phases (A, B, C) and neutral for three phase, 4-wire voltage configurations
- 4 Can be extended beyond 300 sec (up to 259 min) with customer-supplied 120VAC external input (no extra ZTE hardware required)



Extensive Customer Service and Support

Supported by a worldwide network of factory-trained Authorized Service Centers, our Technical Service Representatives can provide you with field service, equipment parts and preventive maintenance.

Because emergency power systems are required to operate under the most adverse circumstances, site personnel may be called upon at any time to make decisions regarding the operation of the system, therefore training of these personnel is critical to the future of any installation.

GE offers a variety of training options including on-site classes for project personnel, factory instruction on your equipment prior to shipment and service schools covering transfer switches and switchgear systems.



Product Overview

When you purchase emergency power equipment, reliability and quality are a necessity. GE is committed to providing the highest level of quality demanded by the industry. Our complete product line will allow you to specify a total power management system while maintaining overall compatibility and the most comprehensive warranty in the industry.





All team members at GE are aware of the critical situations in which our products are called upon to perform. With that understanding comes an obligation beyond merely fulfilling an order or turning out a product. Serving that obligation is our mission at GE.

GE's team works with you from the first phone call through completed start-up. Then, working hand in hand with the consulting engineer, the contractor and the facility owner/operator, we'll ensure that the system fulfills both current and future needs.

"Commitment to our customer" has been GE's driving force for more than 100 years in the power control industry. This same sense of purpose and responsibility will continue as we address future power control challenges.



