
Shirko

WCS-13A

Dual unit functionality within One unit



2-unit functions, **One** 48²mm unit integration **Controller + Timer**

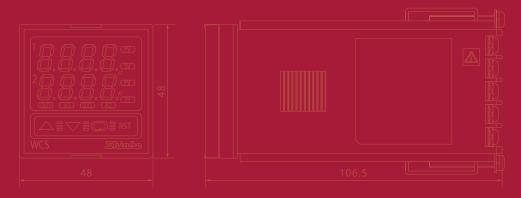


Dual controller

Reduce mounting space greatly via one unit usage.



1 User defined combination


Controller+Timer, Dual controller

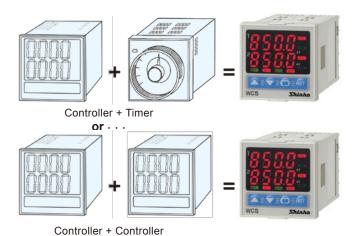

2 PV difference input function


Temperature difference between 2 points can be set and constantly maintained.


The heat source (heater) is controlled to maintain a constant temperature difference between 2 points(A, B). (e.g.) No condensation, defogging.

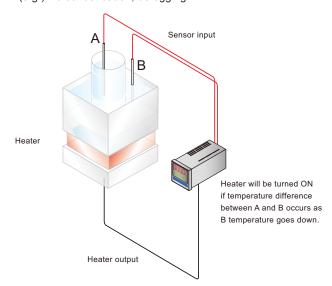

3 Save mounting space

As 2-unit functions can be used with a one unit, the mounting space can be reduced by half.

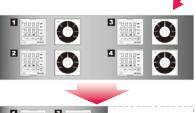

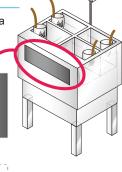



4 CH2 function

The following functions are selectable.

(If CH2 is of Multi-range input (-M), DC voltage input (-V) or PV difference input (-S) spec]

- CH2 controller (2ch controller)
- CH1 output 2 (1-input, 2-output)
- CH1 cooling output (1ch Heating/Cooling control output)
- CH1 transmission output (Effective when CH2 is DC current output type)
- CH1 timer

[If CH2 is based on delay timer (-T) spec]

- Delay timer 1
- Delay timer 2

5 CH1 and CH2 Input/Output selection

Input / Output type can be selected for CH1 and CH2 respectively. (If CH2 is based on delay timer (-T) spec, CH2 output is not available)

[Input]

Multi-range input:

Thermocouple, RTD, DC current and DC voltage (0 to 1 V DC) can be selected by keypad.

- DC voltage input:
 - 0 to 5V DC, 1 to 5V DC or 0 to 10V DC can be selected by keypad.
- Delay timer (*)
- PV difference input: CH1 PV-CH2 PV=PV, Control is performed using the PV. (*)
 - (*): Available for CH2

[Control output]

- Relay contact: 1a
- Non-contact voltage (for SSR drive): 12V DC±15%
- DC current: 4 to 20mA DC

Model

WCS - 1 3	Α -	- 🔲		/		\Box , [Series name : WCS-13A (W48×H48mm)
Control action 3								PID
Alarm output	Α							Alarm type can be selected by keypad. (*1)
		R						Relay contact: 1a
CH1 control output		S						Non-contact voltage (for SSR drive) : 12V DC±15%
		Α						DC current: 4 to 20mA DC
			R					Relay contact: 1a
CH2 control output			S					Non-contact voltage (for SSR drive) : 12V DC±15%
CH2 control output			Α					DC current: 4 to 20mA DC
			0					No control output as CH2 input is based on delay timer spec
CH1 input				M				Multi-range input (*2)
Citt iliput				V				DC voltage input (0 to 5V DC, 1 to 5V DC, 0 to 10V DC) (*3)
					M			Multi-range input (2ch controller) (*2)
CH2 input		V				DC voltage input (0 to 5V DC, 1 to 5V DC, 0 to 10V DC) (2ch controller) (*3)		
		Т				Delay timer (1ch controller + Timer))		
		S			PV difference input: CH1 PV-CH2 PV=PV, Control is performed using the PV. (1ch controller)			
Supply voltage					100 to 240V AC (standard)			
oupply voltage						1		24V AC/DC (*4)
Option				BK	Color: Black			
Орион			TC	Terminal cover				

- (*1): Alarm types (9 types and No alarm action) and Energized/De-energized can be selected by keypad.
- (*2): Thermocouple, RTD, DC current, and DC voltage (only 0 to 1 V DC) can be selected by keypad. (*3): 0 to 5V DC, 1 to 5V DC or 0 to 10V DC can be selected by keypad.
- (*4): Supply voltage 100 to 240V AC is standard. When ordering 24V AC/DC, enter "1" after the input code.

■ Input rated range

• Full multi-range input

Input range
-200 to 1370 °C -320 to 2500 °F
-199.9 to 400.0 °C
-200 to 1000 °C
0 to 1760 °C 0 to 3200 °F
0 to 1760 °C 0 to 3200 °F
0 to 1820 °C 0 to 3300 °F
-200 to 800 °C
-199.9 to 400.0 °C
-200 to 1300 °C
0 to 1390 °C 0 to 2500 °F
26) 0 to 2315 °C 0 to 4200 °F

Input	type	Input range		
	Pt100	-199.9 to 850.0 °C	-199.9 to 999.9 °F	
RTD	1 1100	-200 to 850 °C	-300 to 1500 °F	
KID	JPt100	-199.9 to 500.0 °C	-199.9 to 900.0 °F	
	JPITOU	-200 to 500 °C	-300 to 900 °F	
DC current	4 to 20mA DC			
DC current	0 to 20mA DC	-1999 to 9999		
DC voltage	0 to 1V DC			

• DC voltage input

Input	type	Input range
	0 to 5V DC	-1999 to 9999
DC voltage	1 to 5V DC	
	0 to 10V DC	

- For the DC current and voltage input, scaling and decimal point place change are possible.
 For DC current input, connect 50Ω shunt resistor (sold separately) between input terminals.

■ Standard specifications

Display	CH1 PV/SV display Red 4 digits, Character size: 8×4mm (H x W) (The same as the CH2 PV/SV display)							
	Thermocouple K, J, R, S, B, E, T, N, PL- II , C (W/Re5-26) External resistance: 100Ω or less, however, for B input, 40Ω or less RTD							
Input	DC voltage 0 to 1V DC: Input impedance: $1M\Omega$ or more Allowable input voltage: 5V DC or less, Allowable signal source resistance: $2k\Omega$ or less 0 to 5V DC, 1 to 5V DC, 0 to 10V DC: Input impedance: $100k\Omega$ or more, Allowable input voltage: $15V$ DC or less Allowable signal source resistance: 100Ω or less							
Accuracy (Setting · Indication)	Thermocouple							
Input sampling period	0.5sec							
CH1 timer function	Time accuracy: Within ±0.5% of the setting time							
Control output (OUT)	Relay contact1a, control capacity: 3A 250V AC(resistive load), 1A 250V AC(inductive load cos ϕ =0.4), Electric life: 100,000 cycles Non-contact voltage 12V DC ±15% Max. 40mA DC (short circuit protected) DC current							
Control action	The following actions can be selected by keypad. (Default: PID) PID (with auto-tuning function), PI, PD (with auto-reset function), P (with auto-reset function), ON/OFF OUT1 proportional band (P) 0 to 1000°C (2000°F), 0.0 to 999.9°C (°F), or 0.0 to 100.0% (ON/OFF action when set to 0 or 0.0) Integral time (I) 0 to 1000sec (Off when set to 0) Derivative time (D) 0 to 300sec (Off when set to 0) ARW 0 to 100% Proportional cycle 1 to 100% ON/OFF action hysteresis 0.1 to 100.0°C (°F) or 1 to 1000 Output high limit 0 to 100% (DC current: -5 to 105%) Output low limit 0 to 100% (DC current: -5 to 105%)							
Alarm output	Alarm types can be selected by keypad. (Default: No alarm action) High limit alarm (Deviation setting) Setting range: -(Input span) to Input span High/Low limits alarm (Deviation setting) Setting range: 0 to Input span High/Low limit range alarm (Deviation setting) Setting range: 0 to Input span Process high alarm Setting range: 1 put range low limit to Input range high limit value Setting range: Input range low limit to Input range high limit value High limit alarm with standby (Deviation setting) Setting range: -(Input span) to Input span Low limits alarm with standby (Deviation setting) Setting range: -(Input span) to Input span For DC current or voltage input, the input span is the same as the scaling span. For DC current or voltage input, the input range low (or high) limit value is the same as the scaling span. For DC current or Voltage input, the input range low (or high) limit value is the same as the scaling low (or high) limit value. Setting accuracy The same as the indication accuracy Action							
Alarm 2 output	If CH1 cooling output is selected during CH2 function selection, CH1 will be OUT1 (Heating output) and CH2 will be OUT2 (Cooling output). OUT2 proportional band							
	Control output Refer to the "Control output".							
Delay timer	Between DI terminals Open: OFF, Between DI terminals Closed: ON, Circuit current when closed: 6mA							
Delay timer Transmission output	Between DI terminals Open: OFF, Between DI terminals Closed: ON, Circuit current when closed: 6mA When CH1 transmission output (effective when CH2 is DC current output type) is selected during CH2 function selection, the value outputs in current, converting the value (PV, SV or MV) to an analog signal every 0.5 seconds. Resolution: 1/8192, Current: 4 to 20mA DC, Load resistance: Max. 550 Ω, Output accuracy: Within ±0.3% of Transmission output scaling span.							
·	Between DI terminals Open: OFF, Between DI terminals Closed: ON, Circuit current when closed: 6mA When CH1 transmission output (effective when CH2 is DC current output type) is selected during CH2 function selection, the value outputs in current, converting the value (PV, SV or MV) to an analog signal every 0.5 seconds.							
Transmission output	Between DI terminals Open: OFF, Between DI terminals Closed: ON, Circuit current when closed: 6mA When CH1 transmission output (effective when CH2 is DC current output type) is selected during CH2 function selection, the value outputs in current, converting the value (PV, SV or MV) to an analog signal every 0.5 seconds. Resolution: 1/8192, Current: 4 to 20mA DC, Load resistance: Max. 550 Ω, Output accuracy: Within ±0.3% of Transmission output scaling span.							
Transmission output Supply voltage	Between DI terminals Open: OFF, Between DI terminals Closed: ON, Circuit current when closed: 6mA When CH1 transmission output (effective when CH2 is DC current output type) is selected during CH2 function selection, the value outputs in current, converting the value (PV, SV or MV) to an analog signal every 0.5 seconds. Resolution: 1/8192, Current: 4 to 20mA DC, Load resistance: Max. 550 Ω, Output accuracy: Within ±0.3% of Transmission output scaling span. 100 to 240V AC 50/60Hz, 24V AC/DC 50/60Hz Allowable voltage fluctuation range: 85 to 264V AC, 20 to 28V AC/DC							
Transmission output Supply voltage Power consumption	Between DI terminals Open: OFF, Between DI terminals Closed: ON, Circuit current when closed: 6mA When CH1 transmission output (effective when CH2 is DC current output type) is selected during CH2 function selection, the value outputs in current, converting the value (PV, SV or MV) to an analog signal every 0.5 seconds. Resolution: 1/8192, Current: 4 to 20mA DC, Load resistance: Max. 550 Ω, Output accuracy: Within ±0.3% of Transmission output scaling span. 100 to 240V AC 50/60Hz, 24V AC/DC 50/60Hz Allowable voltage fluctuation range: 85 to 264V AC, 20 to 28V AC/DC Approx. 8 VA							
Transmission output Supply voltage Power consumption Insulation resistance	Between DI terminals Open: OFF, Between DI terminals Closed: ON, Circuit current when closed: 6mA When CH1 transmission output (effective when CH2 is DC current output type) is selected during CH2 function selection, the value outputs in current, converting the value (PV, SV or MV) to an analog signal every 0.5 seconds. Resolution: 1/8192, Current: 4 to 20mA DC, Load resistance: Max. 550 Ω, Output accuracy: Within ±0.3% of Transmission output scaling span. 100 to 240V AC 50/60Hz, 24V AC/DC 50/60Hz Allowable voltage fluctuation range: 85 to 264V AC, 20 to 28V AC/DC Approx. 8 VA 10MΩ or more, at 500V DC							
Transmission output Supply voltage Power consumption Insulation resistance Dielectric strength	Between DI terminals Open: OFF, Between DI terminals Closed: ON, Circuit current when closed: 6mA When CH1 transmission output (effective when CH2 is DC current output type) is selected during CH2 function selection, the value outputs in current, converting the value (PV, SV or MV) to an analog signal every 0.5 seconds. Resolution: 1/8192, Current: 4 to 20mA DC, Load resistance: Max. 550 Ω, Output accuracy: Within ±0.3% of Transmission output scaling span. 100 to 240V AC 50/60Hz, 24V AC/DC 50/60Hz Allowable voltage fluctuation range: 85 to 264V AC, 20 to 28V AC/DC Approx. 8 VA 10MΩ or more, at 500V DC Between Input terminal-Power terminal, Between Output terminal-Power terminal 1.5kV AC for 1 minute							

Setting Sheet key input

Dimensions, Weight External dimensions: W48×H48×D106.5mm Weight: Approx. 180g

Sensor correction, Set value lock, Power failure countermeasure, Self-diagnosis, Automatic cold junction temperature compensation (only for thermocouple), Attached functions

Burnout (overscale), Indication range, Control range, Warm-up indication, CH2 function selection

Accessories sold separately $50\,\Omega$ Shunt resistor (for DC current input)

Optional specifications


Please specify options according to users' needs. When ordering, specify an option code to be applied.

Front panel frame and case: Black Color Black [BK]

Terminal cover [TC]

Electrical shock protection cover Be sure to use this terminal cover by adding this option if operator may touch the back of the controller while running the controller.


■ External dimensions (Scale : mm)

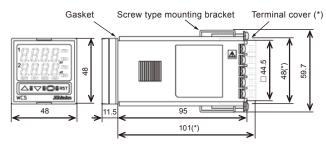

(*): When terminal cover is used

■ Terminal arrangement

· If CH2 is of Multi-range input (-M), DC voltage input (-V) or PV difference input (-S) spec

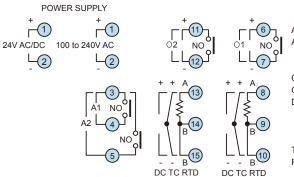

A1 : CH1 alarm output


: CH2 alarm output [Not available if CH2 is based on PV difference input (-S) spec1

O1 : CH1 control output O2 : CH2 control output

: CH1, CH2 DC current, voltage input (For DC current input, connect 50 Ω shunt resistor between input terminals.)

TC : CH1, CH2 thermocouple input RTD: CH1, CH2 resistance temperature detector input

· If CH2 is based on delay timer (-T) spec POWER SUPPLY

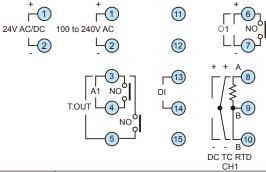

: CH1 alarm output Α1 T.OUT: Timer output : CH1 control output 01

DI : Digital input

DC


CH1 DC current, voltage input (For DC current input, connect 50 Ω shunt resistor between input terminals.)


TC : CH1 thermocouple input

RTD : CH1 resistance temperature

detector input

■ Panel Cutout (Scale: mm)

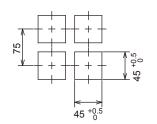

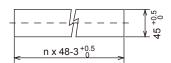

Lateral close mounting n: Number of units mounted




!\ Caution

If lateral close mounting is used for the controller, IP66 specification (Dust-proof/Drip-proof) may be compromised, and all warranties will

■ Solderless terminal

Use a solderless terminal with an insulation sleeve in which the M3 screw fits. Tightening torque should be approx. 0.63N·m.

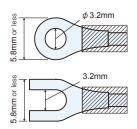



Caution

- · This controller does not have a built-in power switch, circuit breaker or fuse.
- It is necessary to install them near the controller.
- For a 24V AC/DC power source, do not confuse polarity when using direct current (DC).



- To ensure safe and correct use, thoroughly read and understand the manual before using this instrument
- This instrument is intended to be used for industrial machinery, machine tools and measuring equipment. Verify correct usage after consulting purpose of use with our agency or main office.

 (Never use this instrument for medical purposes with which human lives are involved.)
- External protection devices such as protection equipment against excessive temperature rise, etc. must be installed. as malfunction of this product could result in serious damage to the system or injury to personnel. Also proper periodic maintenance is required.
- This instrument must be used under the conditions and environment described in the manual, Shinko Technos Co., Ltd. does not accept liability for any injury, loss of life or damage occurring due to the instrument being used under conditions not otherwise stated in this manual.
- This catalog is as of February 2008 and it's contents are subject to change without notice.
- If you have any inpuirles, please consult us or our agency.

Caution with respect to Export Trade Control Ordinance

To avoid this instrument from being used as a component in, or as being utilized in the manufacture of weapons of mass destruction (i.e. military applications, military equipment, etc.), please investigate the end users and the final use of this instrument. In the case of resale, ensure that this instrument is not illegally exported.



SHINKO TECHNOS CO., LTD. **OVERSEAS DIVISION**

Reg. Office: 2-5-1, Senbahigashi, Minoo, osaka, 562-0035, Japan

Tel : 81-72-727-6100 Fax : 81-72-727-7006

URL : http://www.shinko-technos.co.jp : overseas@shinko-technos.co.jp E-mail